




PLOW LIFT STRAP KIT

DOWNLOAD MULTILINGUAL
USER MANUAL

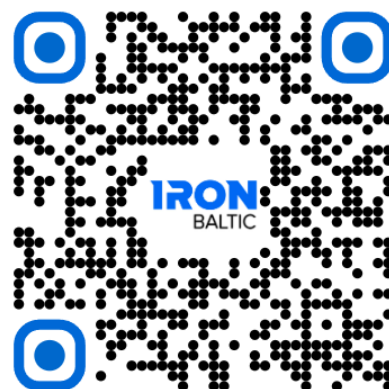

code.ironbaltic.com/u/0KygdzgE

Code 14.11300

Version 27082026



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Lifting strap	OT.37.01.010	1
2	Winch fairlead (large roller)	OT.13.02.020	1

FITTING INSTRUCTIONS


Step 1

Remove the old cable/rope from the winch. NB: Remember the wire/rope spooling direction!



Step 2

Check the winch rope attachment hole to see if the new rope fits; if necessary, unravel the end of the rope to make it narrower. It is recommended to secure the end of the rope with tape afterwards.

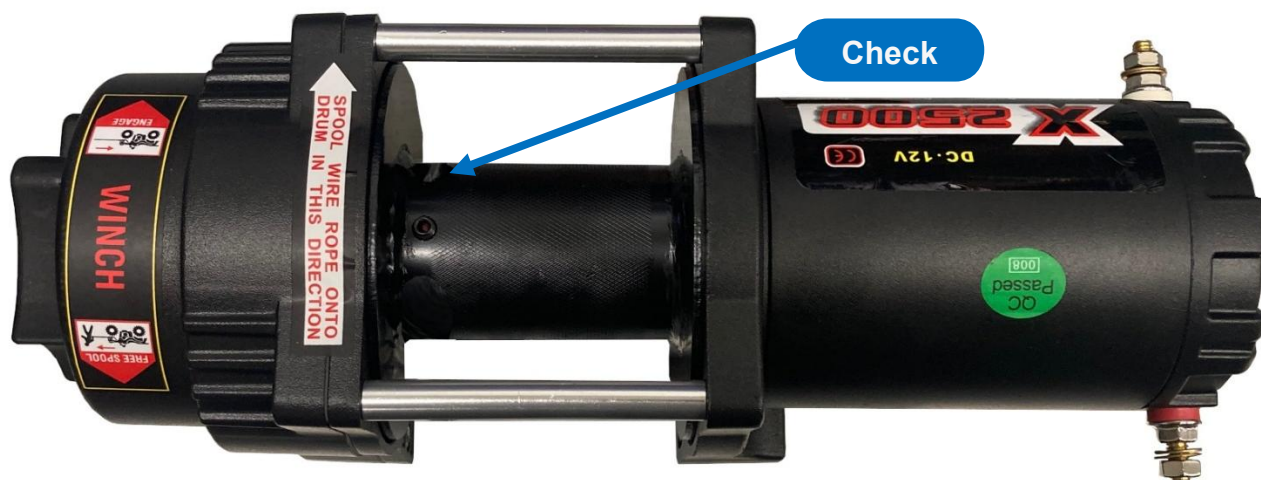

I



Thin out

II




Tape the end

III



Step 3

Attach the end of the new rope to the winch. NB! Ensure that the winding direction remains the same as that of the old rope/cable.

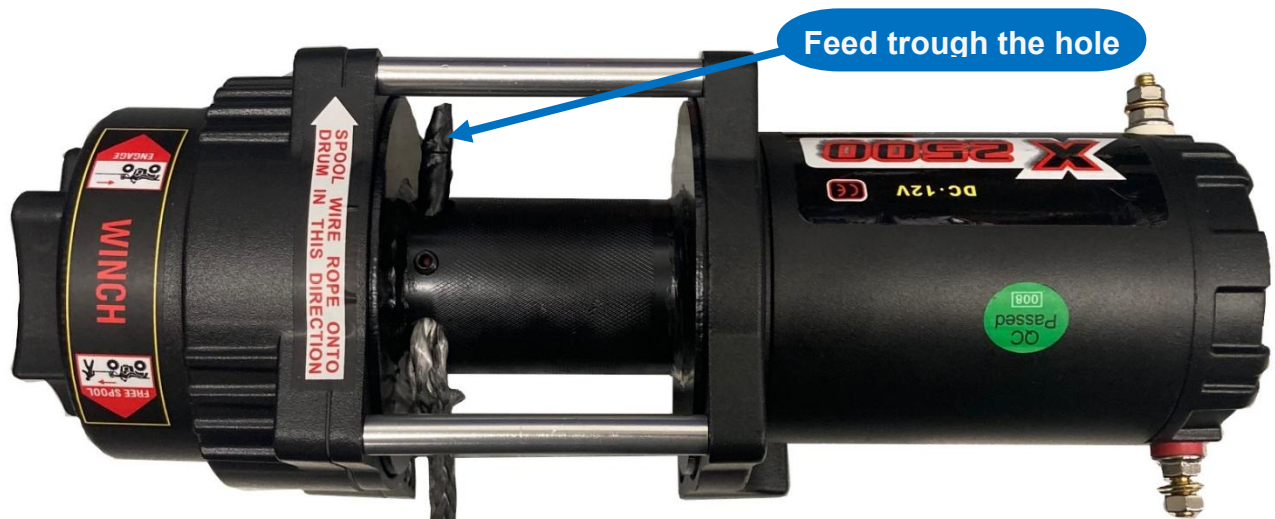

Step 4

Wind the rope (Pos. 1) onto the winch and mount the roller (Pos. 2) to the ATV/UTV. NB! The larger roller must be positioned at the bottom.

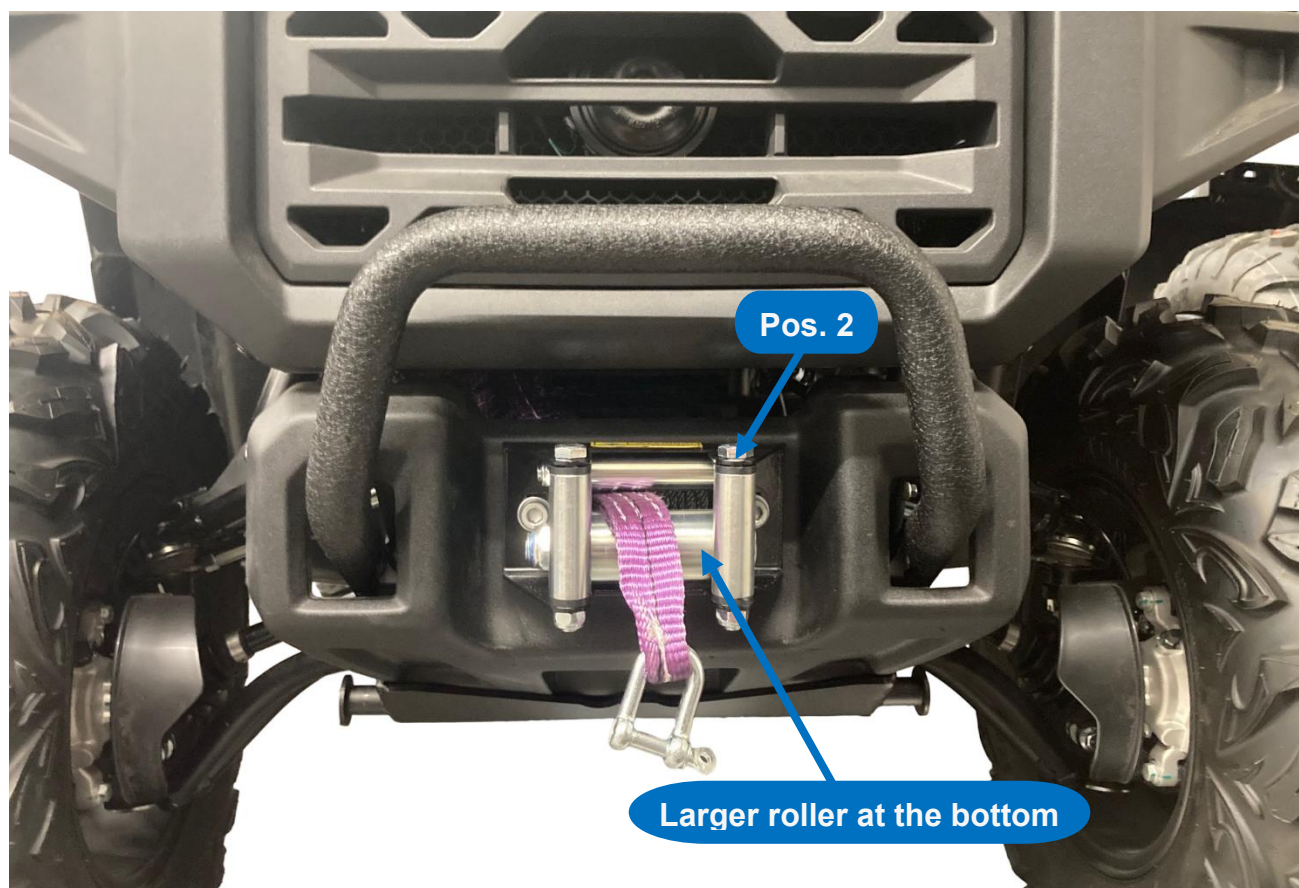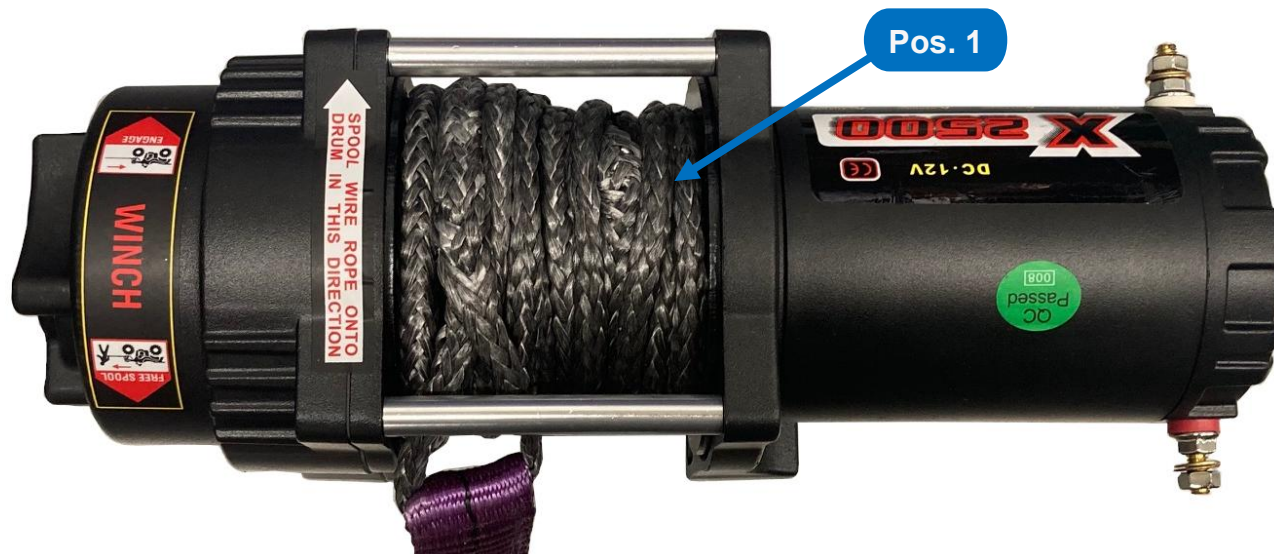

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

