



LAND ROLLER SUPPORT WHEELS

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/vuyMjwvo

Code 57.2050

Version 02012024




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Wheel holder right	57.2051K	1
2	Wheel holder left	57.2052K	1
3	Wheel 22x11x8	OT.10.03.010	2
4	Tube cap 60x40	OT.10.07.064	4
5	Wheel bolt	OT.02.09.010	8
6	Bolt M16x140 DIN931	OT.02.01.163	4
7	Washer M16 DIN125	OT.04.01.060	8
8	Nyloc nut M16 DIN985	OT.03.02.070	4

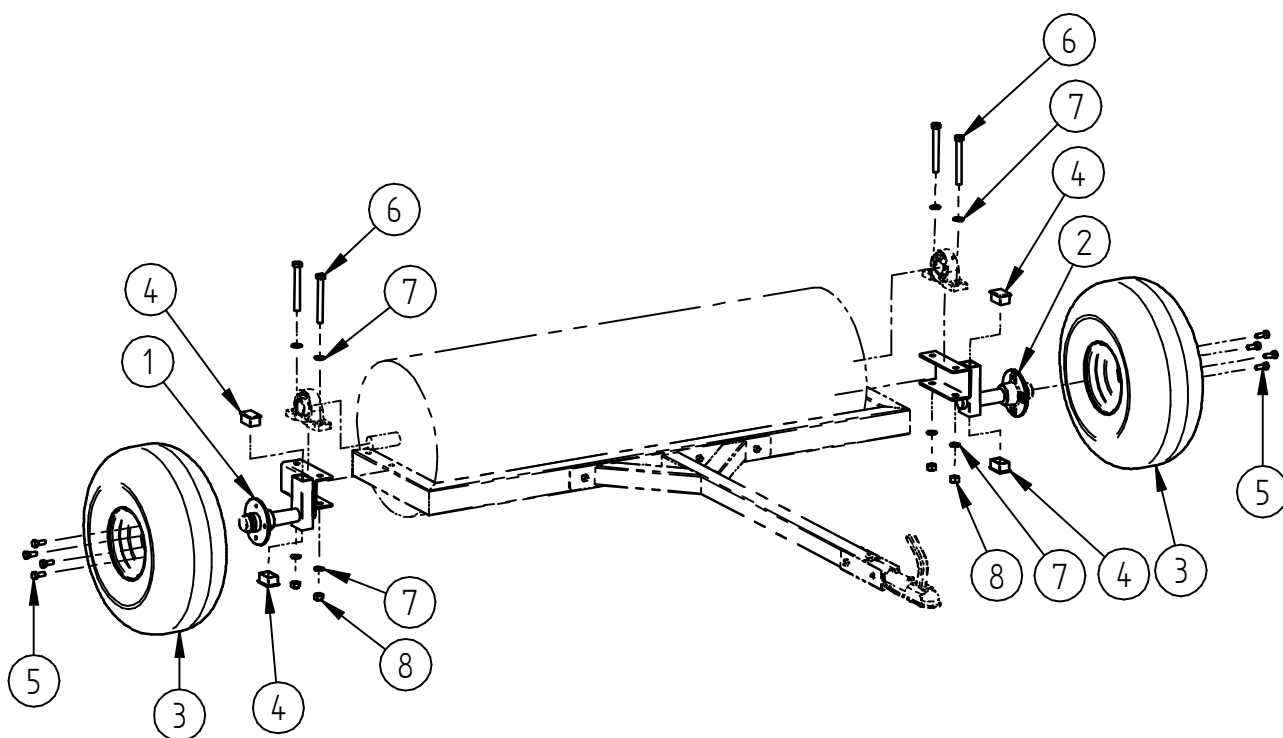

FITTING INSTRUCTIONS





Step 1

Remove land roller original bolts.

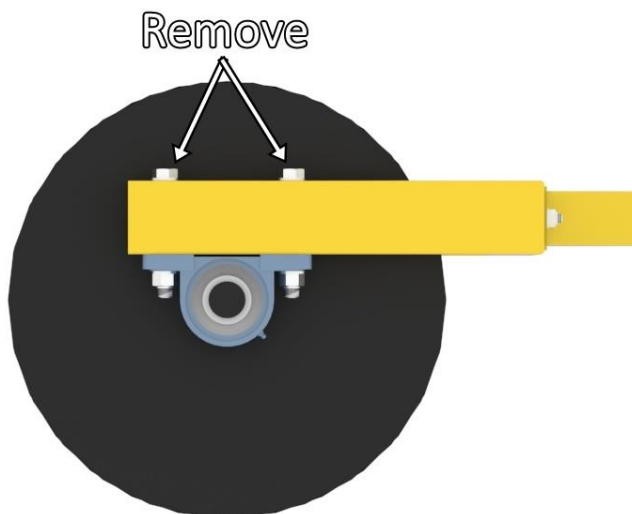


Step 2

Install support wheel holders (Pos.1 and Pos.2). Use M16x140 bolts (Pos.6), M16 washers (Pos.7) and M16 nyloc nuts (Pos.8).
NB! With this step it's recommended to proceed with two people, to prevent injuries to people and to the product.

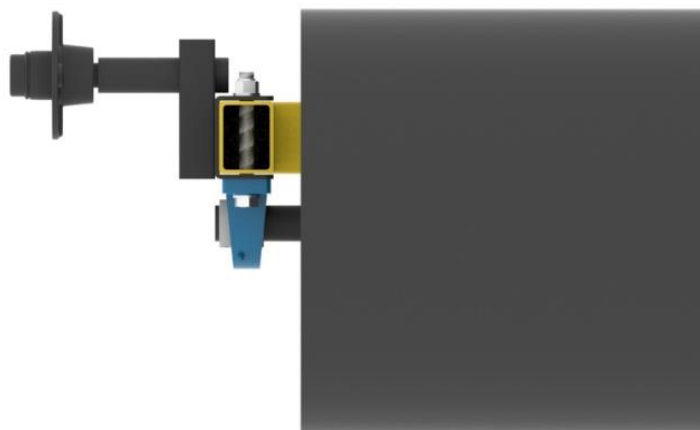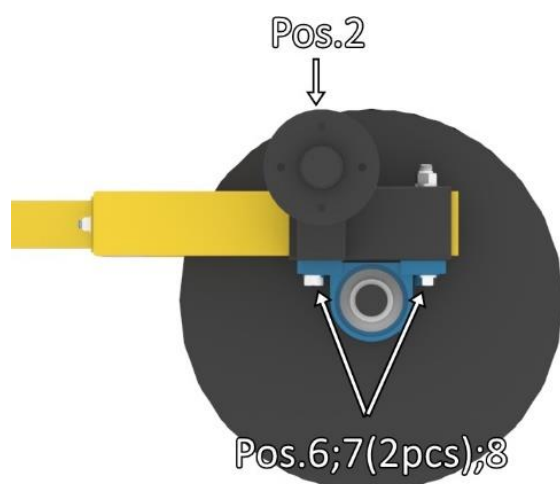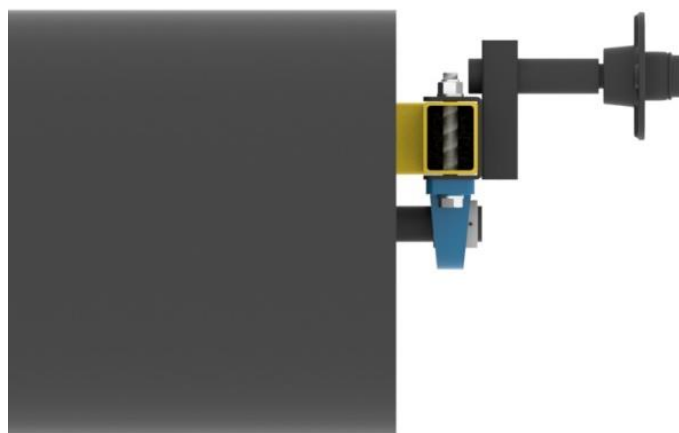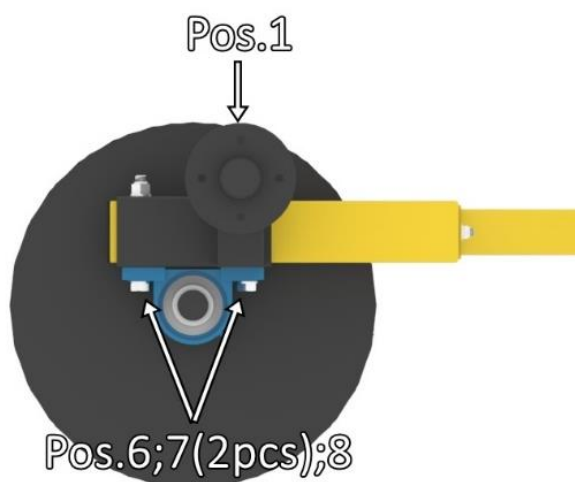

Step 3

Install wheels (Pos.3). Use wheel bolts (Pos.5).

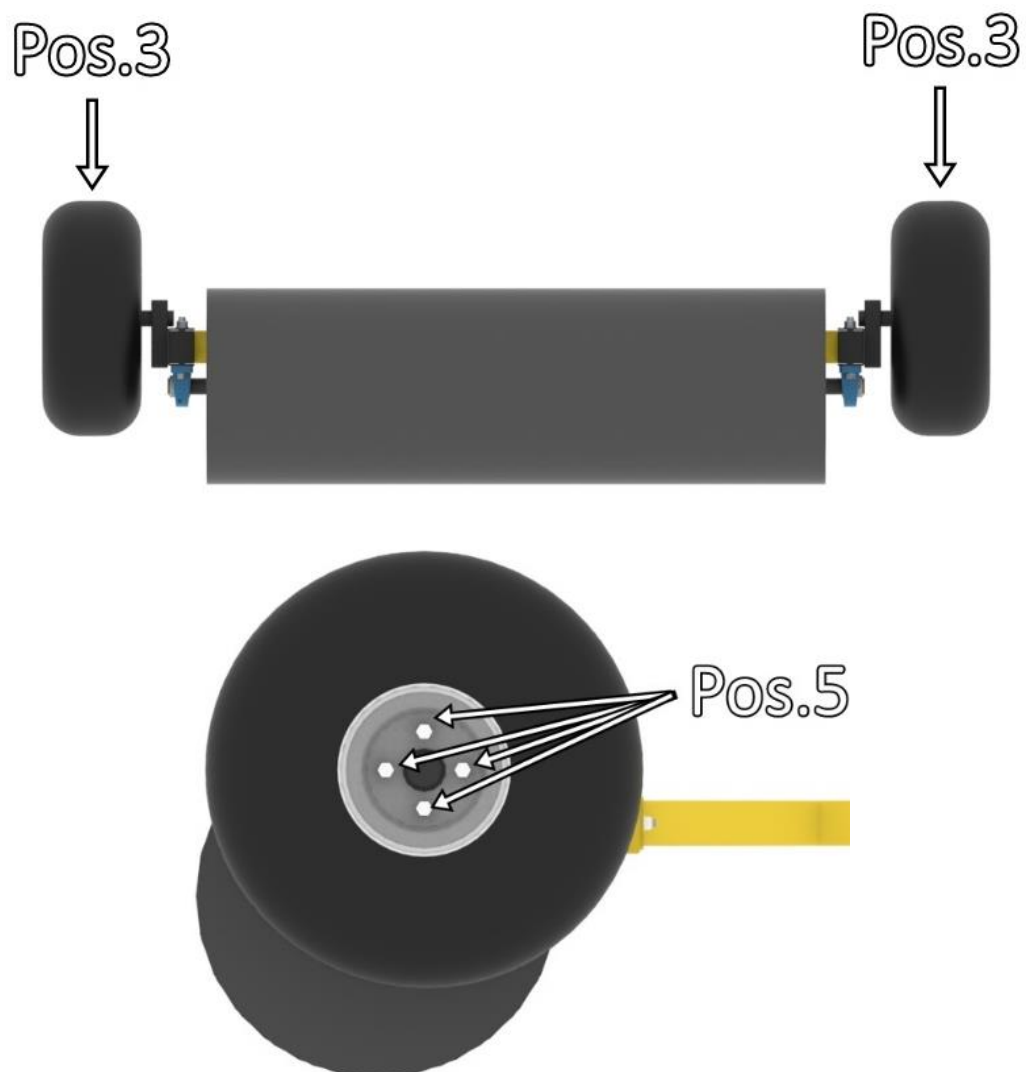

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

