


CLUTCH TOOL

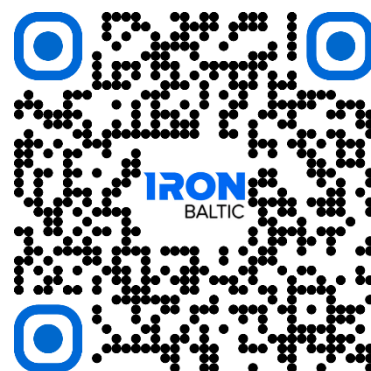

<https://code.ironbaltic.com/u/yj1hz00o>

CFMOTO

CFORCE G3 850/1000

Code 80.10600

Version 06032026_Rev01




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Primary holder	80.10601	1
2	Secondary holder	80.10602	1
3	Bolt M8x20 DIN 933	OT.02.05.015	3
4	Bolt M6x20 DIN603	OT.02.02.180	2
5	Washer Ø6/15 SFS 3738	OT.04.03.020	2
6	Nut M6 Nyloc	OT.03.02.030	2

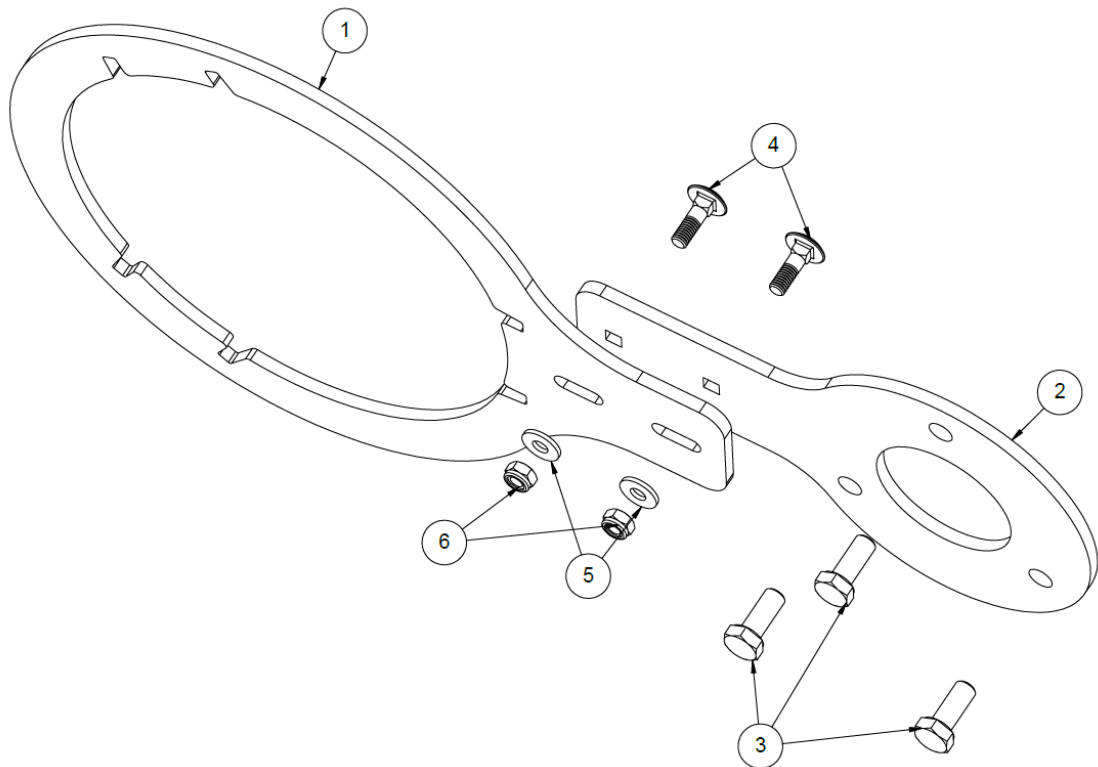

FITTING INSTRUCTIONS

Step 1

Assemble clutch holding tool. Choose length needed for your ATV clutch. To get the best fit, place the clutch holder in place, like shown in Step 2. Tighten bolts on Pos. 3 followed tightenin of Pos.6 nuts.

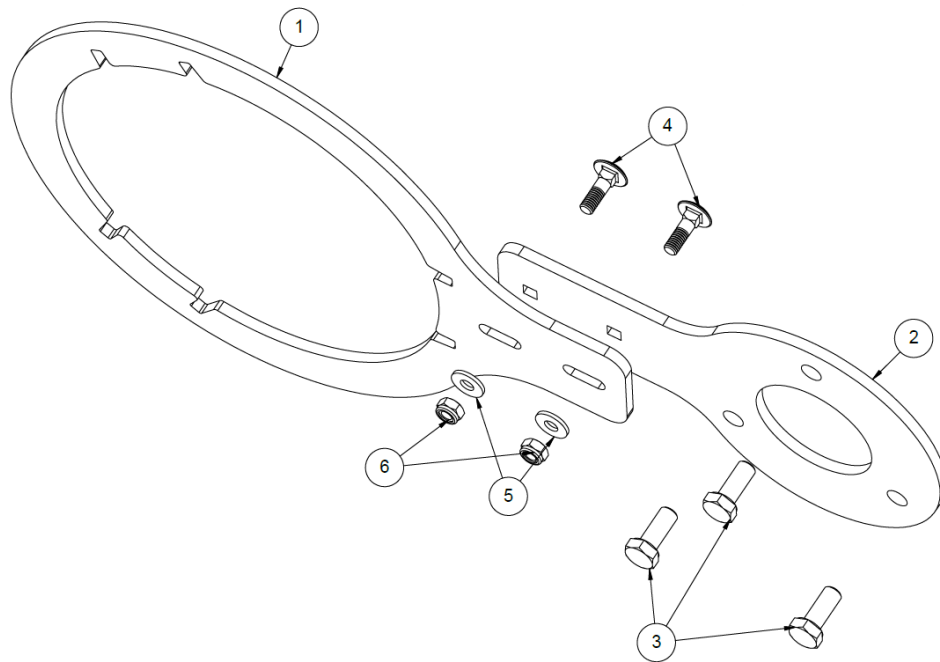

Step 2

Place the holder on top of the clutch basket.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

