



DOWNLOAD MULTILINGUAL
USER MANUAL



<https://code.ironbaltic.com/u/vjqnfygv>

ALUMINIUM SKID PLATE

LINHAI

LANDFORCE 550L/650L/650L PRO (2025+)

Code 02.36700

Version Rev01 (06042026)



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to
Iron Baltic sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle skid plate	02.36701	1
2	Front skid plate	02.36702K	1
3	Rear skidplate	02.36703K	1
4	Right side skid plate	02.36704K	1
5	Left side skidplate	02.36705K	1
6	FR A-arm protector	02.36706	1
7	FL A-arm protector	02.36707	1
8	RL A-arm protector	02.36708	1
9	RR A-arm protector	02.36709	1
10	Distance	02.36710	4
11	Connector plate	02.5006	4
12	Connector plate 10°	02.8312	6
13	Clamp	02.5709	2
14	Concave washer	14.503	54
15	Bolt M6x35 DIN 933	OT.02.02.090	2
16	Bolt M6x30 DIN 933	OT.02.02.080	2
17	Bolt M6x20 DIN 933	OT.02.02.060	6
18	Bolt M6x16 DIN 933	OT.02.02.050	36
19	Bolt M6x8 DIN 933	OT.02.02.028	8
20	Washer Ø8/24 DIN9021	OT.04.02.040	2
21	Washer Ø6/15 SFS 3738	OT.04.03.020	54
22	Nut M6 Nyloc DIN985	OT.03.02.030	2



TOOLS REQUIRED FOR INSTALLATION:

- Torx wrench T27
- Socket wrench 10 mm
- Spanner 10 mm



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**



NB!

Designing the skid plate, original/factory tires were taken into consideration!



550L - Front: 25x8-12. Rear: 25x10-12.

650L/650L PRO - Front: AT26x9-14. Rear: AT26x11-14



NB!

All pictures in this manual are for illustration purposes only and may differ from real the real product due to the changes made to the product during improvements!

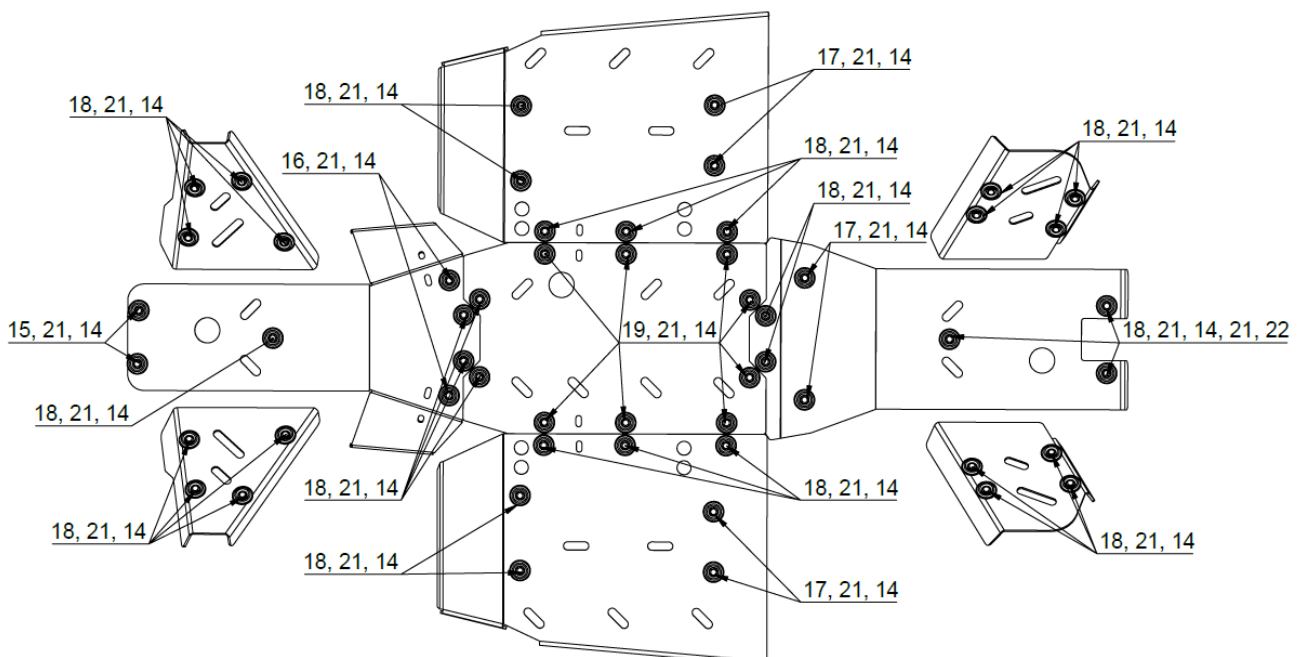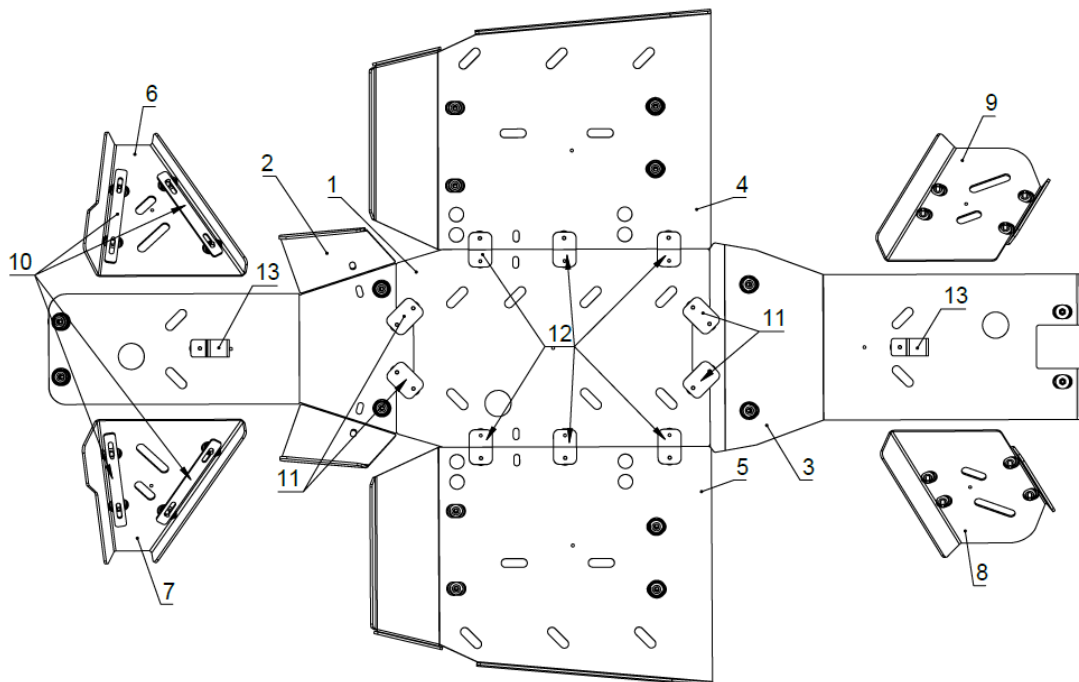

FITTING INSTRUCTIONS


Step 1

Remove all original bottom plastics.





Step 2

Fit the rear A-arm protectors (Pos.8 & 9). Use bolts M6x16 (Pos. 18), concave washers (Pos. 14) and Ø6/15 washers (Pos.21)

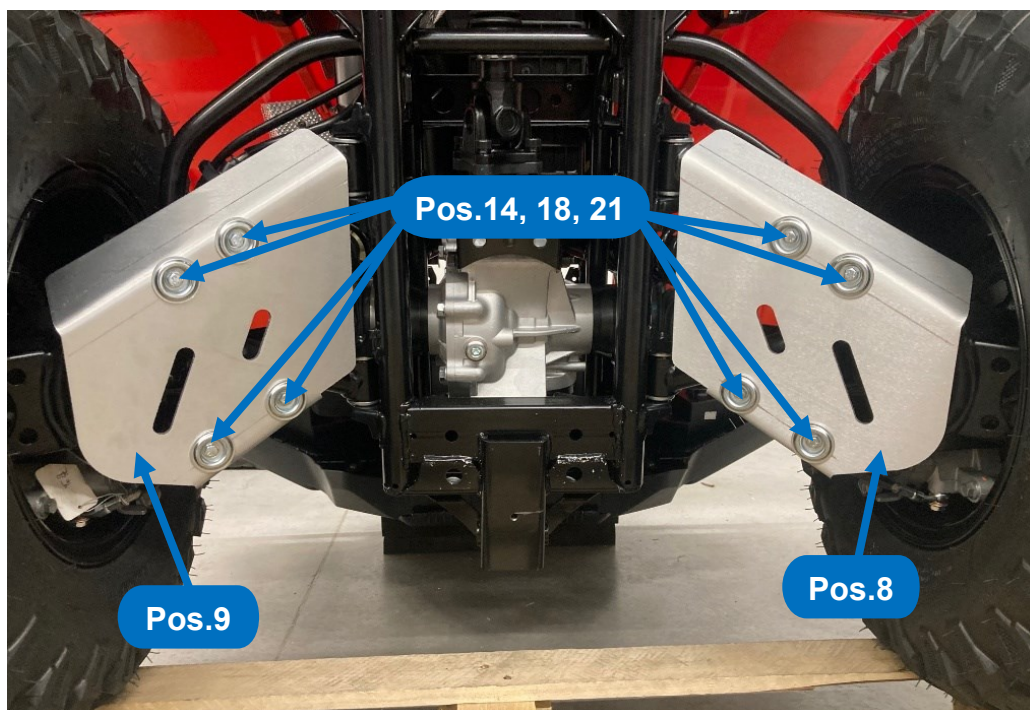

Step 3

Fit the from A-arm protectors (Pos.6 & 7) **NB! Pos.10 has to be fitted between the A-arm and the protector!** Use bolts M6x16 (Pos. 18), concave washers (Pos. 14) and Ø6/15 washers (Pos.21)

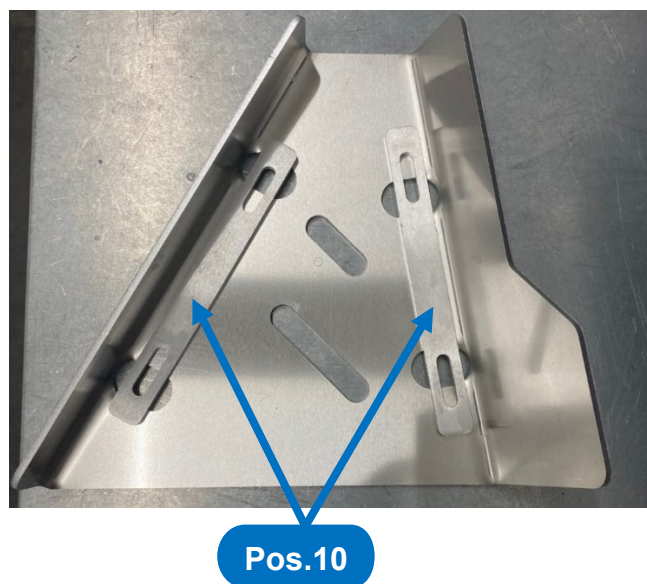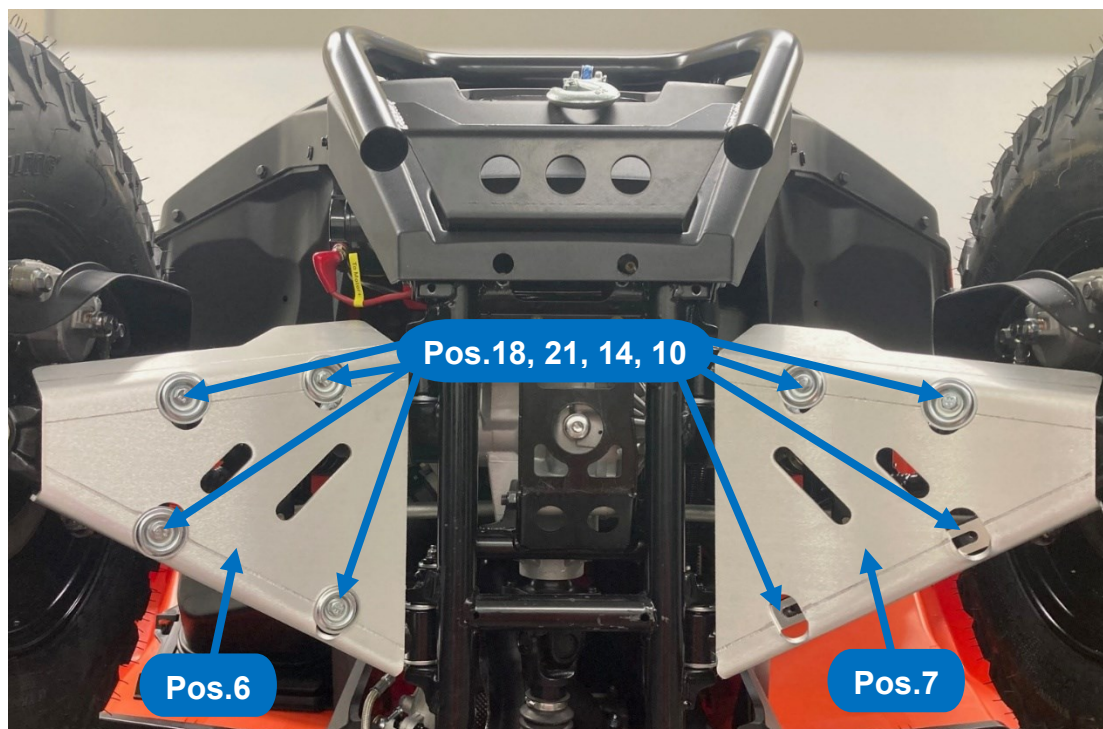



Step 4

Loosen the front bar bolts. **NB! The bolts do not need to be removed completely!**



Step 5

Fit the front skid plate (Pos.2) with connector plates (Pos.11). Use fasteners marked on the drawing. M6x35 (Pos. 15) M6x30 (Pos. 16) M6x16 (Pos. 18), concave washers (Pos. 14) and Ø6/15 washers (Pos.21). For the middle bolt use clamp (Pos. 13)

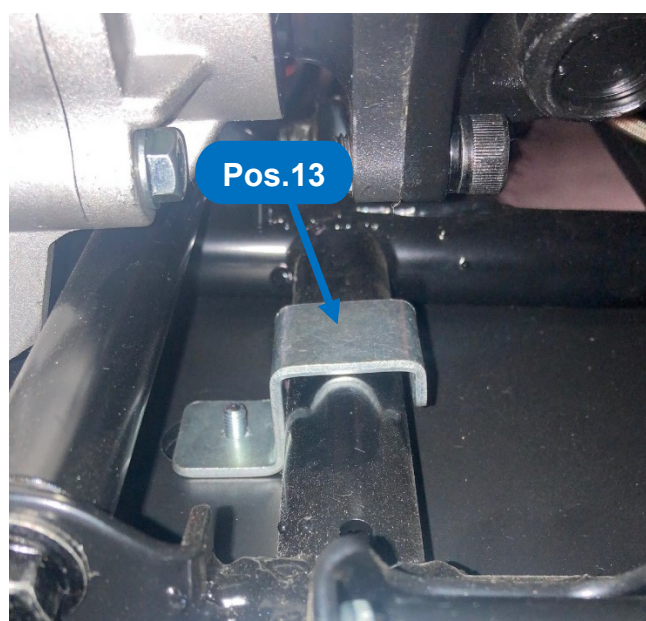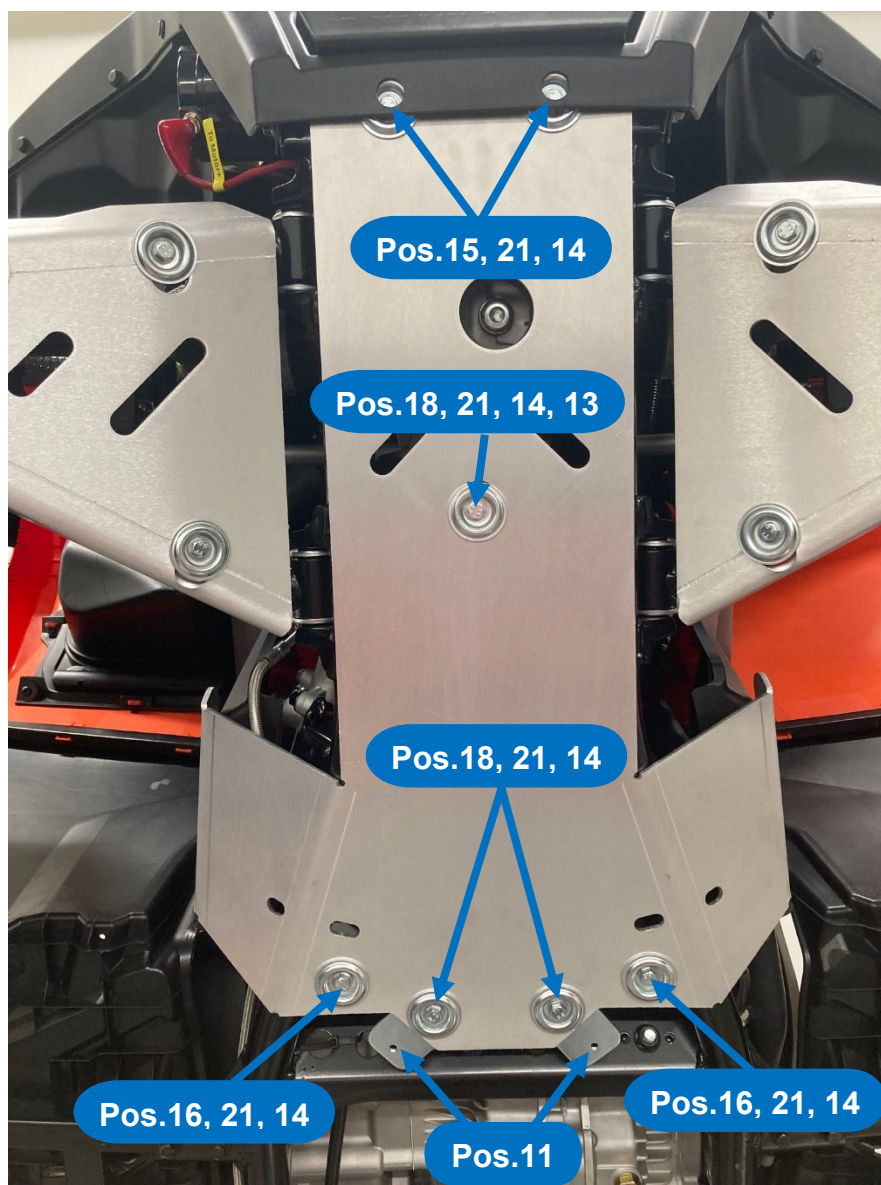


Step 6

Step 7



Tighten the bolts that were loosened in step 4!

Fit the center skid plate (Pos.2) with connector plates (Pos.11 & 12). M6x16 (Pos. 18) M6x8 (Pos. 19), concave washers (Pos. 14) and Ø6/15 washers (Pos.21).

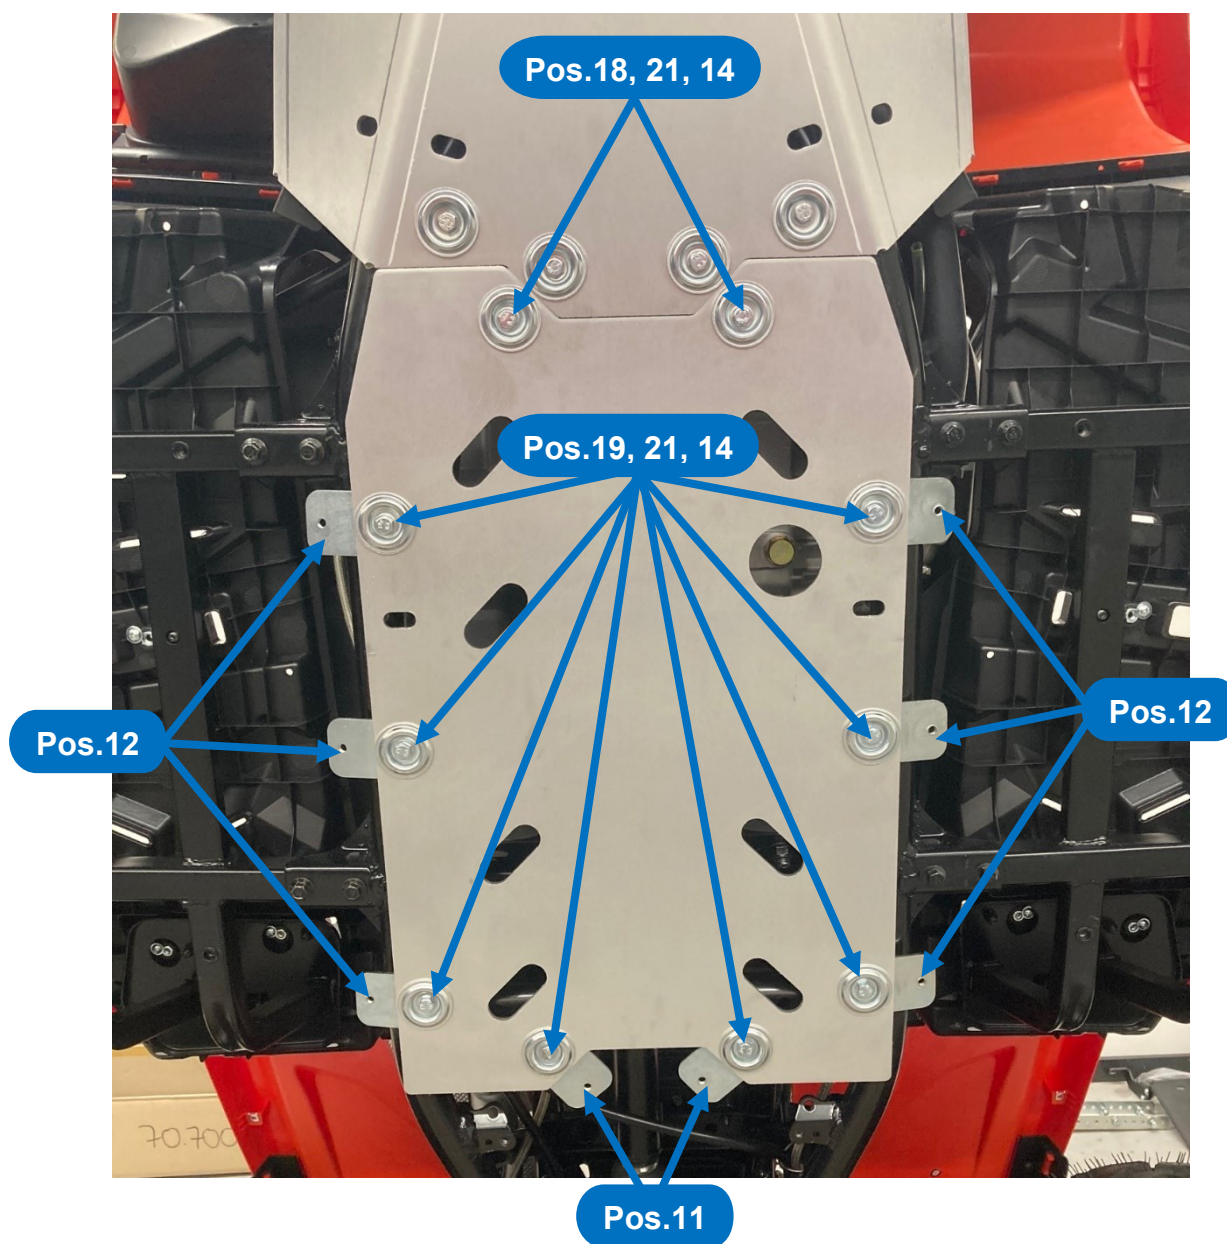


Step 8


Fit the rear skid plate (Pos.3) Use bolts M6x16 (Pos. 18) M6x20 (Pos. 17), concave washers (Pos. 14) and Ø8/24 washers (Pos.20) and Ø 6/15 washers (Pos. 21) and M6 Nyloc nut (Pos. 22). For the middle bolt use clamp (Pos. 13)

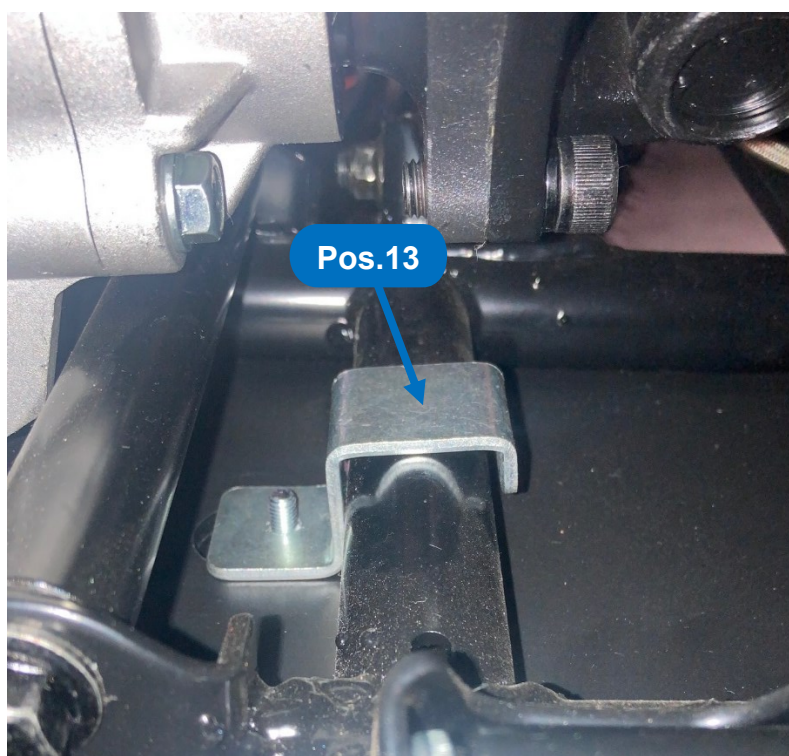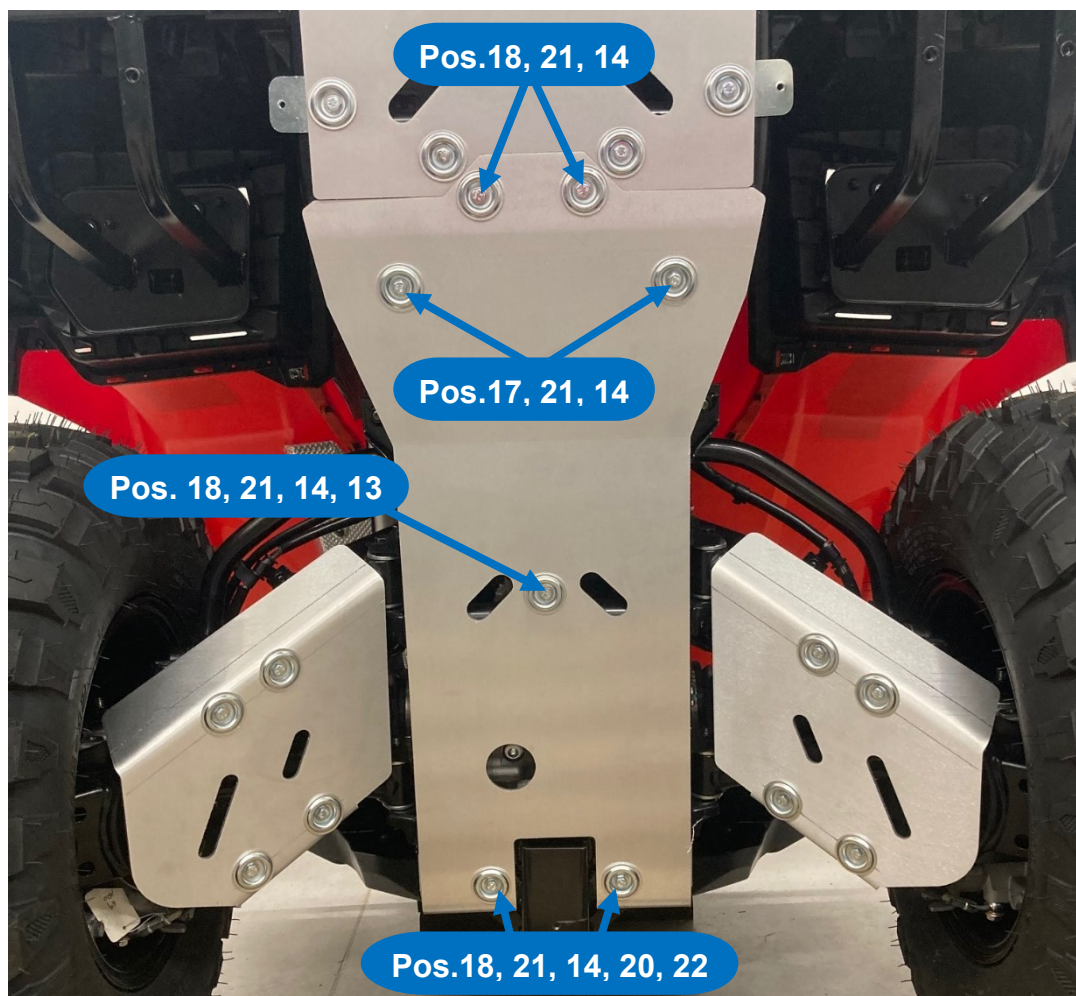

Step 9

Fit the side skid plates (Pos.4 & 5). Use bolts M6x16 (Pos. 16) M6x20 (Pos. 17), concave washers (Pos. 14) and Ø6/15 washers (Pos.21).

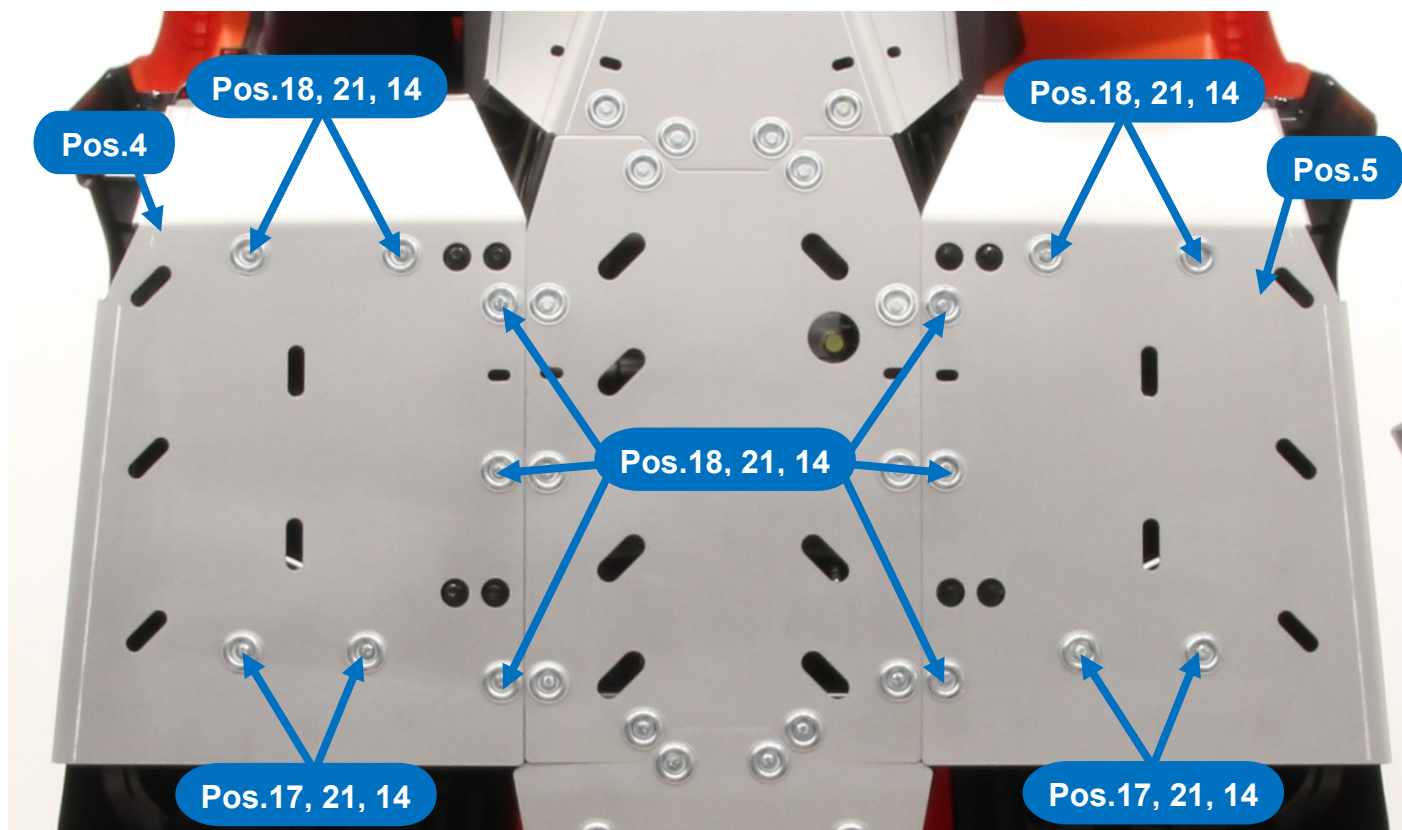

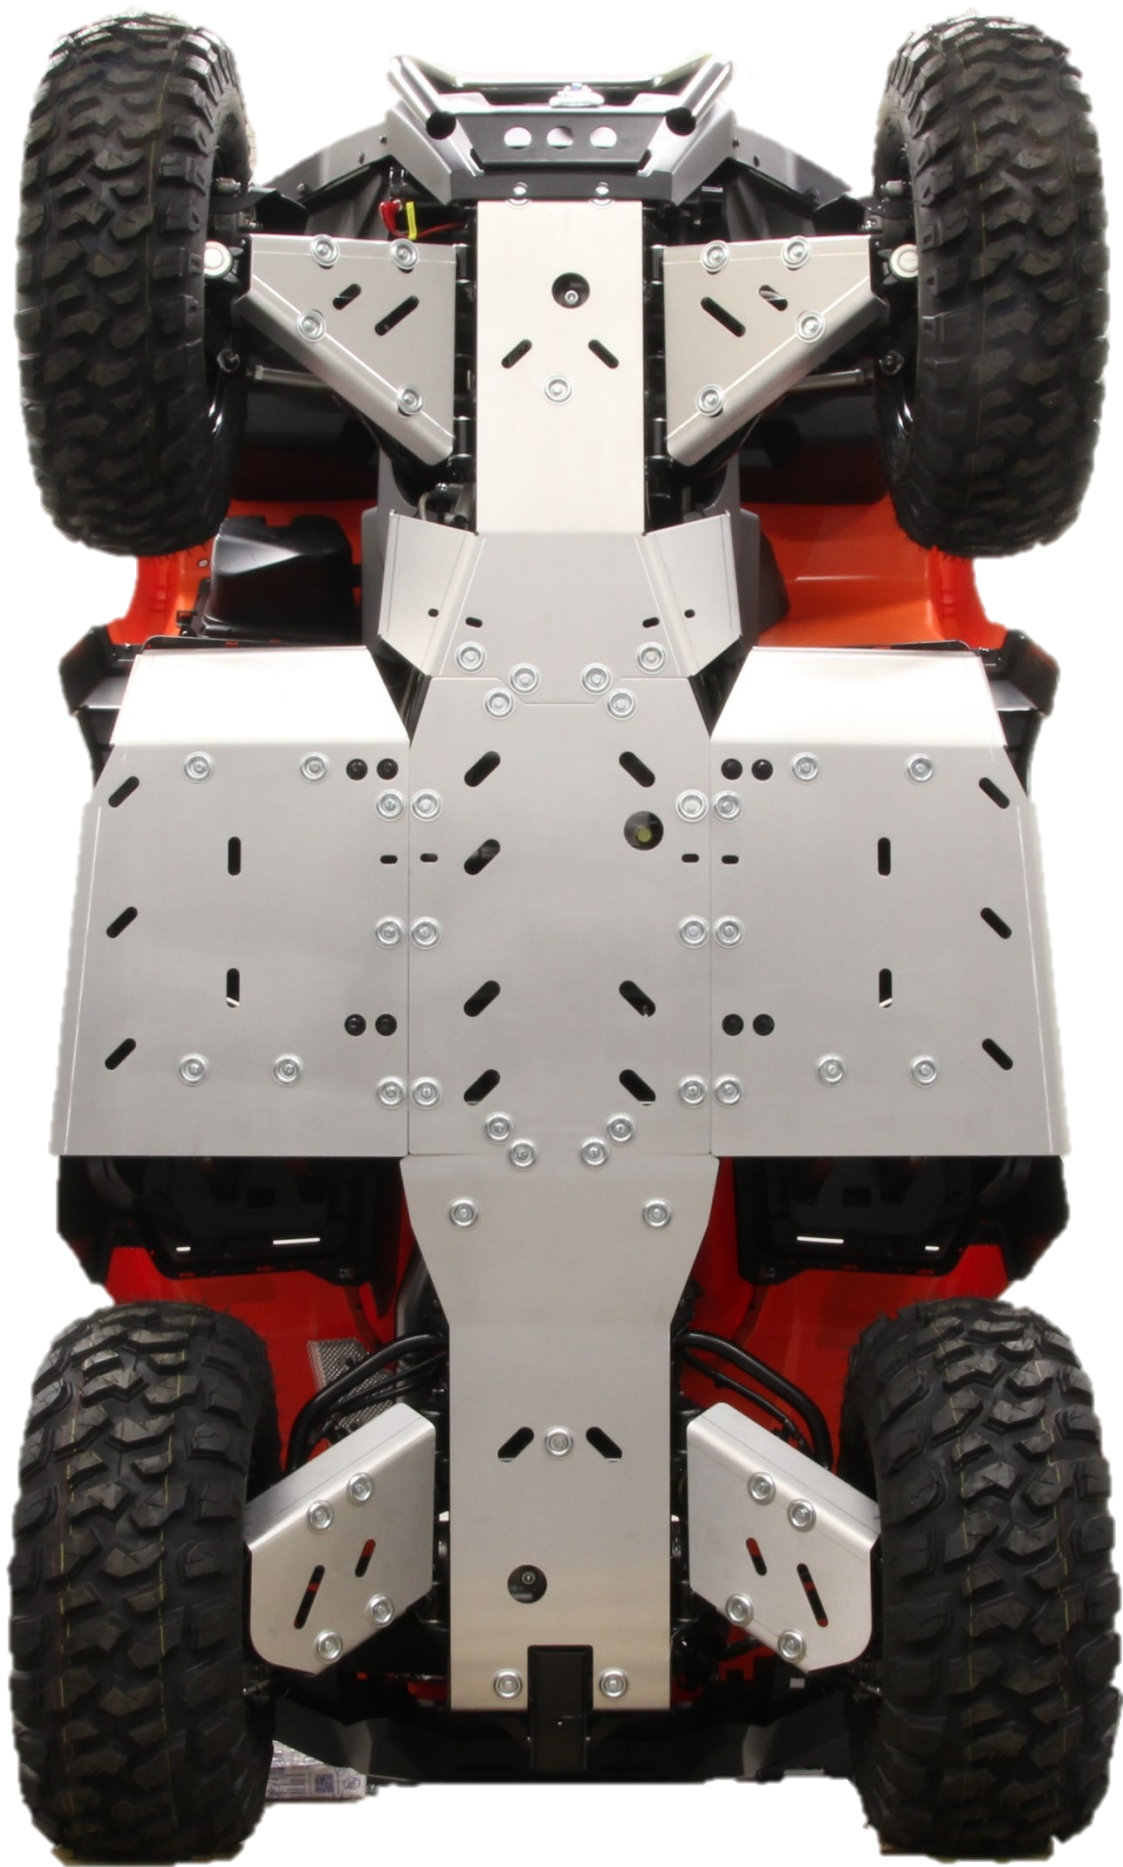

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

