




DOWNLOAD MULTILINGUAL USER
MANUAL

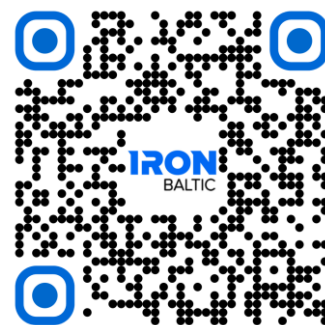

<https://code.ironbaltic.com/u/0s66o11p>

MID-MOUNT ADAPTER

LINHAI

LANDFORCE 550L/650L/650L PRO (2025+)

Code 03.18600

Version Rev01 (07042026)




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.18601K	1
2	Pin 10x40	14.003	2
3	U-Clamp M8x38mm	14.009	4
4	Cotter pin 2mm DIN 11024	OT.07.01.010	2
5	Washer Ø8/20 SFS3738	OT.04.03.030	8
6	Nyloc nut M8 DIN985	OT.03.02.040	8

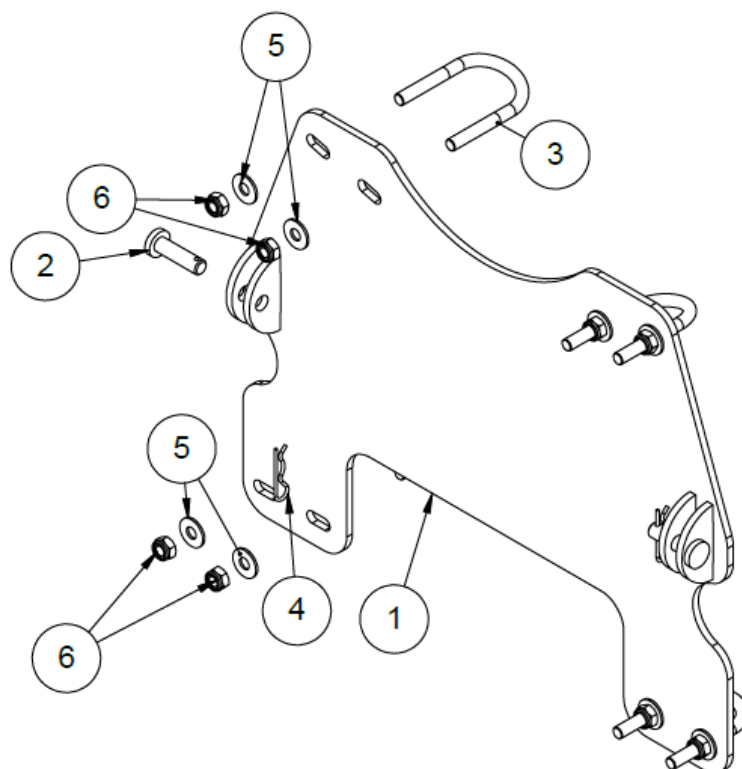

Numbers on drawing correspond to Pos numbers on specification table.



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 13mm
- Spanner 13mm



NB!

Designing the adapter, originaal/factory tires were taken into consideration!


550L - Front: AT25x8-12. Rear: AT25x10-12.

650L/650L PRO - Front: AT26x9-14. Rear: AT26x11-14

FITTING INSTRUCTIONS WITHOUT / ORIGINAL SKID PLATE


Step 1

Eemaldage originaal plastikud. Juhul kui soovite adapteri paigaldada originaal plastikute peale, eemaldage ja tehke väljalõiked poltide jaoks.

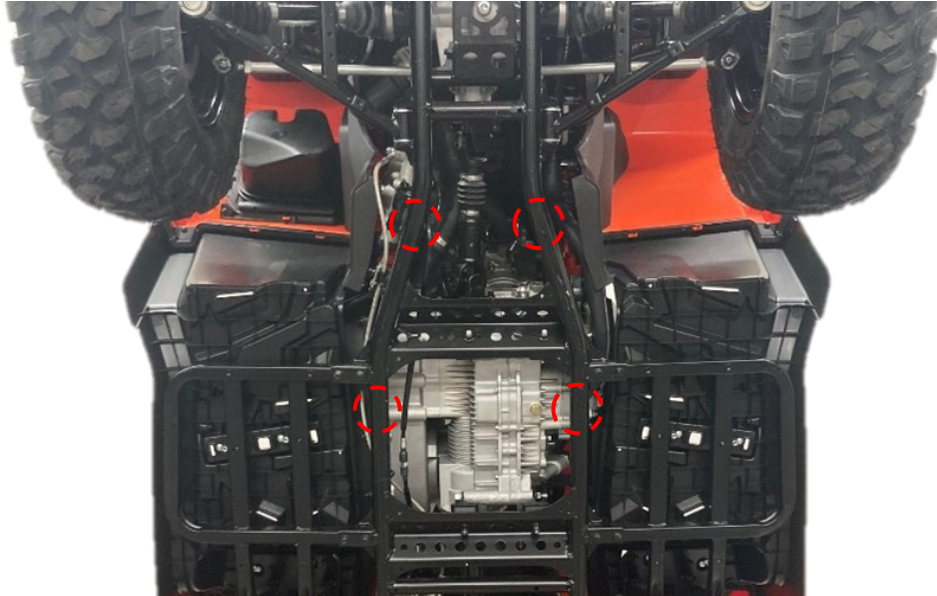


Step 2

Remove cable ties from the tube frame of the ATV. Check if there is enough room to install the U-clamps.

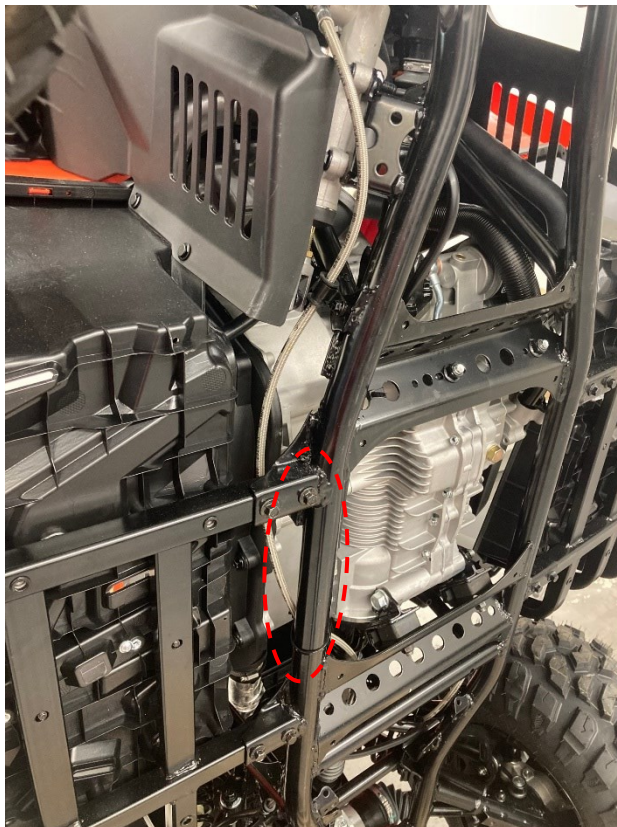


Step 3

Install the adapter (Pos.1). To fit it, use M8x38 U-clamps (Pos.3), Ø8/20 washers (Pos.5), M8 nyloc nuts (Pos.6).

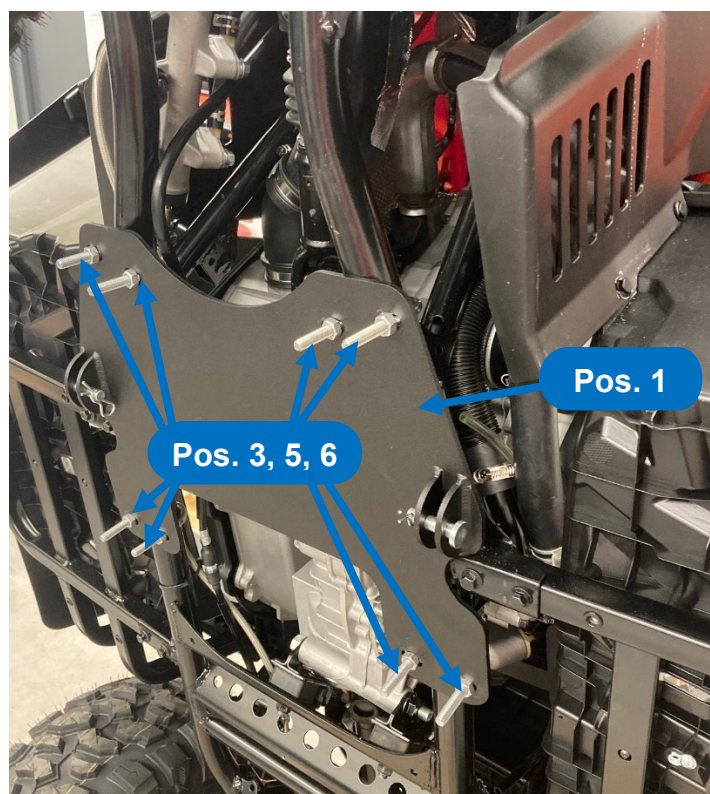


Step 4

Install the pins on the adapter (Pos.4) using cotter pins (Pos.5).

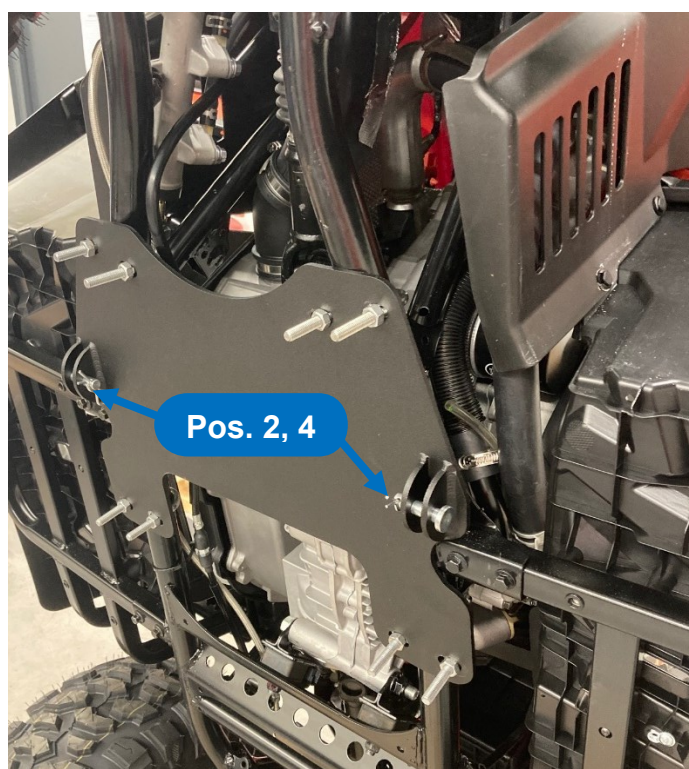


FITTING INSTRUCTIONS WITH IRON BALTIC SKID PLATE

Step 1 Remove bolts and connector plates shown in the picture.

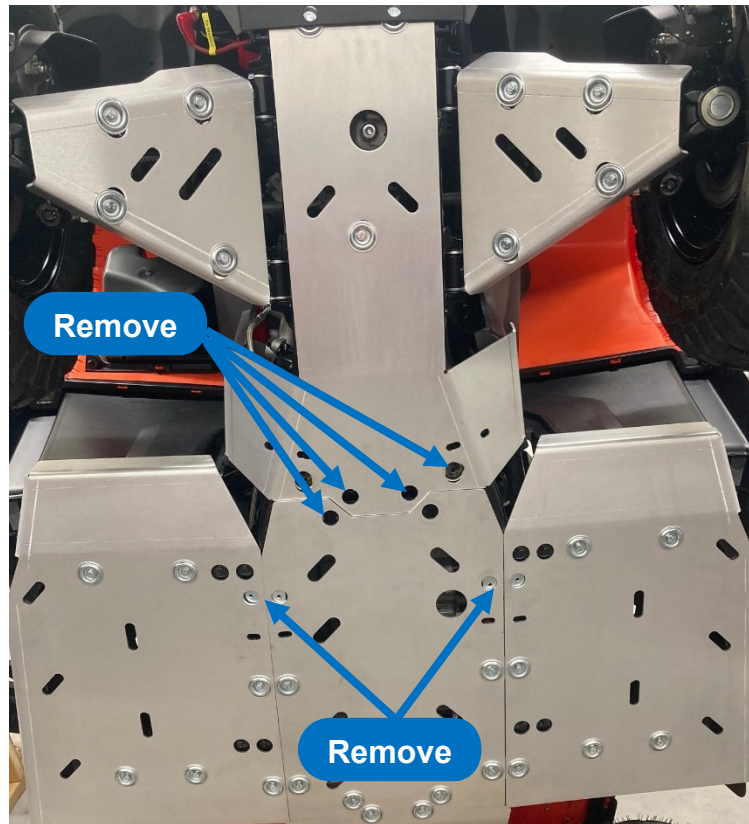


Step 2 Install the U-clamps (Pos. 3). **NB!** The U-clamps are best installed from the locations indicated by the arrows. The front clamps can be placed from behind the left of the front skid plate. The rear clamps can be placed from between the center and side skidplates, accessing it from the back of the machine.

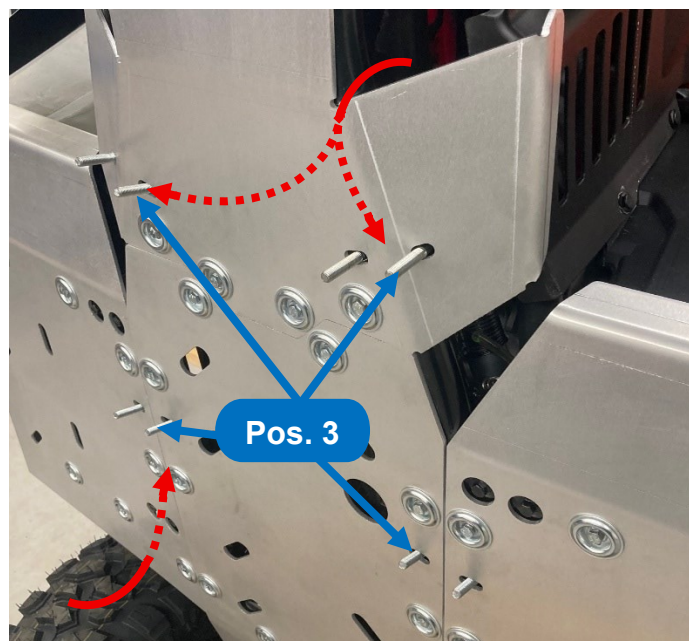



Step 3

Install the adapter (Pos.1). To fit it, use M8x38 U-clamps (Pos.3), Ø8/20 washers (Pos.5), M8 nyloc nuts (Pos.6).

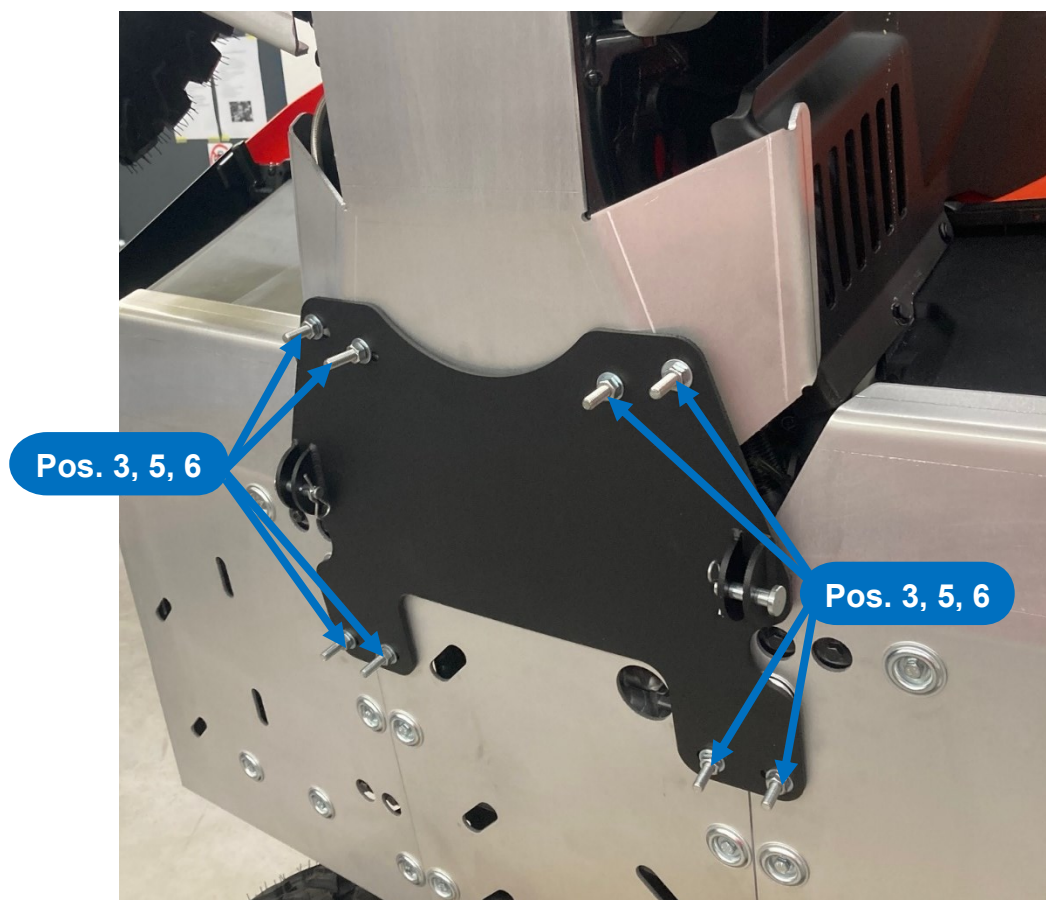

Step 4

Install the pins on the adapter (Pos.4) using cotter pins (Pos.5).

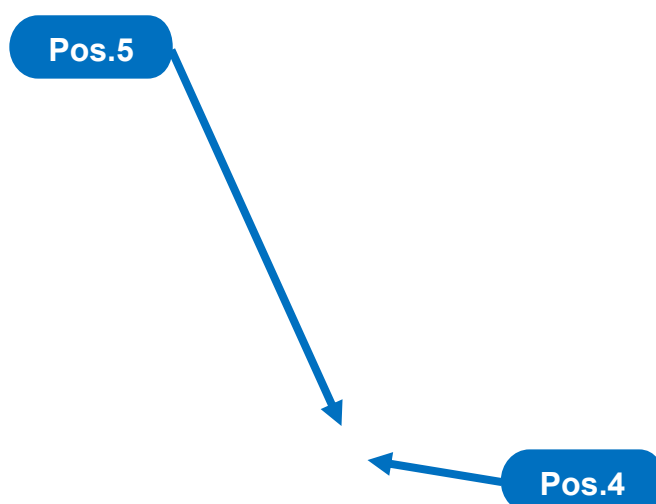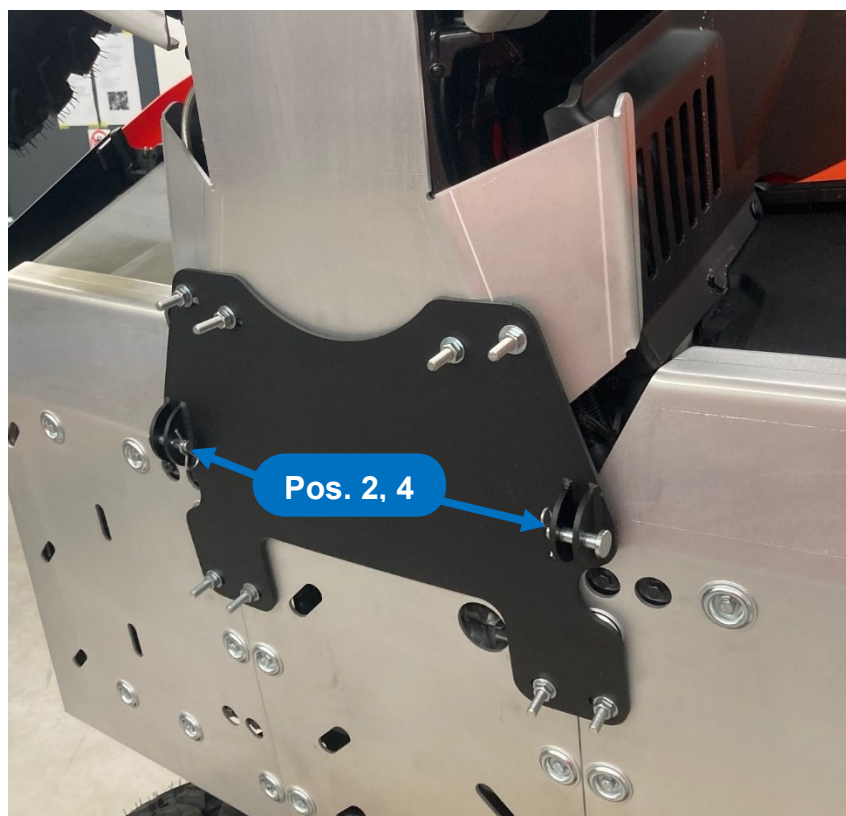

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

