



FRONT MOUNT ADAPTER



POLARIS

Ranger 1000 (2026+)

Code 03.19000

Version Rev01 (02042026)




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.19001K	1
2	Distance plate	03.19006	1
3	Square nut	03.5204	2
4	Bushing 28 mm	03.10605	2
5	Bolt M8x25 DIN 933	OT.02.02.190	2
6	Bolt M10x45 DIN933	OT.02.02.331	2
7	Bolt M10x55 DIN933	OT.02.02.342	2
8	Washer Ø8/20 SFS 3738	OT.04.03.030	2
9	Washer M10 DIN125	OT.04.01.040	8
10	Nut M10 Nyloc DIN985	OT.03.02.050	4

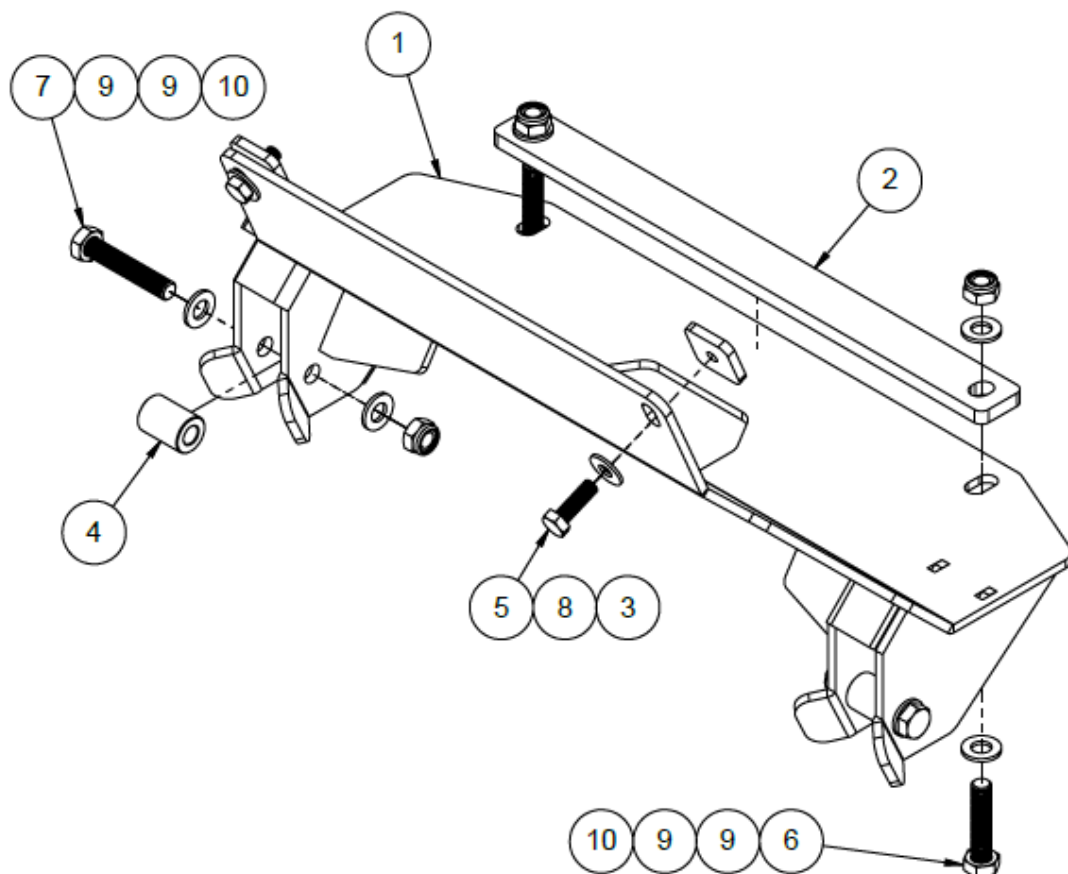

Numbers on drawing correspond to Pos numbers on specification table.



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 13mm
- Socket wrench 15mm
- Socket wrench 17mm
- Spanner 15mm
- Spanner 17mm



NB!

Designing the adapter, original/factory tires were taken into consideration! Front: 27x9.00-14 and rear: 27x11.00-14.

Thread size	Strength class		
	4.8	8.8 (default)	10.9
	Tightening torque (Nm)		
M6	5,5	10	15
M8	13	25	35
M10	25	50	75
M12	45	85	130
M16	115	215	315

If not specified otherwise, use tightening torque for fasteners specified in the following table.

FITTING INSTRUCTIONS


Step 1

Remove bolts under front bumper as shown in the picture.




Step 2

Install bushings (Pos.4) to the adapter (Pos.1). For fastening use M10x55 bolts (Pos.7), M10 washers (Pos.9) and M10 nyloc nuts (Pos.10).

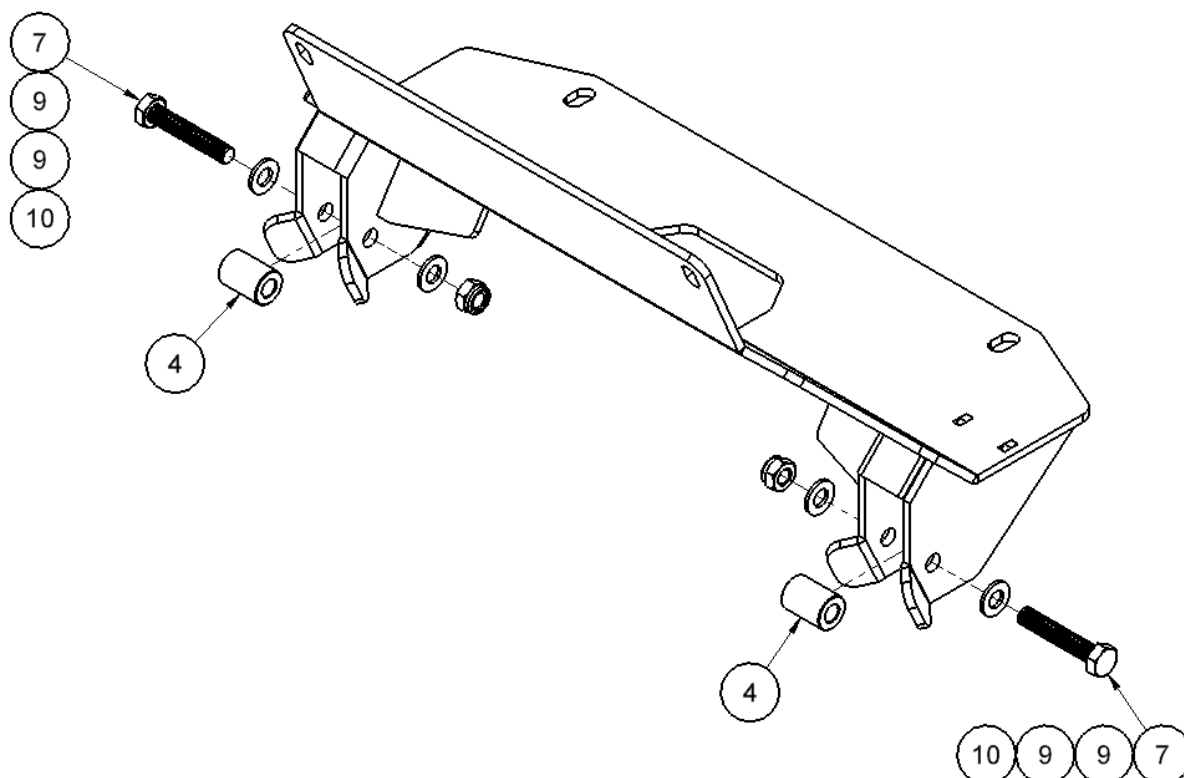

Step 3

Install adapter (Pos.1) with distance plate (Pos.2) to the ATV frame. For fastening use M8x25 bolts (Pos.5), M10x45 bolts (Pos.6), Ø8/20 washers (Pos.8), M10 washers, M10 nyloc nuts (Pos.10) and square nuts (Pos.3).

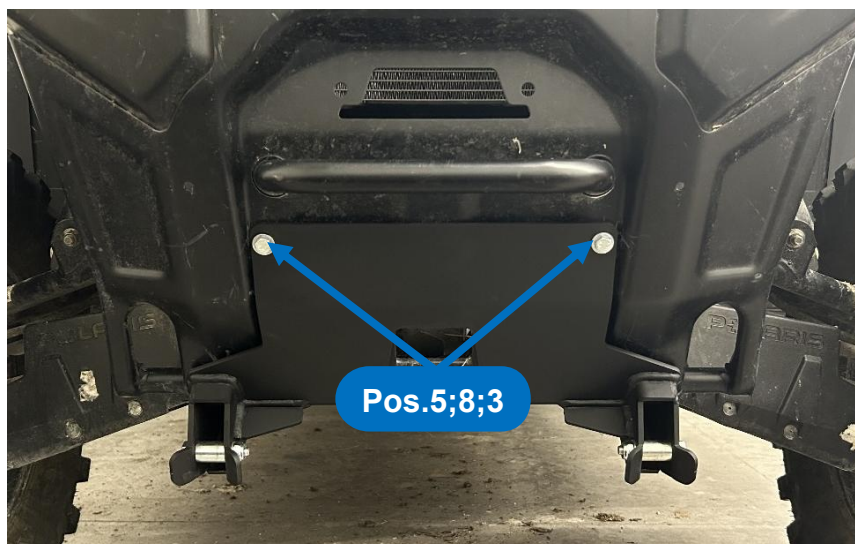



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

