



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/ylv5w2nk

FRONT-MOUNT ADAPTER

CFMOTO

CFORCE C4 / C4 Touring (2026+)


CFORCE C5 / C5 Touring (2026+)

GOES

TERROX 550S / 550L (2026+)

Code 03.19100

Version Rev02 (24082026)

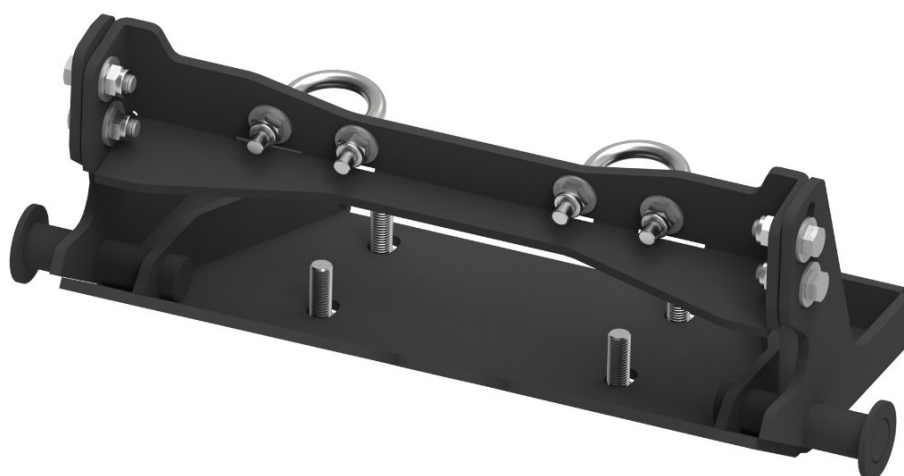


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.19101K	1
2	Mounting plate	03.19104	1
3	Distance plate (Goes Terrox 550)	03.5204	2
4	U-clamp M8x32	OT.05.01.020	2
5	Bolt M6x25 DIN933 (Goes Terrox 550)	OT.02.02.070	2
6	Bolt M8x25 DIN933	OT.02.02.190	4
7	Bolt M10x1,25x30 DIN961	OT.02.08.340	4
8	Washer Ø8/20 SFS3738	OT.04.03.030	12
9	Washer Ø10/20 DIN125	OT.04.01.040	4
10	Nyloc nut M8 DIN985	OT.03.02.040	8

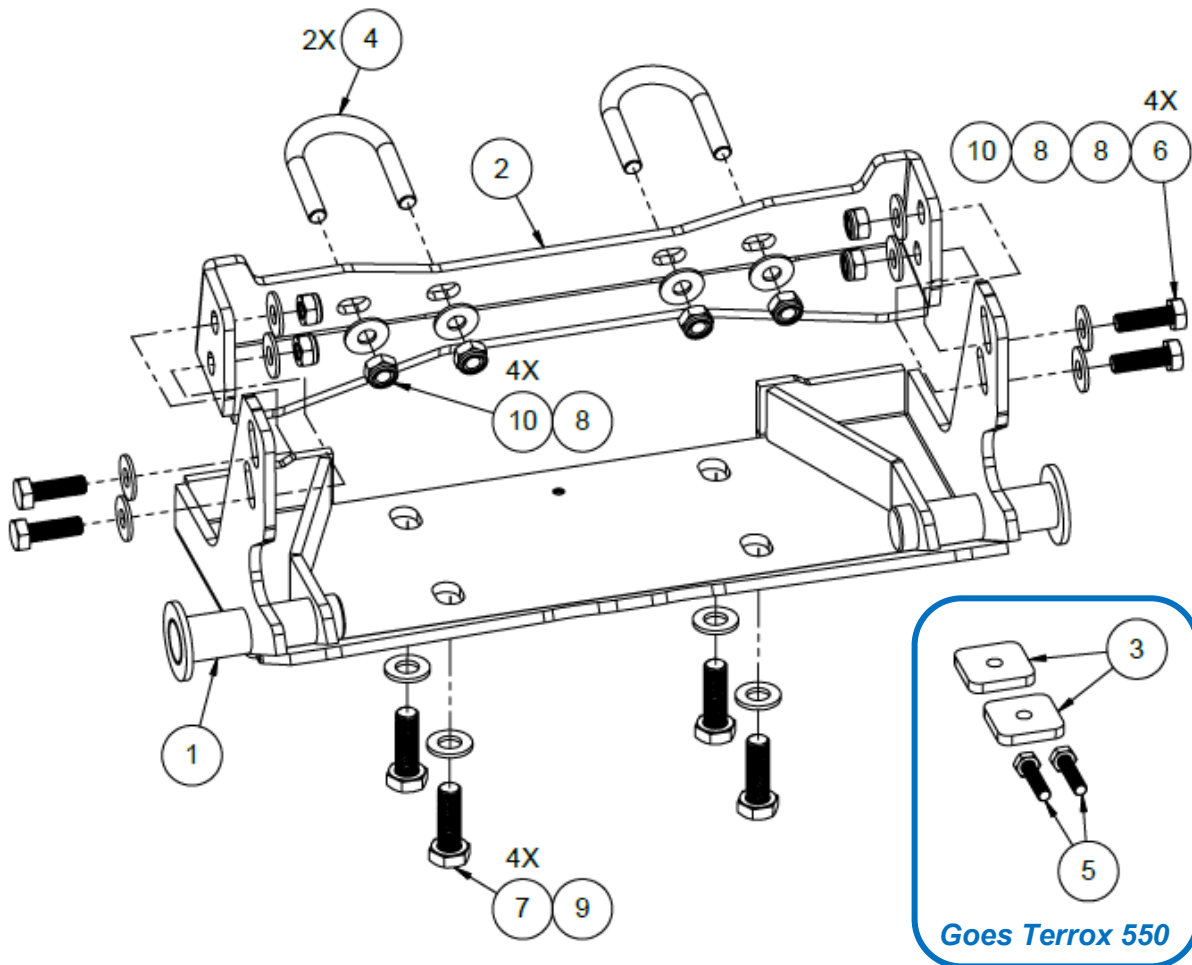

Numbers on drawing correspond to Pos numbers on specification table



TOOLS REQUIRED FOR INSTALLATION:

- Spanner 13mm
- Spanner 17mm
- Socket wrench 13mm



NB!

Designing the skid plate, original/factory tires were taken into consideration!

Front: 25x8.00-12 and rear: 25x10.00-12.

FITTING INSTRUCTIONS



CFMOTO C4/C5 (2026+)

If not specified otherwise, use tightening torque for fasteners specified in the following table.

Thread size	Strength class		
	4.8	8.8 (default)	10.9
	Tightening torque (Nm)		
M6	5,5	10	15
M8	13	25	35
M10	25	50	75

Step 1


Install mounting plate (Pos.2). For fastening use M8x32 U-clamps (Pos.4), Ø8 mm washers (Pos.8) and M8 nyloc nuts (Pos.10). **Do not tighten the nuts!**

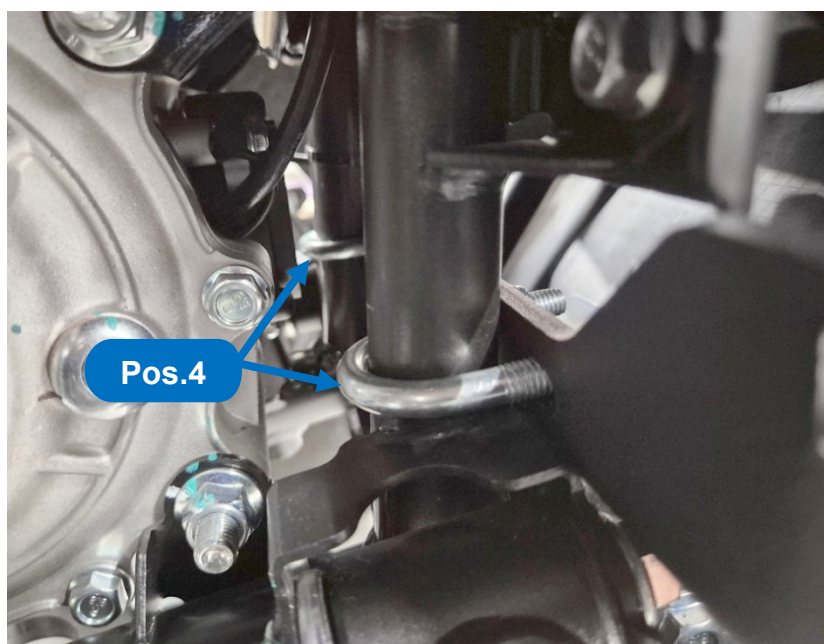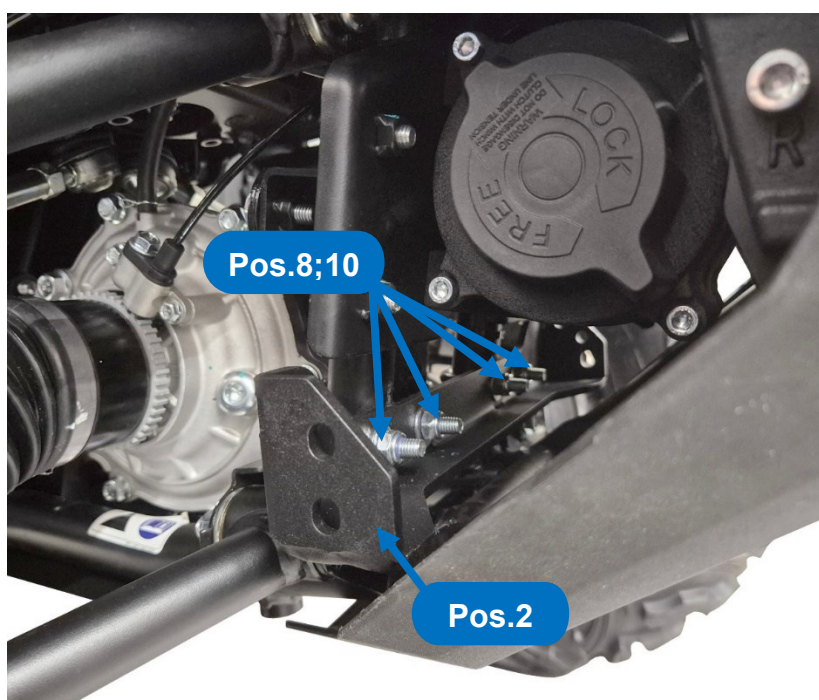

Step 2


If installing the adapter to the original plastic, move to step 3. If installing adapter with the Iron Baltic aluminium or plastic skid plate, remove the reinforcement from the front part and make cut-outs shown in the picture. Then reinstall the front part (the adapter is installed on top of the skid plate front part).

NB! Do not install fasteners shown in the picture!

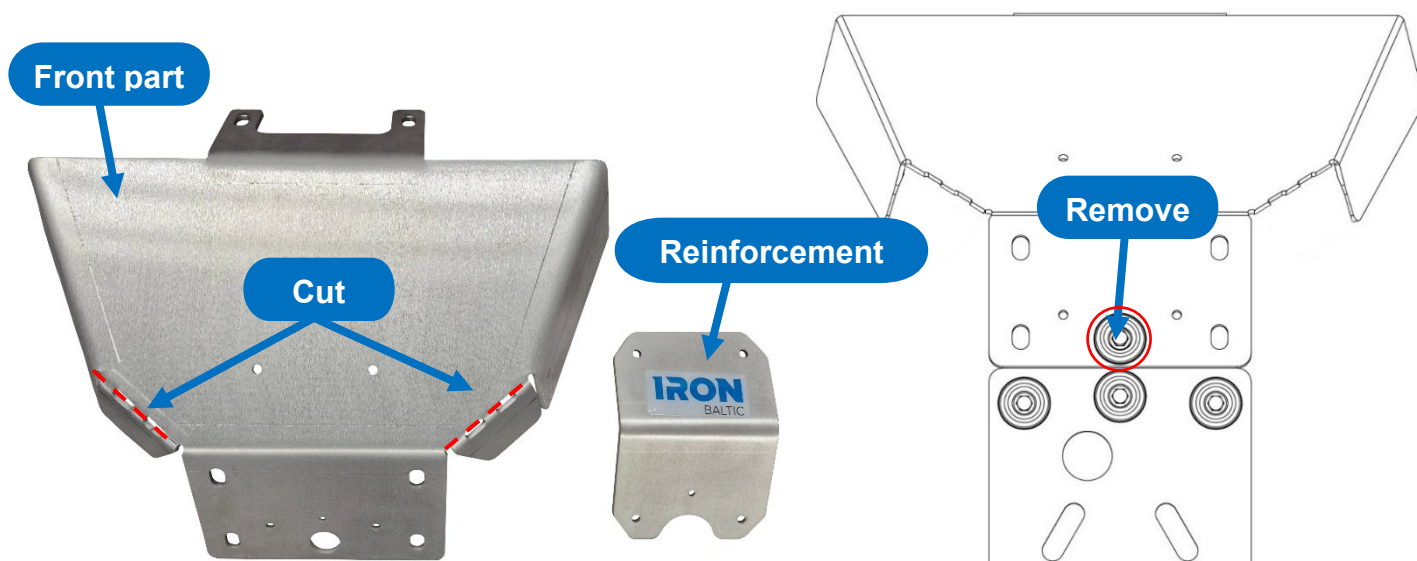


Step 3

Install adapter (Pos.1). For fastening use M10x30 bolts (Pos.7) and Ø10 mm washers (Pos.9).

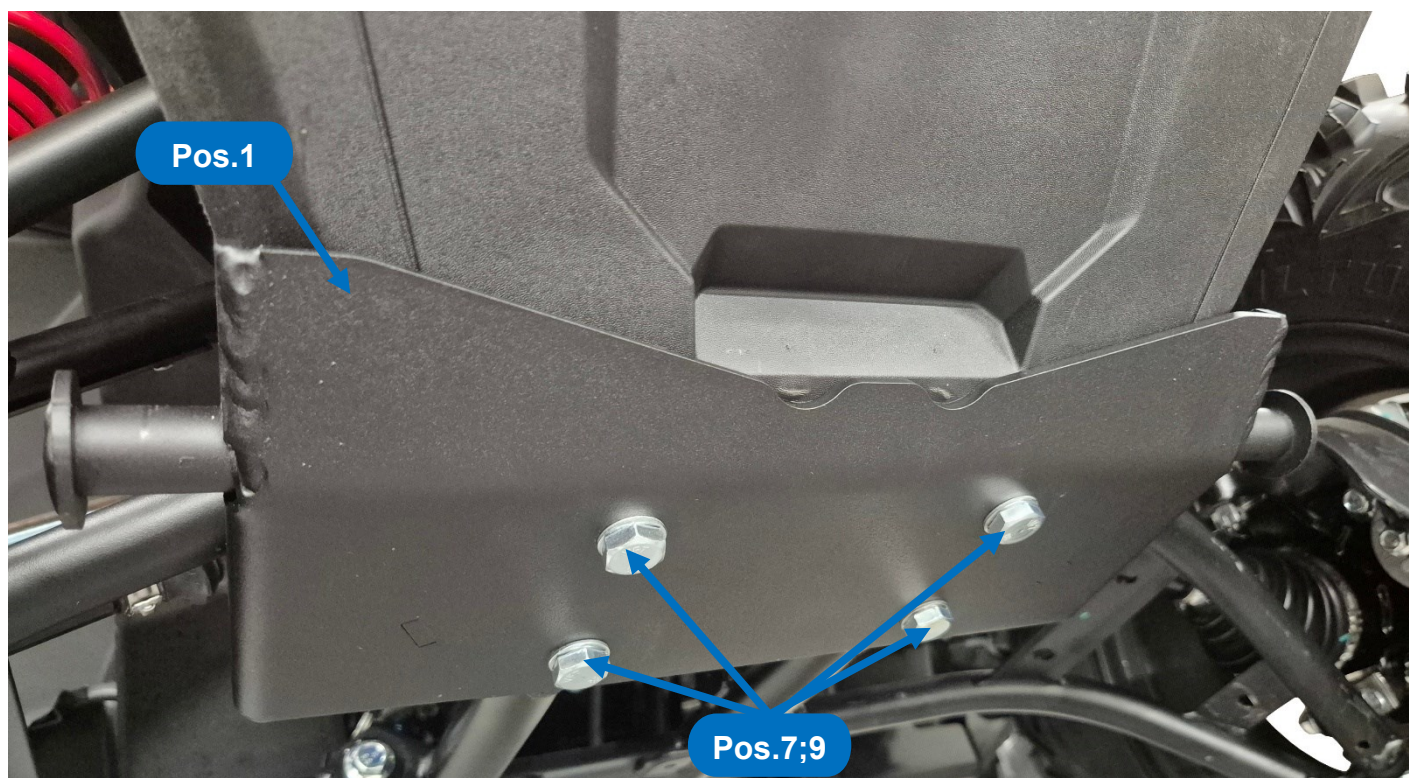

Step 4

Attach adapter to mounting plate. For fastening use M8x25 bolts (Pos.6), Ø8 mm washers (Pos.8) and M8 nyloc nuts (Pos.10).
Also tighten the nuts installed in step 1!

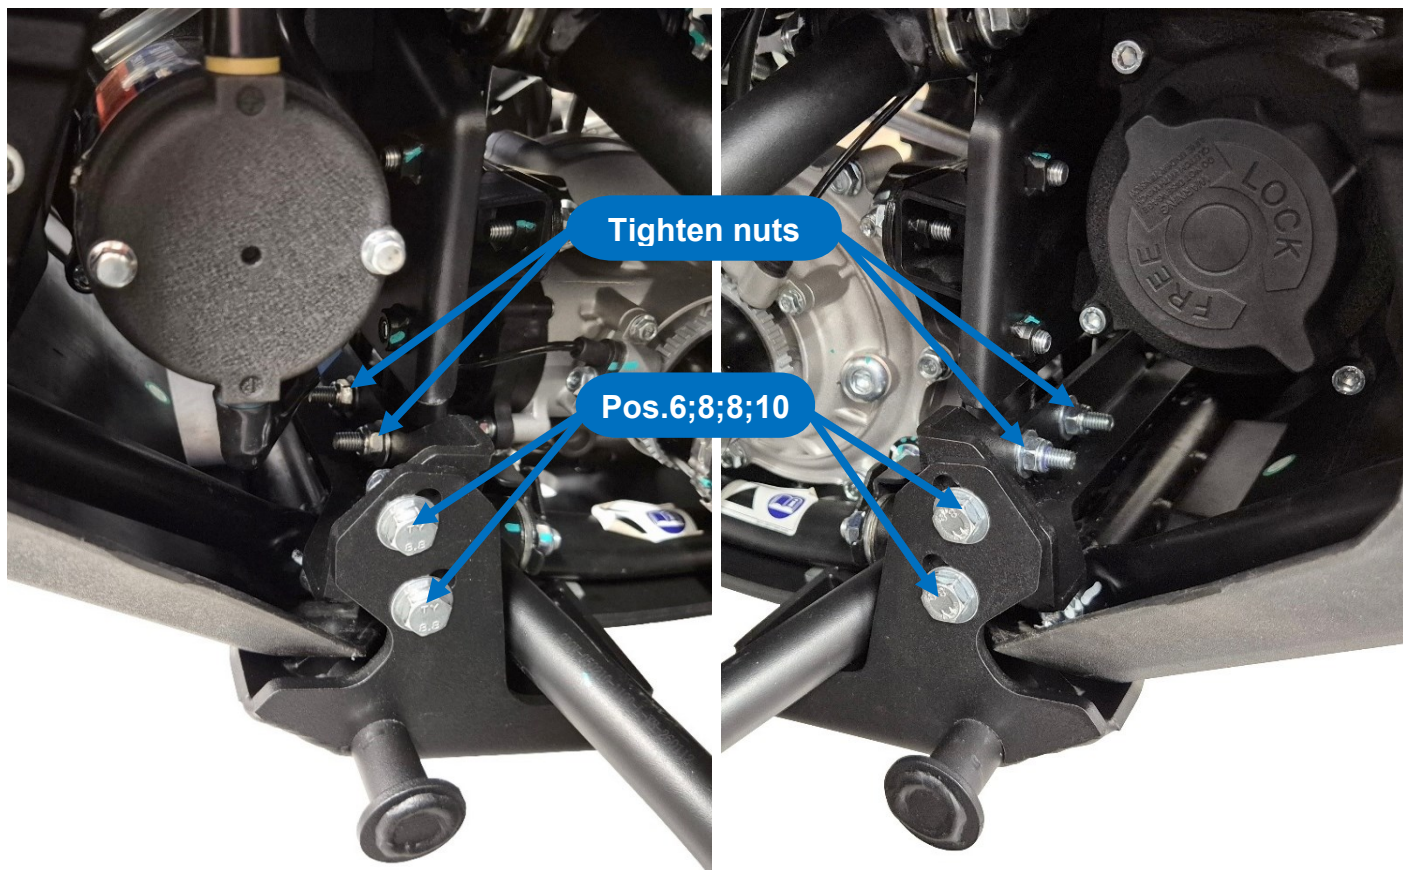

FITTING INSTRUCTIONS


GOES 550S / 550L (2026+)

If not specified otherwise, use tightening torque for fasteners specified in the following table.

Thread size	Strength class		
	4.8	8.8 (default)	10.9
	Tightening torque (Nm)		
M6	5,5	10	15
M8	13	25	35
M10	25	50	75



Step 1

When installing the adapter, make cutouts in the front plastic.

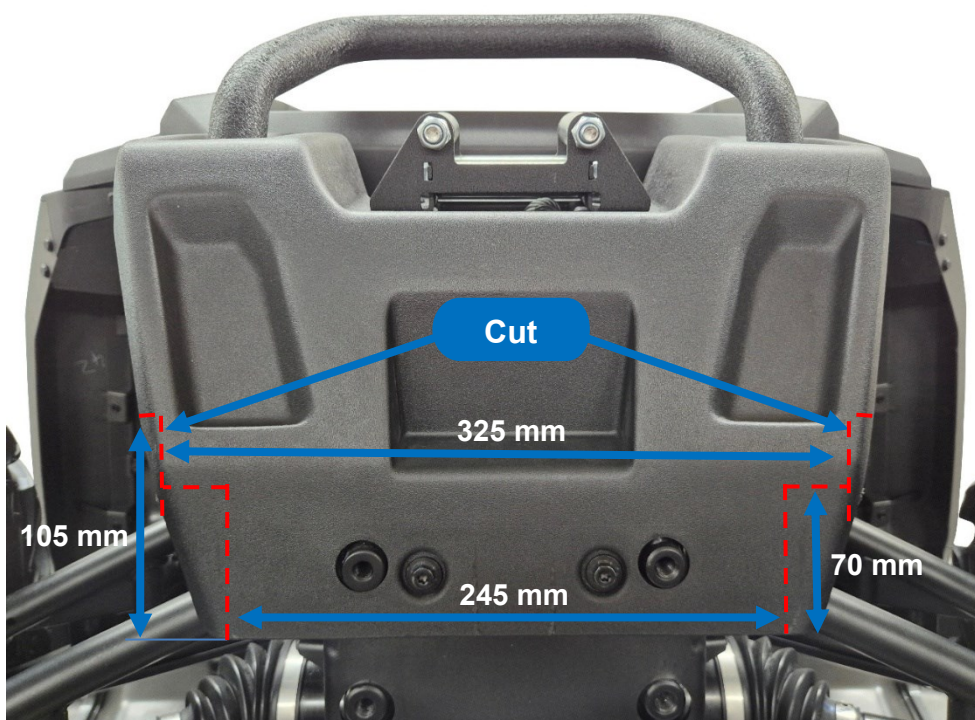

Step 2


Install mounting plate (Pos.2). For fastening use M8x32 U-clamps (Pos.4), Ø8 mm washers (Pos.8) and M8 nyloc nuts (Pos.10). **Do not tighten the nuts!**

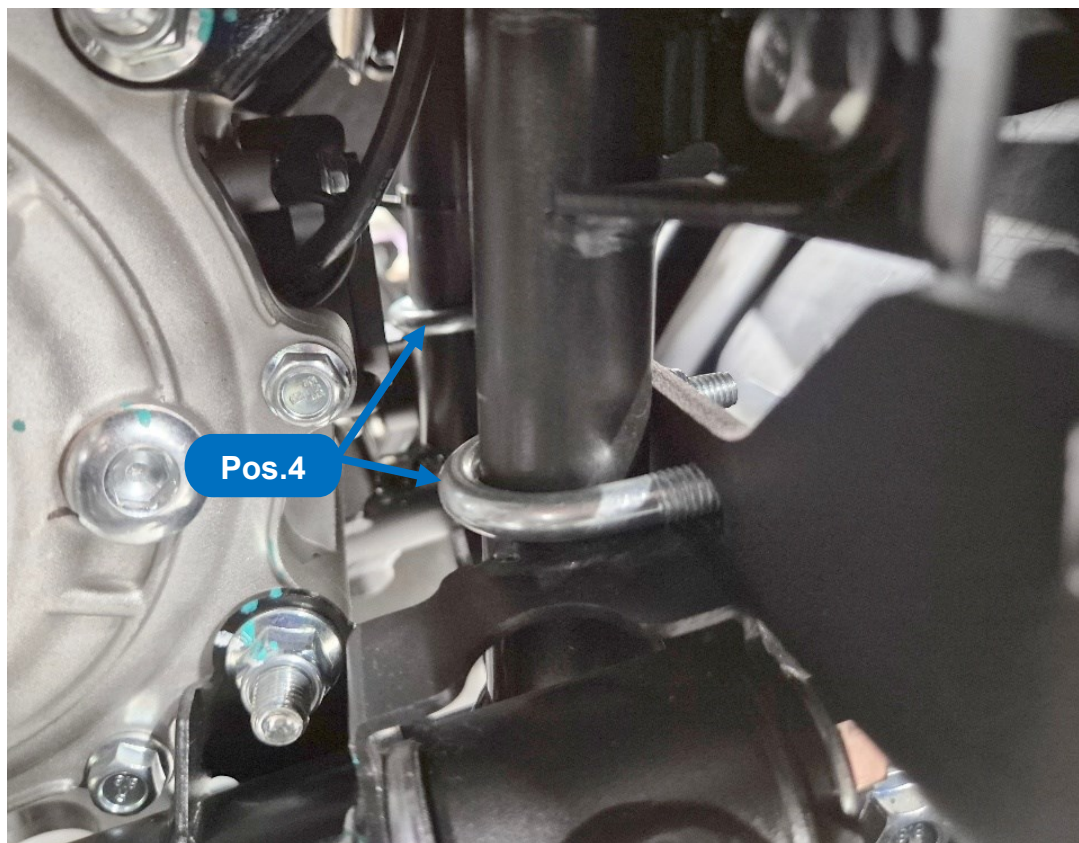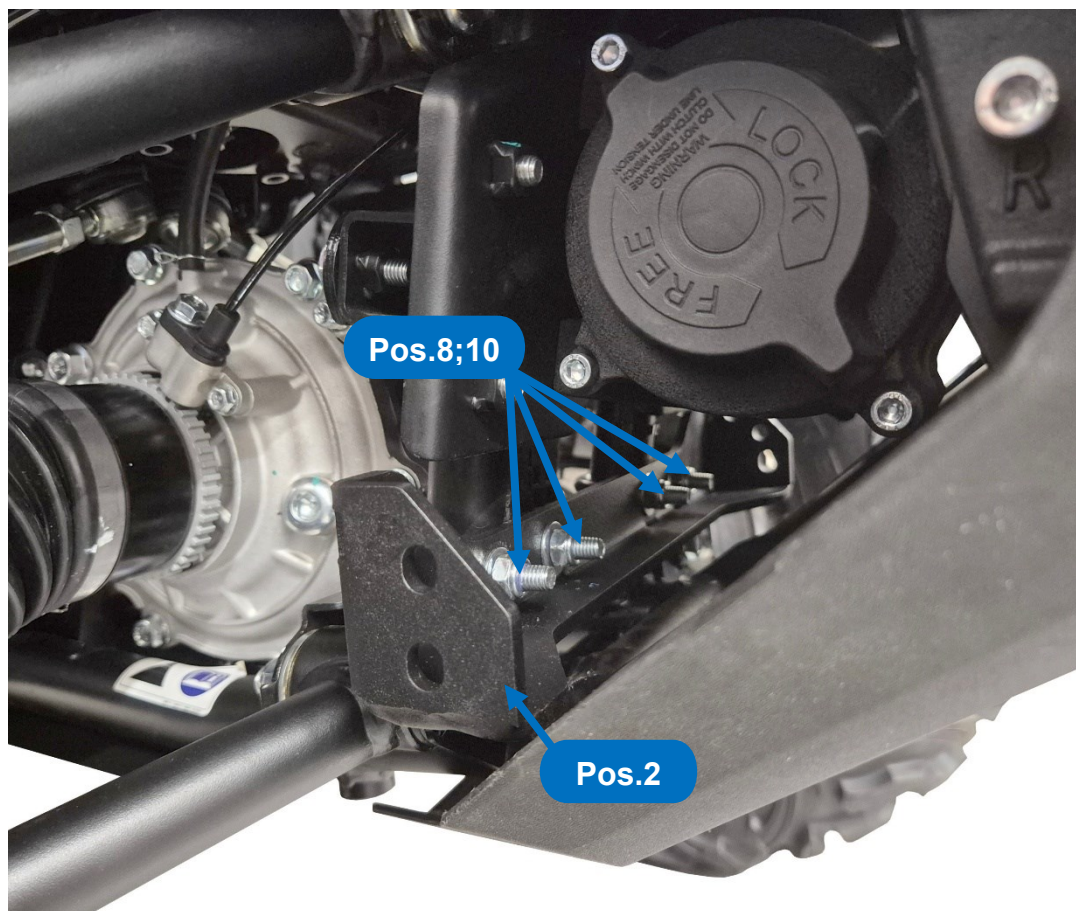


Step 3

If you are installing the adapter without the Iron Baltic skid plate, proceed to step 5. If using the Iron Baltic aluminum skid plate, remove the front part and the mounting plate. If using the Iron Baltic plastic skid plate, remove the front part, the mounting plate, and the front A-arm protections. Make the shown cutouts in the plastic front A-arm protections and reinstall them. **NB! The front cover is installed on top of the adapter, follow the installation instructions.**

Iron Baltic aluminium skid plate

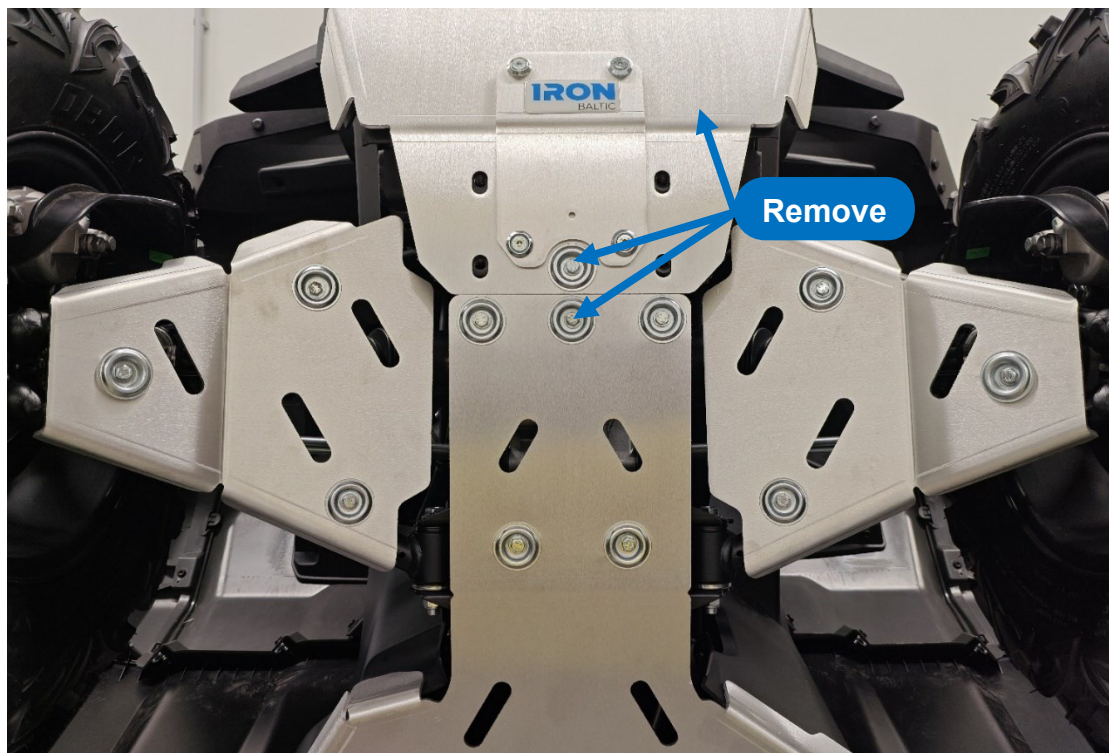


Iron Baltic plastic skid plate

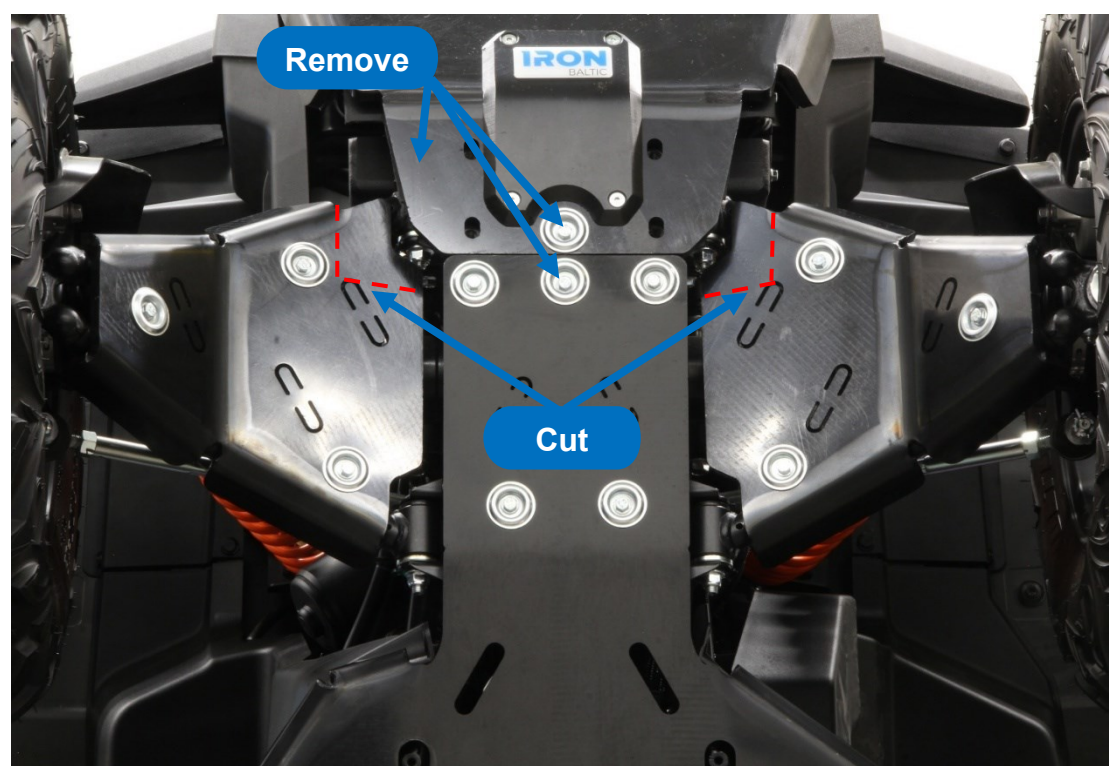


Step 4

If you are installing the adapter without the Iron Baltic skid plate, proceed to step 5. Remove the bolts shown in the picture. **NB! Be careful not to lose the distance plates and fasteners.** Install the original distance plate and the distance plate (Pos.3). For fastening use the original washers, dished washers, and M6x25 bolts (Pos.5). **NB! The images are for illustrative purposes only, these instructions apply to both plastic and aluminium skid plates.**

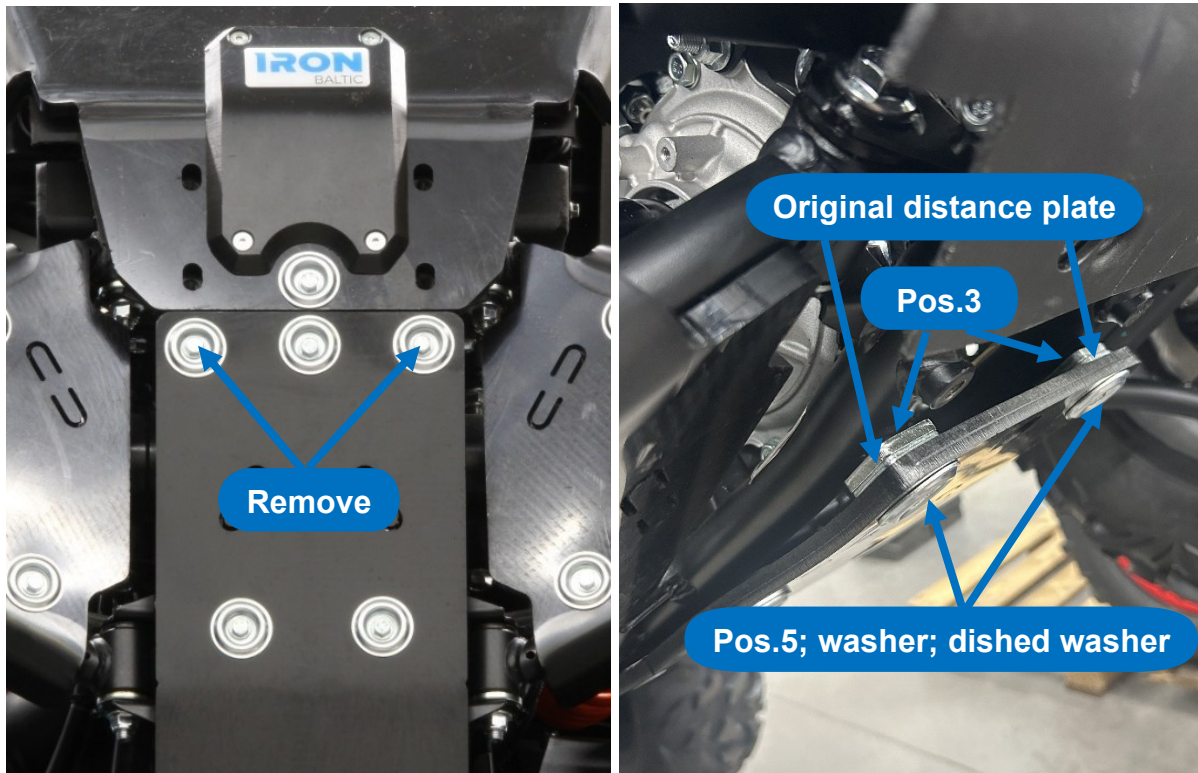


Step 5

Install adapter (Pos.1). For fastening use M10x30 bolts (Pos.7) and Ø10 mm washers (Pos.9).

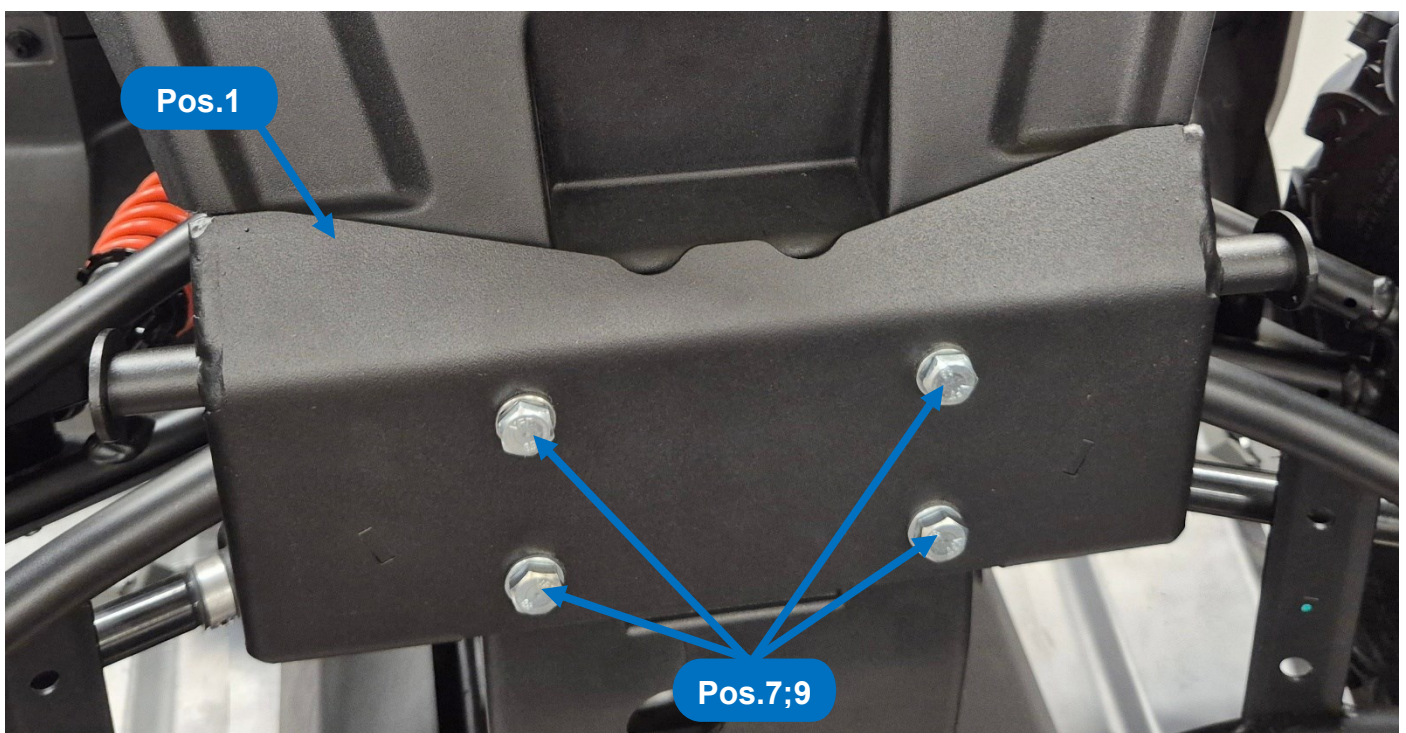


Step 6


Attach adapter to mounting plate. For fastening use M8x25 bolts (Pos.6), Ø8 mm washers (Pos.8) and M8 nyloc nuts (Pos.10).
Also tighten the nuts installed in step 1!

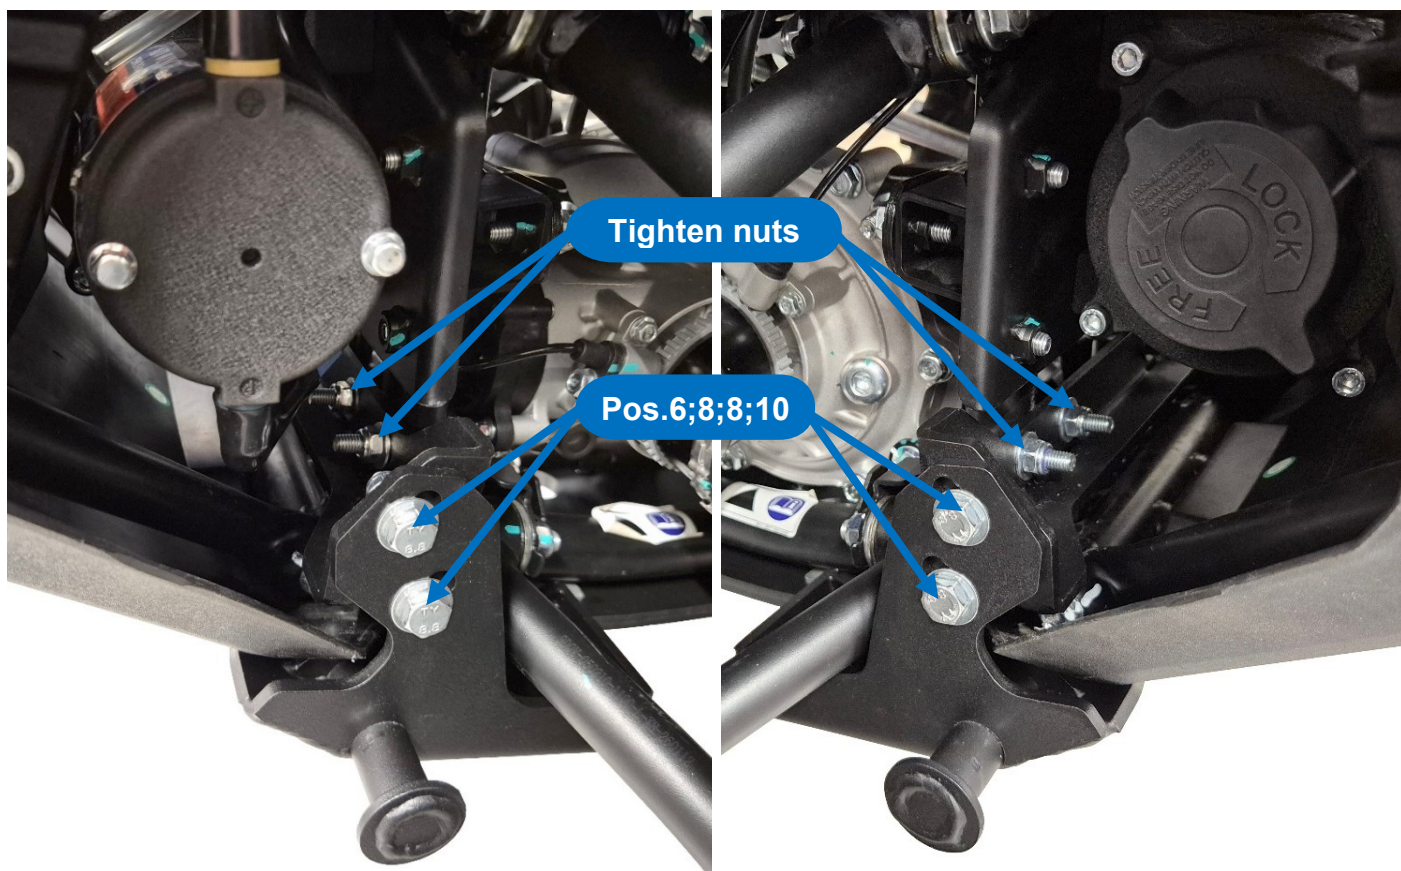

Step 7

Only if you are using the Iron Baltic skid plate. Reinstall the front part, securing it to the adapter and the frame using the skid plate's original fasteners.

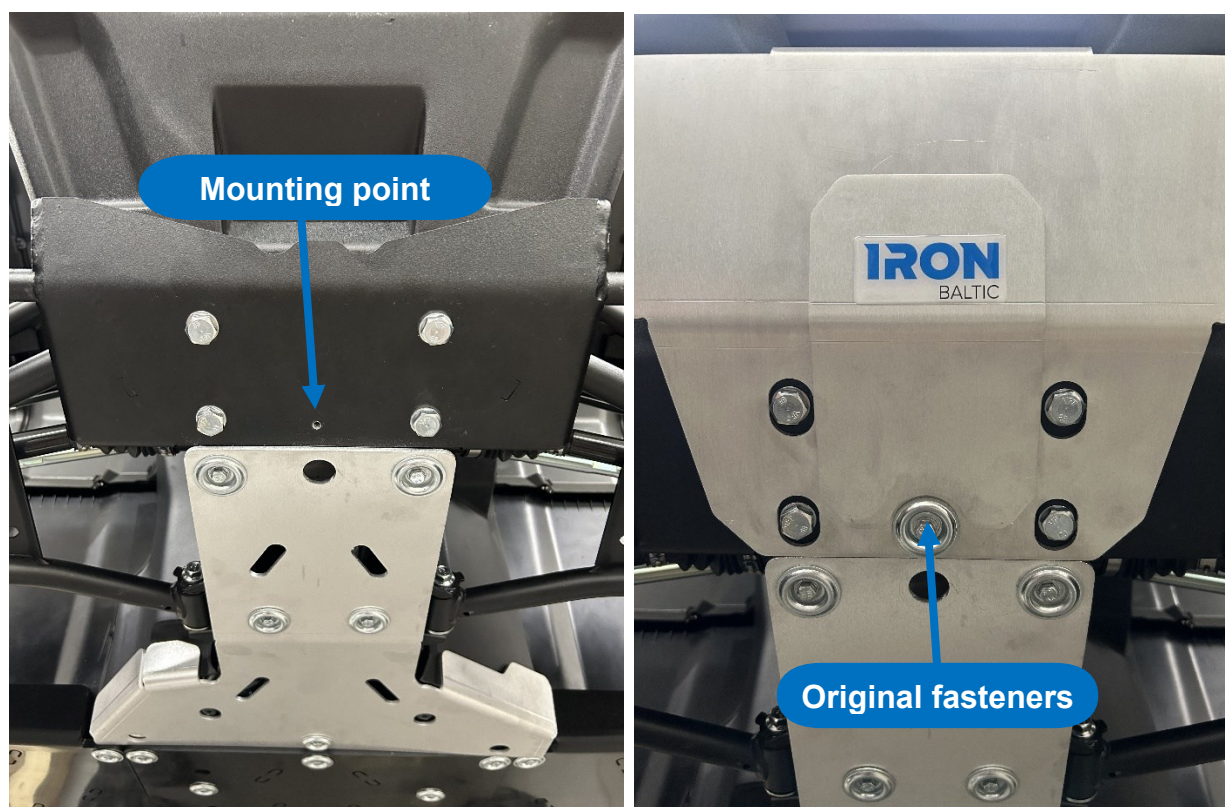

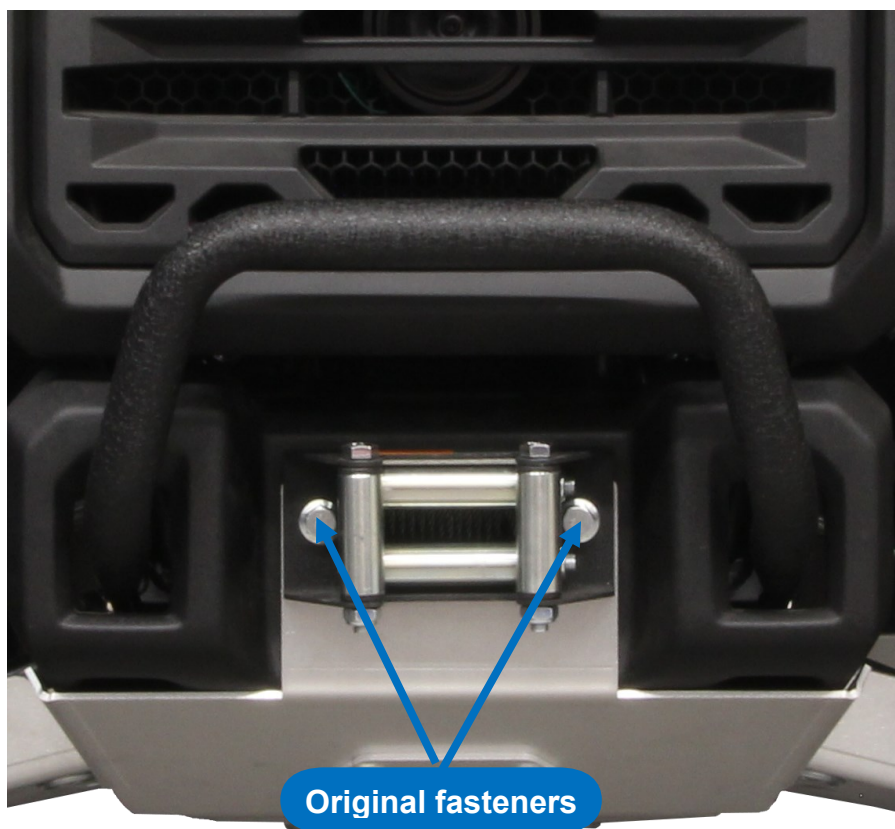

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

