



DOWNLOAD MULTILINGUAL USER
MANUAL



<https://code.ironbaltic.com/u/0s66o11p>

MID-MOUNT ADAPTER

LINHAI

T-BOSS 1100 Diesel UTV (2025+)

Code 03.19300

Version Rev01 (02062026)




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Mid-mount adapter	03.19301K	1
2	Bracket	03.19302	1
3	Distance plate	03.4003	4
4	Pin 10x40	14.003	2
5	Locking pin 2mm DIN 11024	OT.07.01.010	2
6	Bolt M8x12 DIN933	OT.02.02.168	2
7	Bolt M8x60 DIN931	OT.02.01.015	4
8	Bolt M8x75 DIN931	OT.02.01.016	2
9	Washer Ø8/20 SFS 3738	OT.04.03.030	14
10	Nut M8 Nyloc DIN985	OT.03.02.040	6

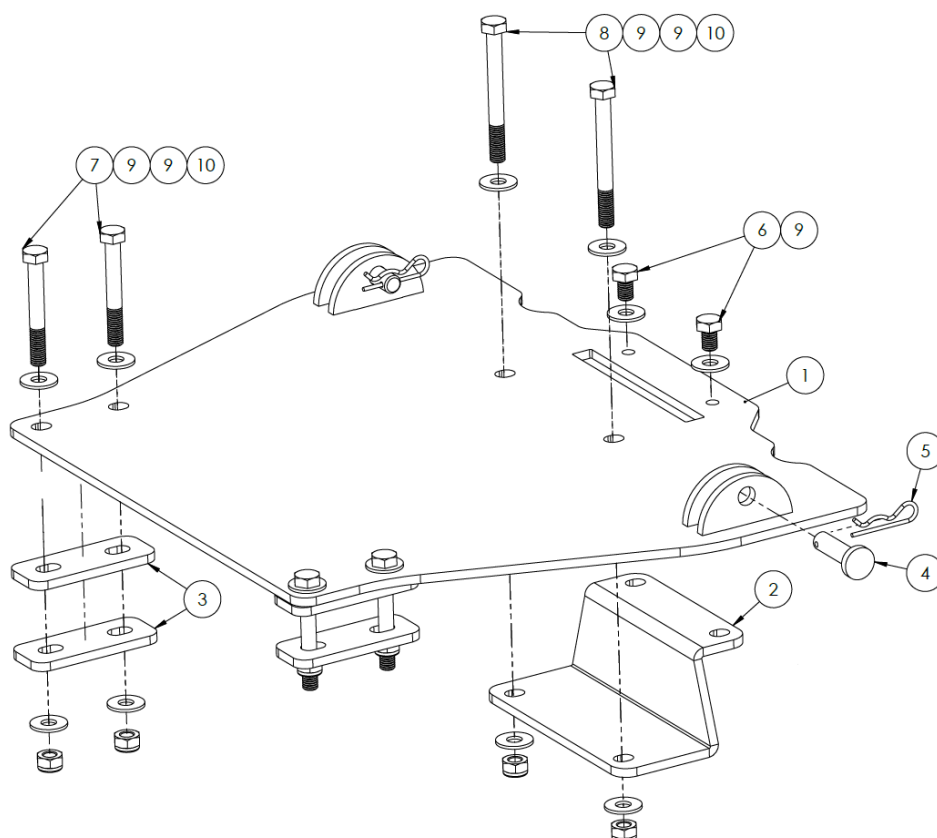

Numbers on drawing correspond to Pos numbers on specification table.



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 8mm
- Socket wrench 10mm
- Socket wrench 13mm
- Spanner 13mm



NB!



Designing the adapter, original/factory tires were taken into consideration!

Front: AT26x11-14. Rear: AT26x9-14.

FITTING INSTRUCTIONS


Step 1

Remove the original plastics and front end skidplates. If you want to install the adapter over the original plastics, remove and make cutouts for the bolts.

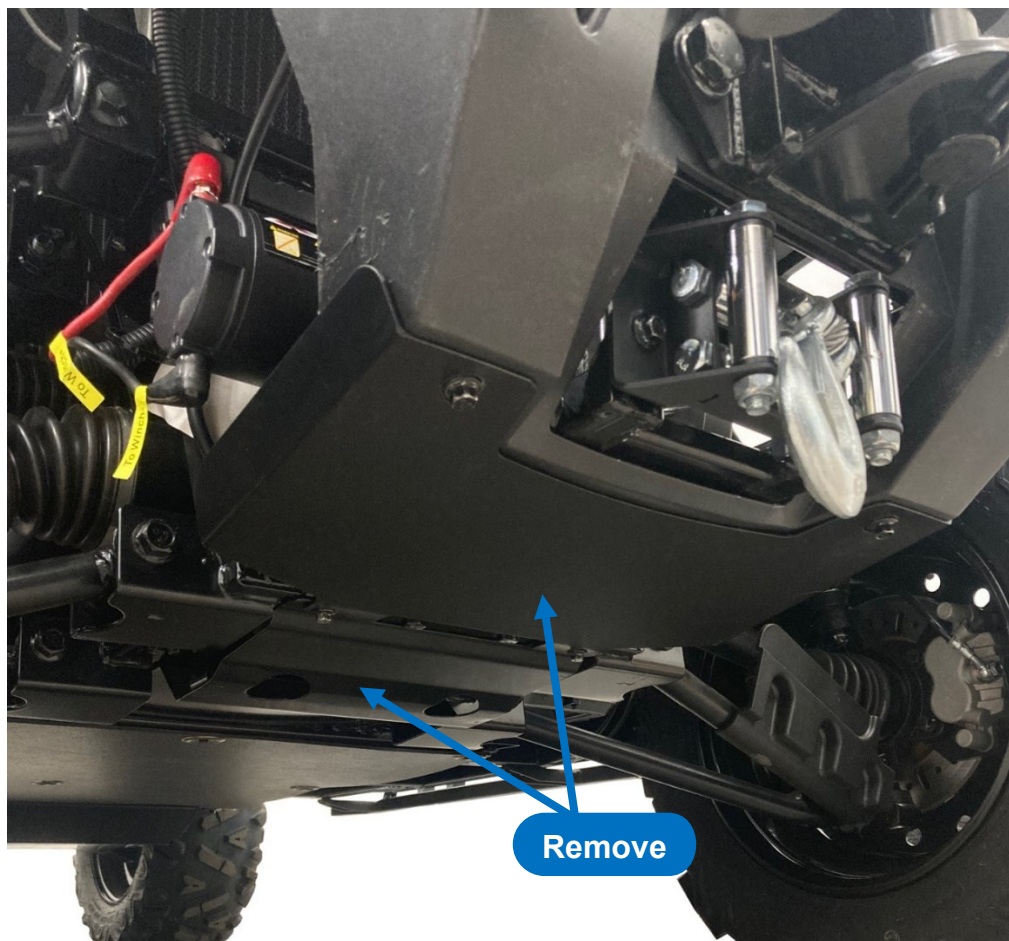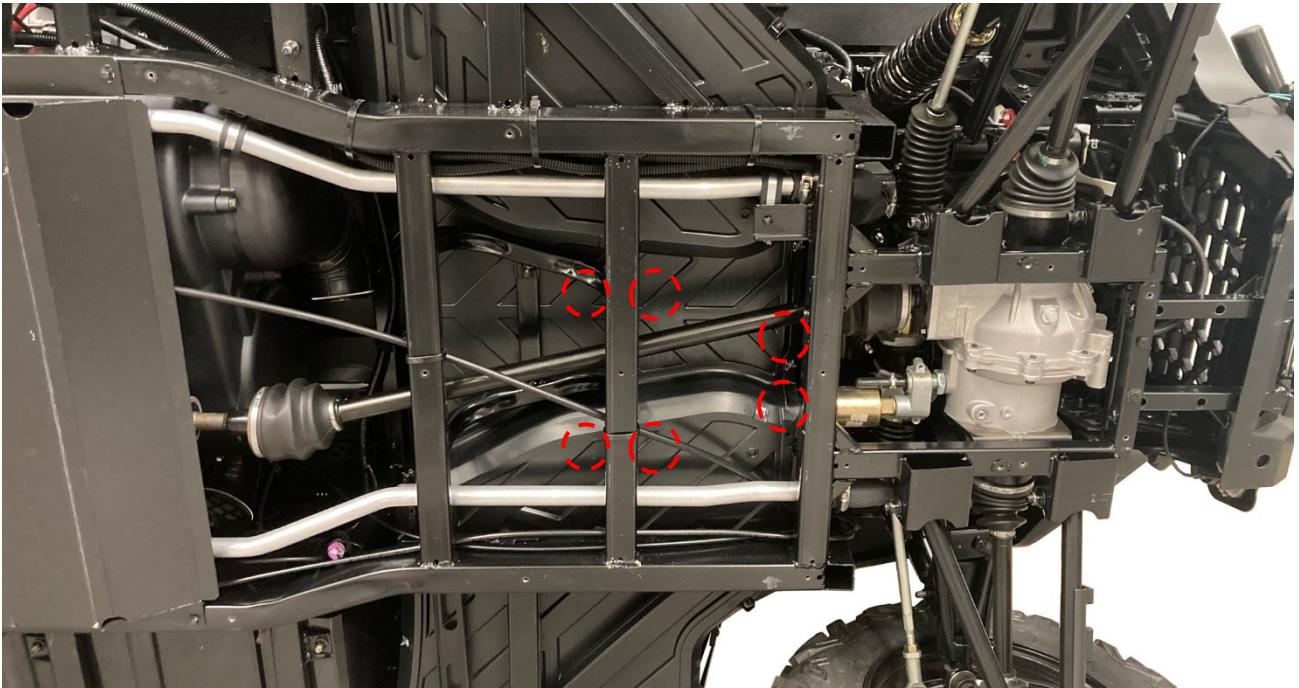



Step 2

Install the adapter (Pos.1) with spacers (Pos.3). Use M8x60 bolts (Pos.7), Ø8/20 washers (Pos.9), M8 nyloc nuts (Pos.10) to secure. Do not tighten the bolts!

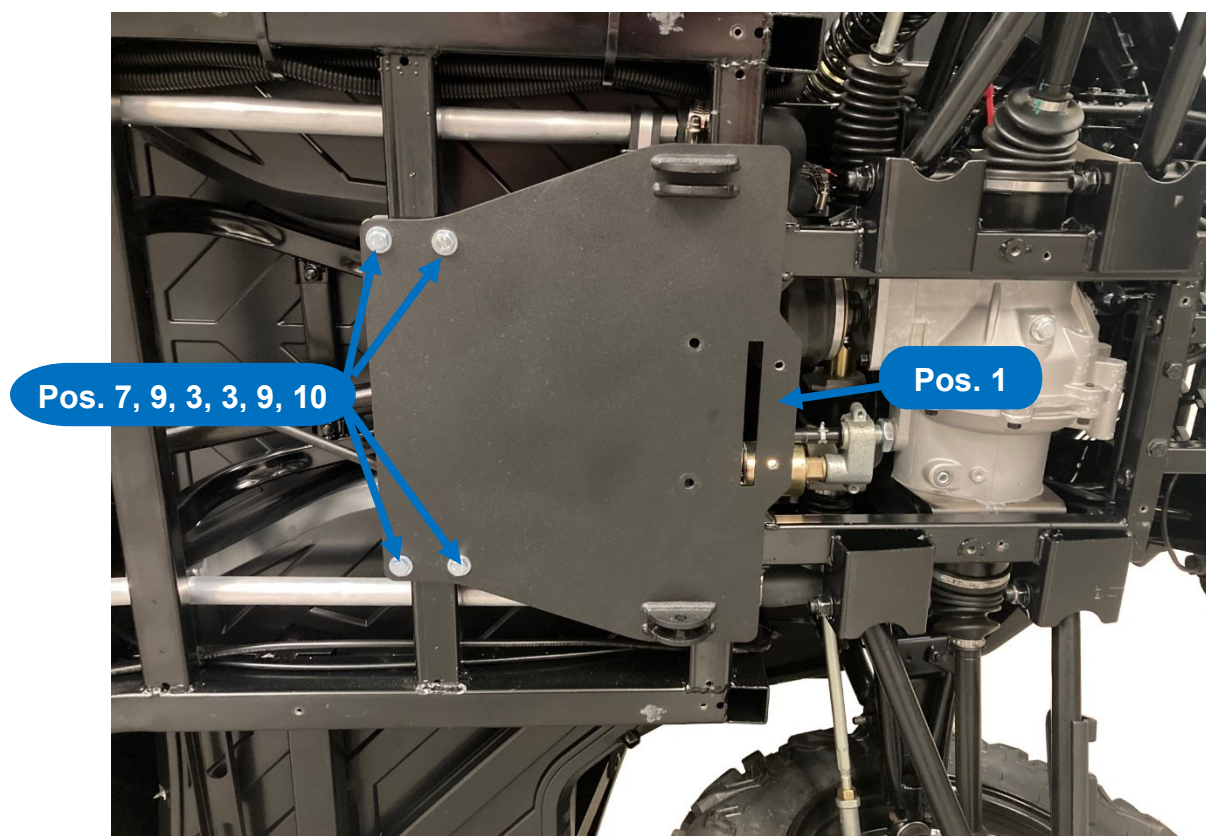


Step 3

Install the mounting bracket (Pos.2) on the adapter. When installing the bracket, insert the front end into the cut-out slot, then rotate it backwards until the bolts can be inserted.

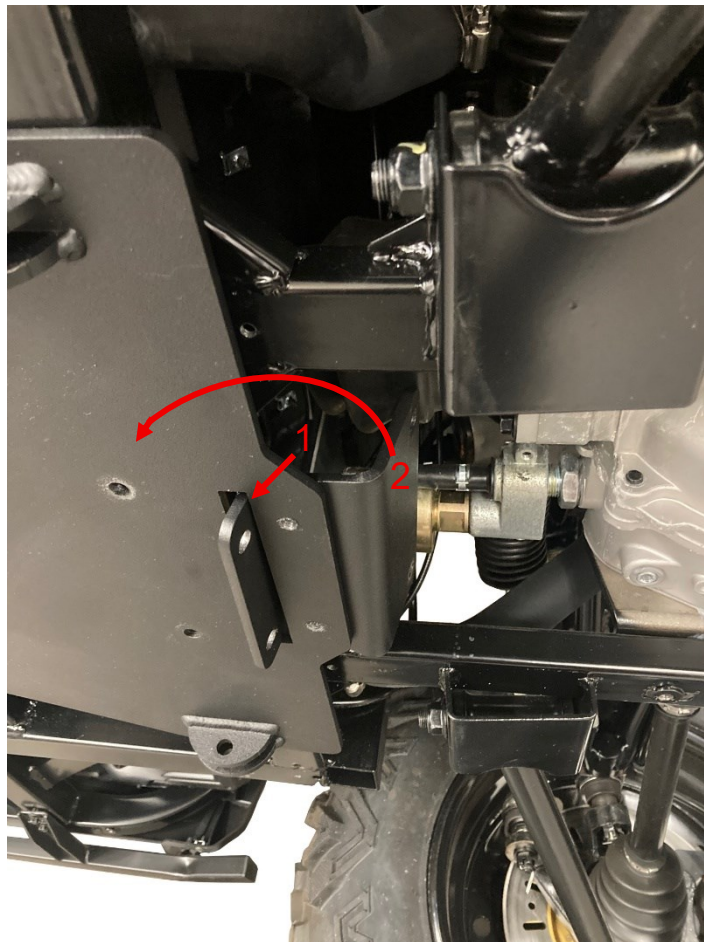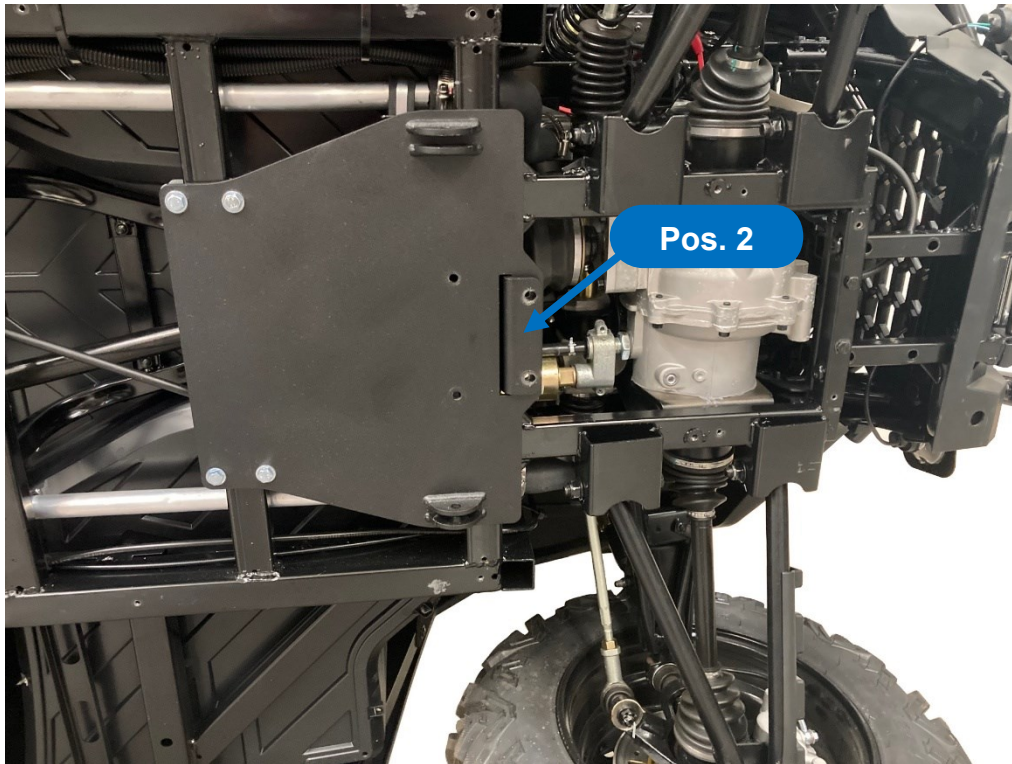


Step 4

Attach the bolts M8x75 (Pos.8), Ø8/20 washers (Pos.9), M8 nyloc nuts (Pos.10). Do not tighten the bolts.

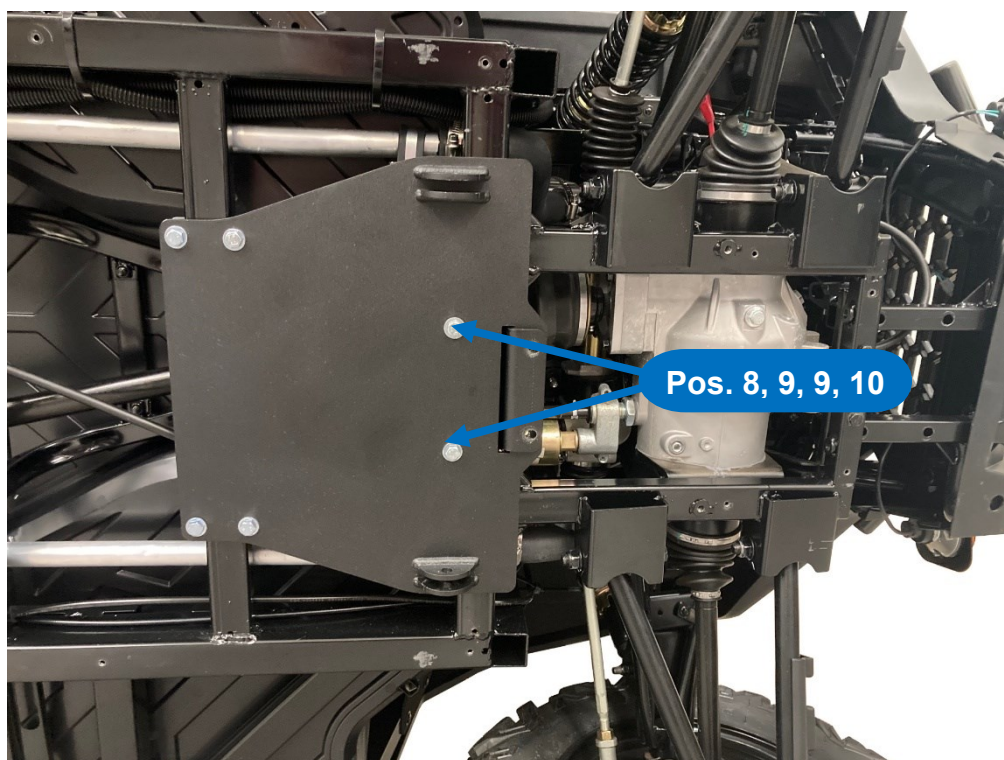


Step 5

Reinstall the front end skidplates.

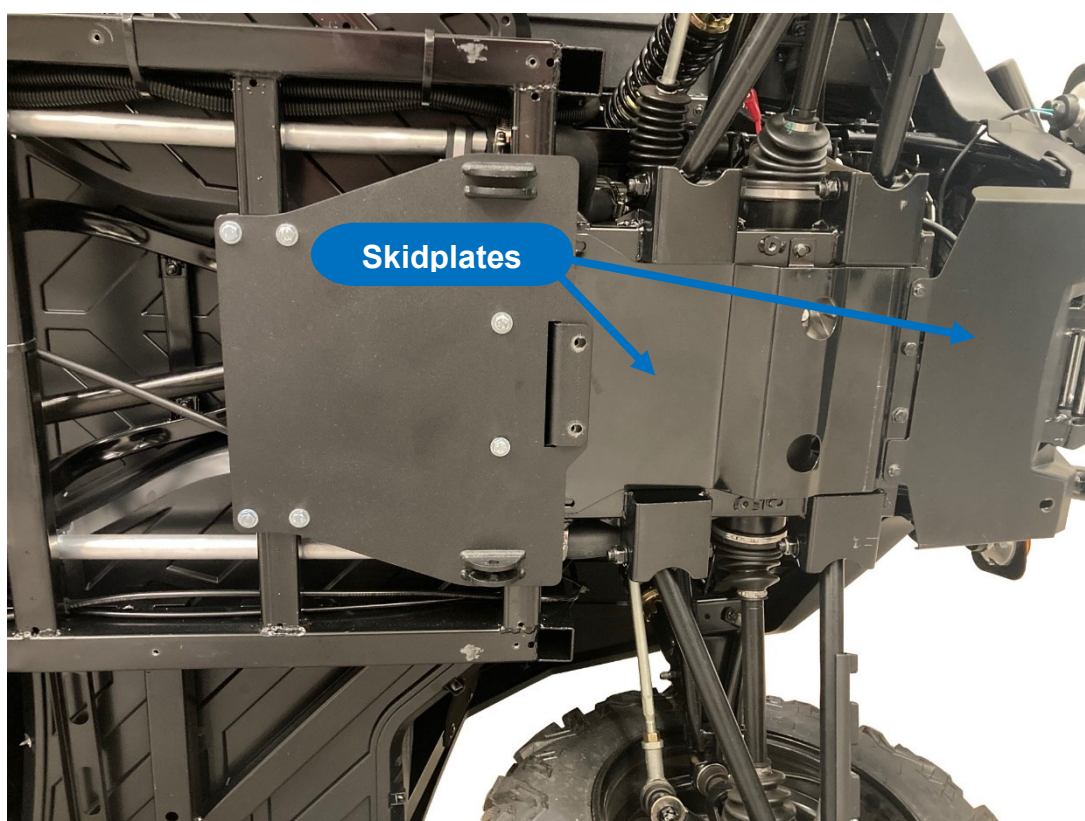

Step 6

Install the bracket fixing bolts, M8x12 (Pos.6) with Ø8/20 washers (Pos.9).

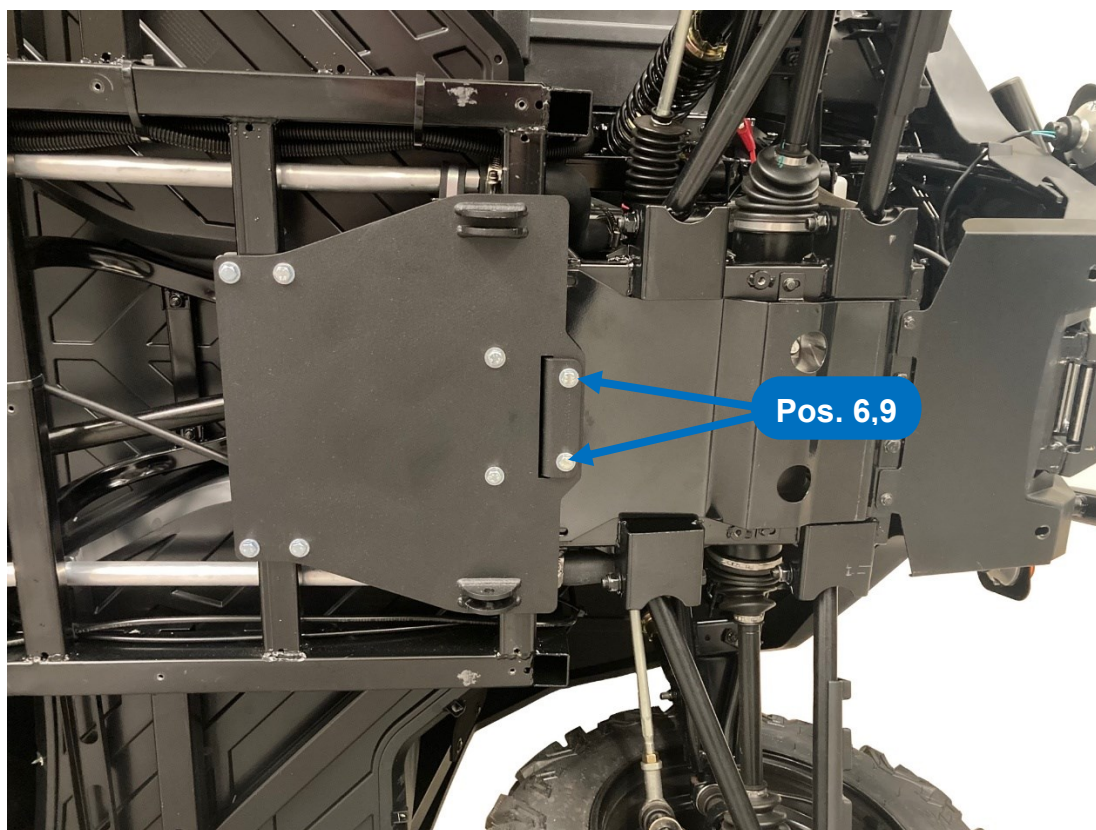


Step 7

Check that the adapter is centered in the frame, and then tighten all the bolts!

Step 8

Install the locking pins (Pos. 4) with the needle cotter pins (Pos. 5).

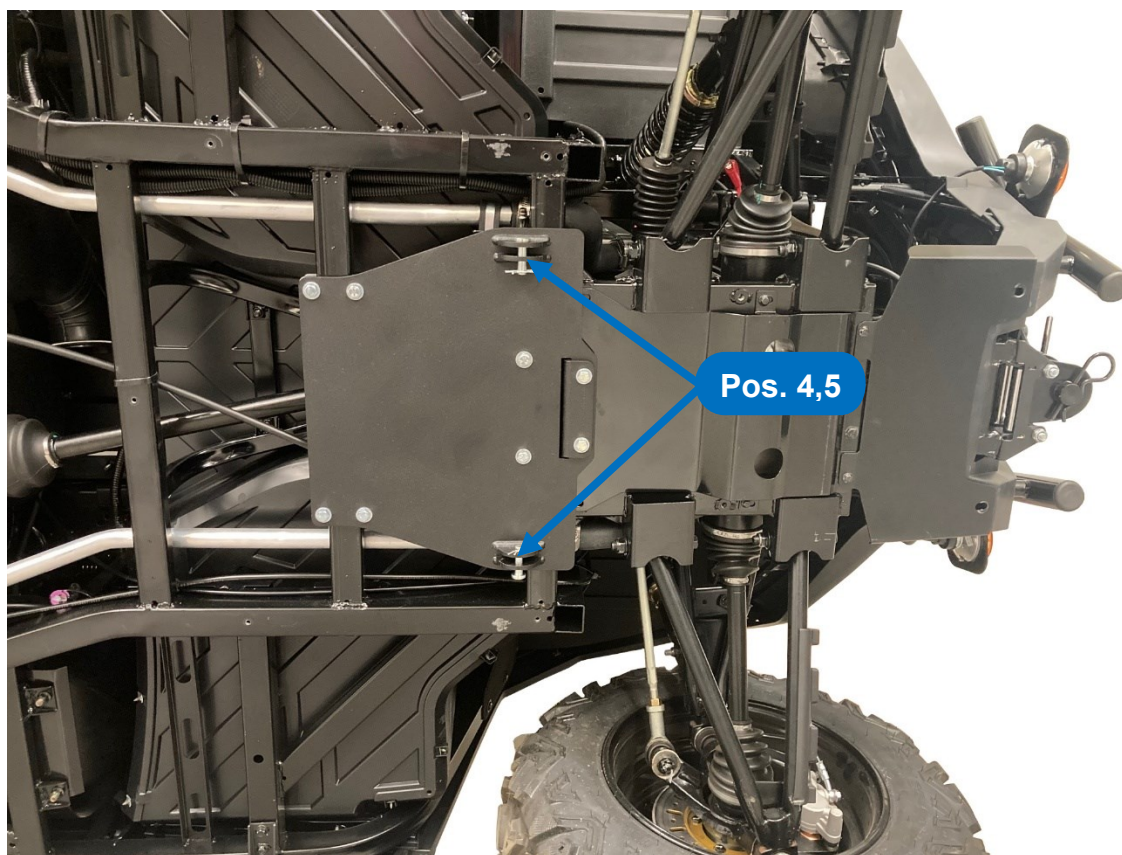

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

