



## MID-MOUNT ADAPTER


# CFMOTO C4/C5 (2026+)

Code 03.19200

Version Rev01 (04062026)



DOWNLOAD MULTILINGUAL USER  
MANUAL

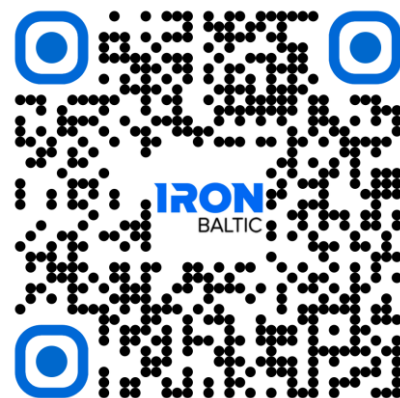


<https://code.ironbaltic.com/u/r4r5jaw9>

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

| Pos. | Description               | Code         | Amount |
|------|---------------------------|--------------|--------|
| 1    | Mid-mount adapter         | 03.19201K    | 1      |
| 2    | Pin 10x40                 | 14.003       | 2      |
| 3    | Locking pin 2mm DIN 11024 | OT.07.01.010 | 2      |
| 4    | U-clamp M8x38mm           | 14.009       | 4      |
| 5    | Washer Ø8/20 SFS 3738     | OT.04.03.030 | 8      |
| 6    | Nut M8 Nyloc DIN985       | OT.03.02.040 | 8      |

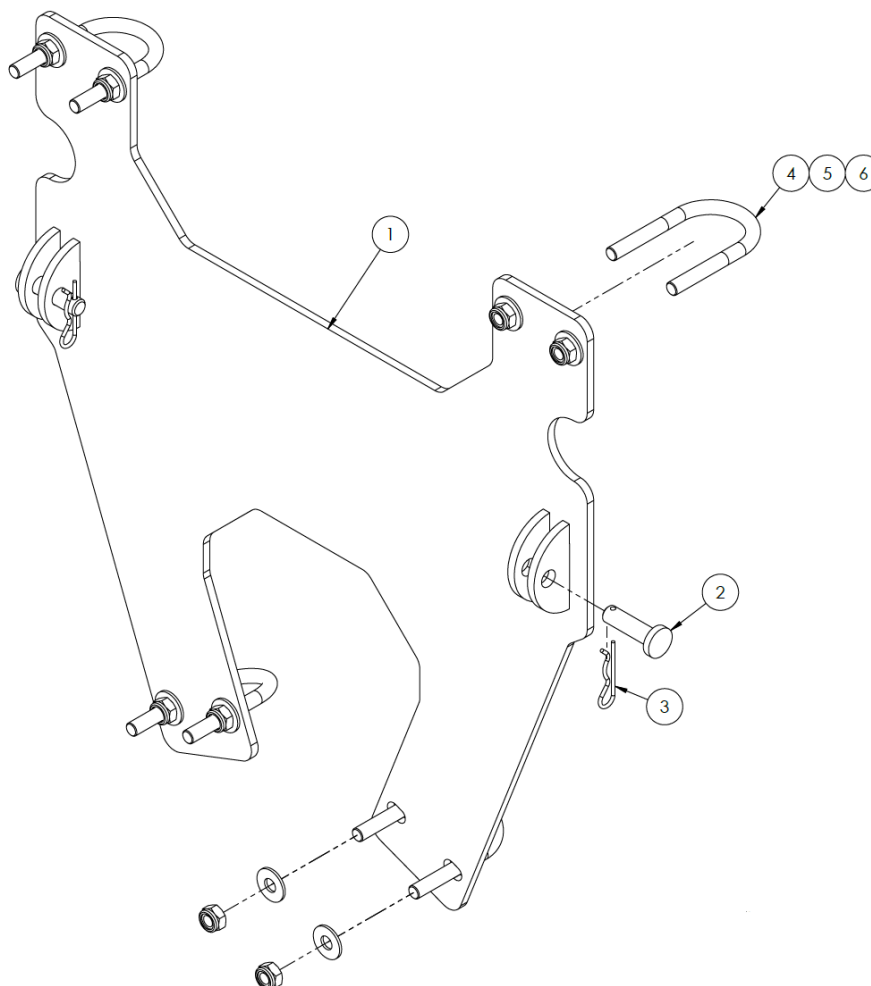

*Numbers on drawing correspond to Pos numbers on specification table.*



## TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 13mm
- Spanner 13mm
- Torx T27



## NB!

**Designing the adapter, original/factory tires were taken into consideration!**

**Front: AT25x8-12. Rear: AT25x10-12.**

# FITTING INSTRUCTIONS

## WITHOUT / ORIGINAL SKID PLATE


### Step 1

Remove the original plastics. If you want to install the adapter on top of the original plastics, remove them and make cutouts for the bolts.




## Step 2

Install the adapter (Pos.1). Use M8x38 U-clamps (Pos.4), Ø8/20 washers (Pos.5), M8 nyloc nuts (Pos.6) to secure. NB! Make sure that the U-clamp does not rest on the brake hose but is in direct contact with the ATVs tube frame!

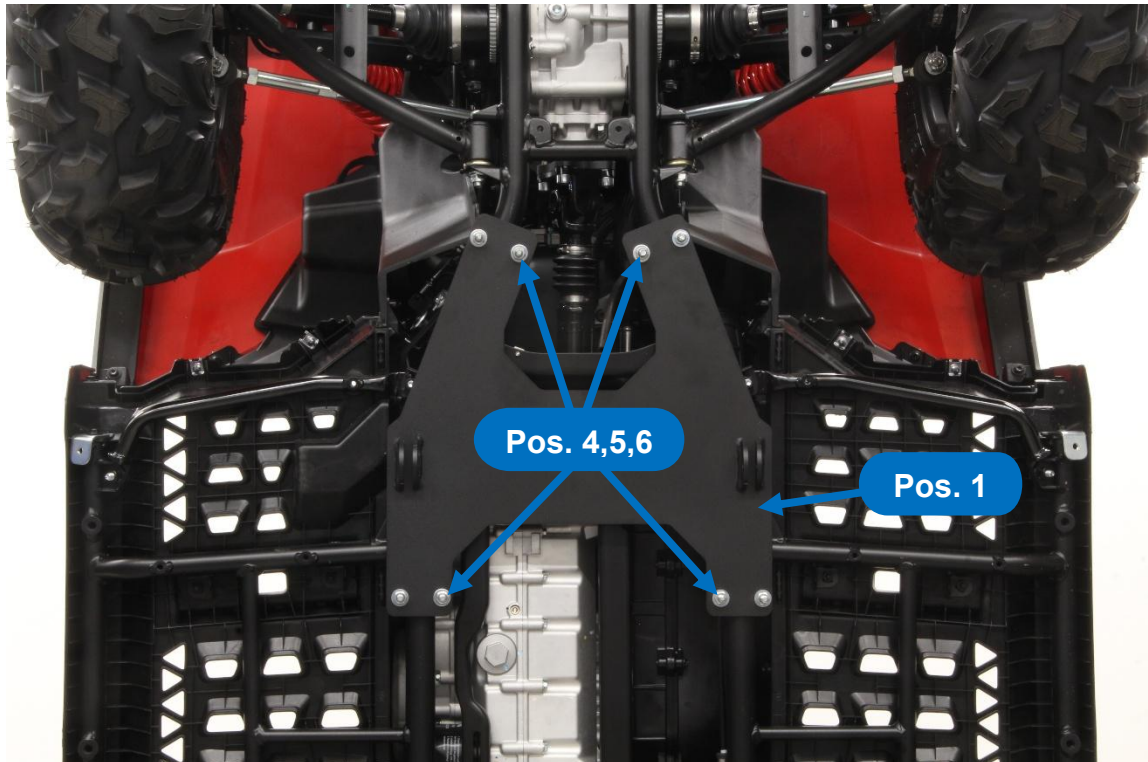


## Step 3

Install the locking pins (Pos. 2) with the needle cotter pins (Pos. 3).

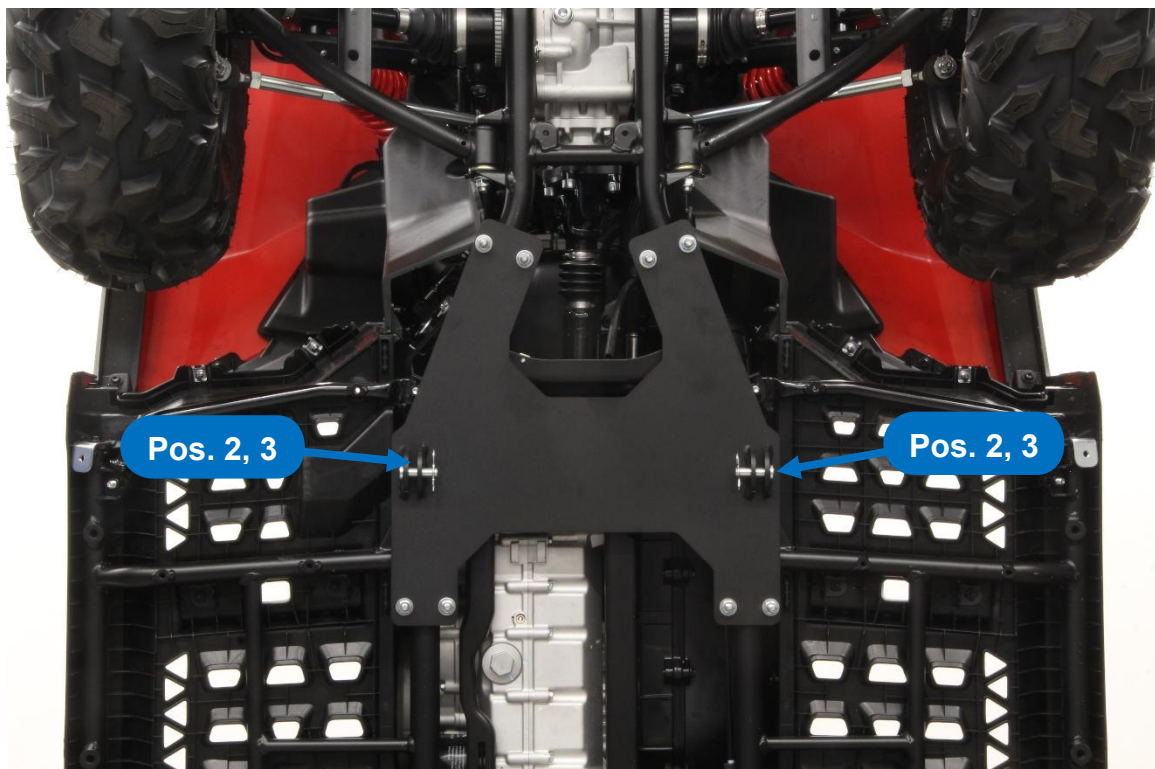


# FITTING INSTRUCTIONS WITH IRON BALTIC SKID PLATE

**Step 1** Remove the skid plate fasteners.

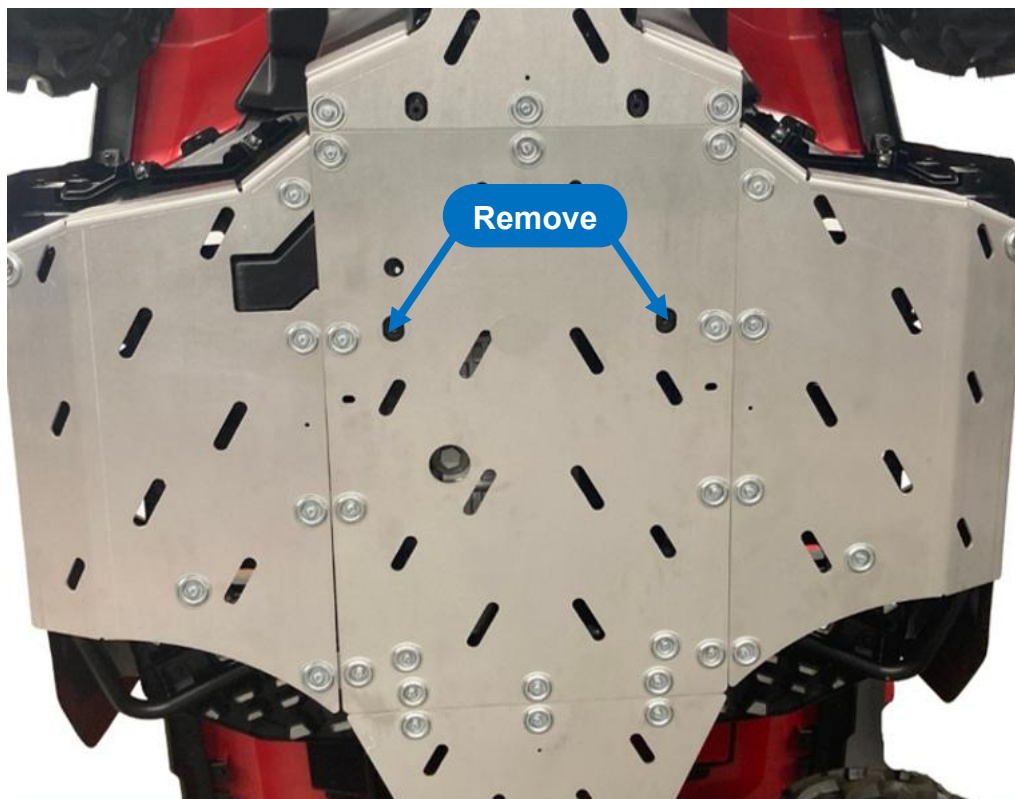


**Step 2** Remove the side skid plates.

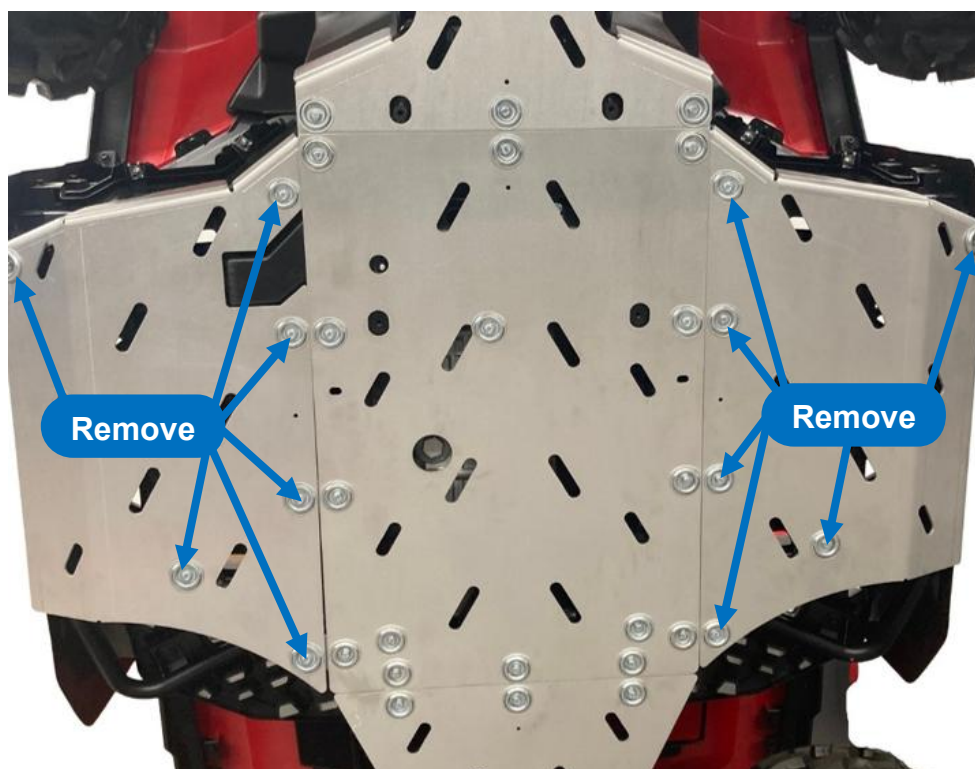


### Step 3

Install the adapter (Pos.1). Use M8x38 U-clamps (Pos.4), Ø8/20 washers (Pos.5), M8 nyloc nuts (Pos.6) to secure. NB! Make sure that the U-clamp does not rest on the brake hose but is in direct contact with the ATVs tube frame!

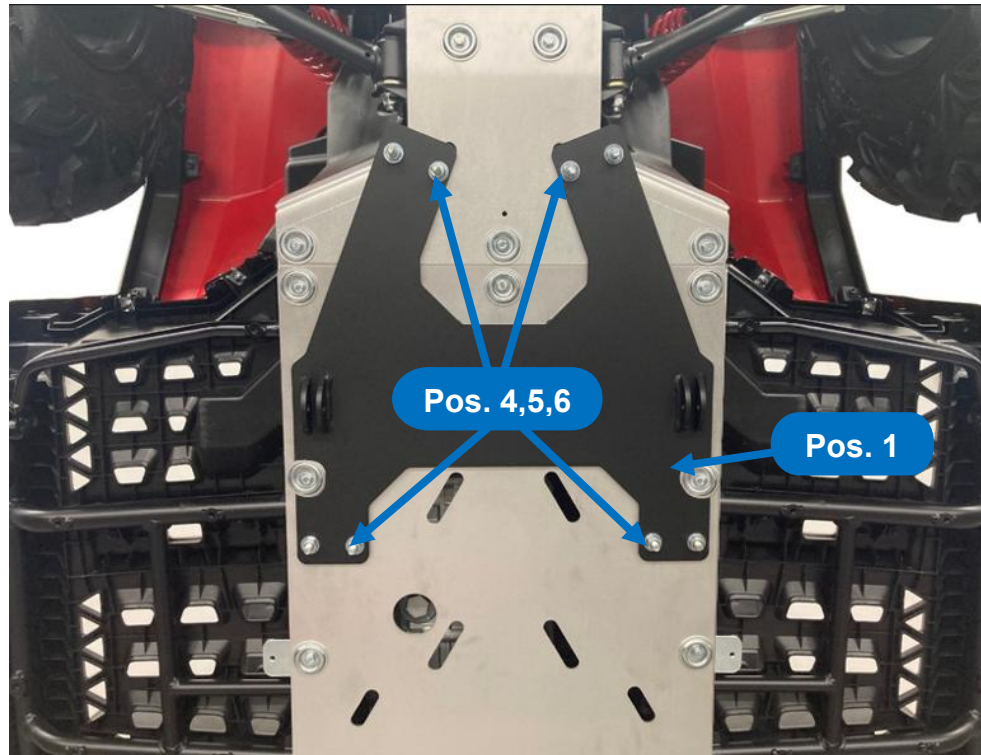


### Step 4

Reinstall the side skidplates

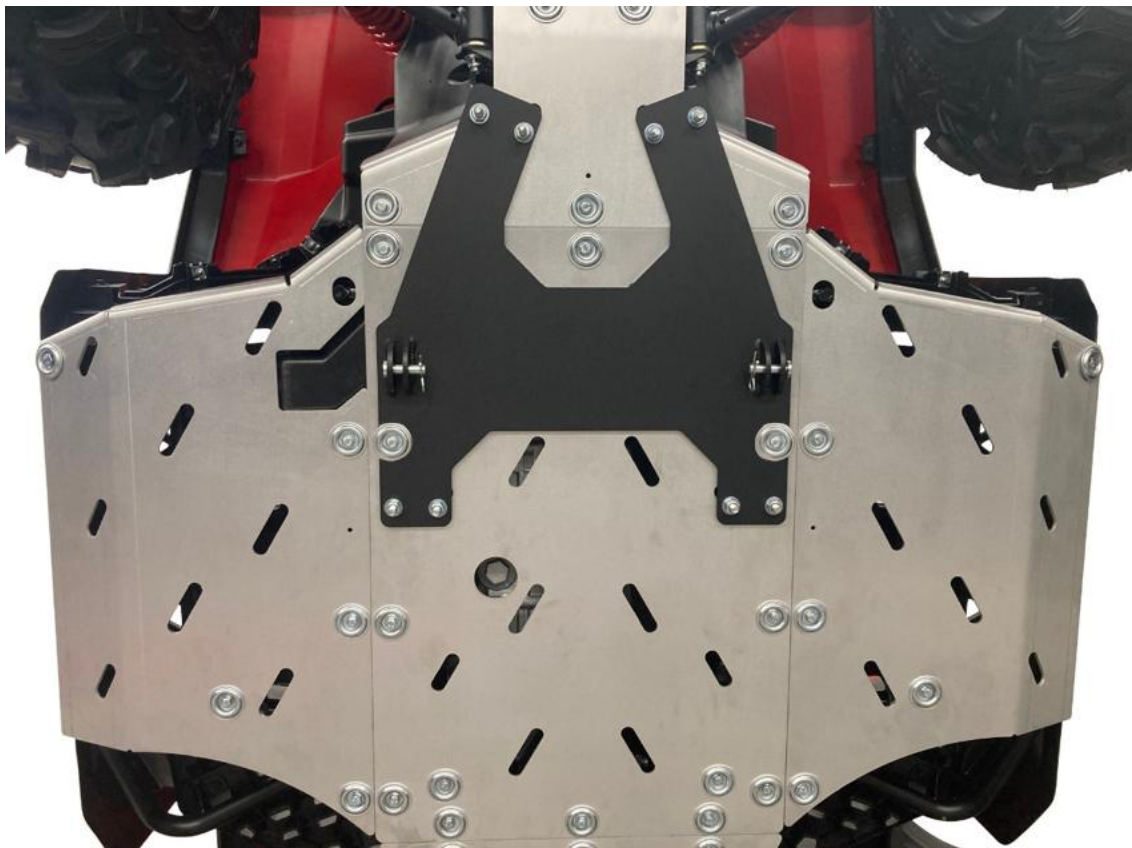

## Step 5

Install the adapter pins (Pos. 2) with locking pins (Pos. 3).

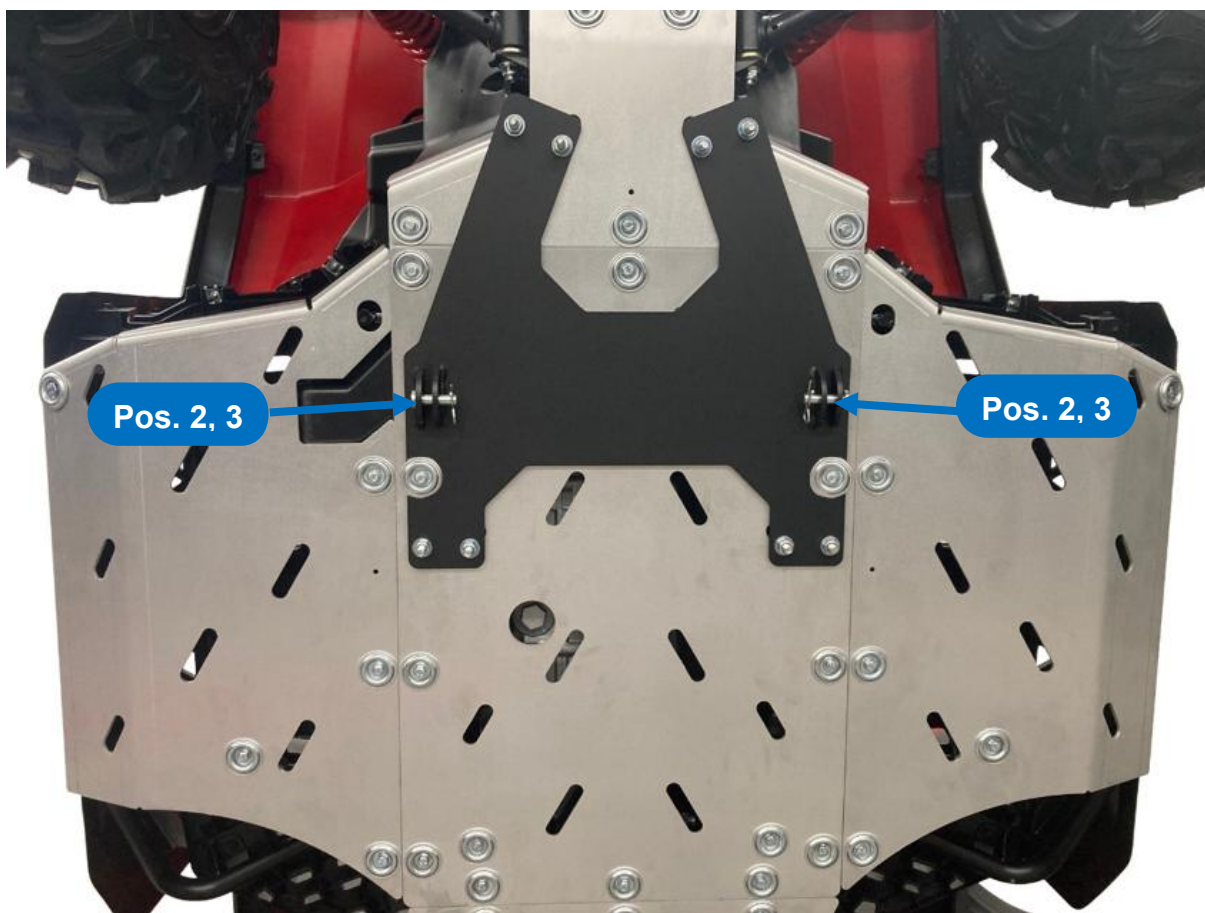

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

