



PLASTIC SKID PLATE



CFMOTO

CForce C4/C5 Touring

Code 02.37100

Version Rev01 (04062026)



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front part 1	02.37101K	1
2	Front part 2	02.37103K	1
3	Middle part	02.37104	1
4	Rear part	02.37105	1
5	Left side protection	02.37106	1
6	Right side protection	02.37107	1
7	Front left A-arm protection	02.37108K	1
8	Front right A-arm protection	02.37109K	1
9	Rear left A-arm protection	02.37110	1
10	Rear right A-arm protection	02.37111	1
11	Installation plate 1	02.2305	2
12	Installation plate 2	02.4011	2
13	Connecting plate	02.5006	12
14	Mounting bracket 1	02.5710	2
15	Mounting bracket 2	02.8210	10
16	Connecting plate 10	02.8312	1
17	Angle bracket	03.1502	2
18	Dished washer	14.503	58
19	Bolt M6x16 DIN 933	OT.02.02.050	26
20	Bolt M6x20 DIN 933	OT.02.02.060	20
21	Bolt M6x30 DIN 933	OT.02.02.080	2
22	Bolt M6x40 DIN 933	OT.02.02.100	2
23	Bolt M6x45 DIN 933	OT.02.02.110	2
24	Bolt M8x20 DIN 933	OT.02.02.180	2
25	Bolt M8x25 DIN 933	OT.02.02.190	2
26	Bolt M10x1,25-40 DIN912	OT.02.06.057	2
27	Washer Ø6/15 SFS 3738	OT.04.03.020	56
28	Nyloc nut M6 DIN985	OT.03.02.030	4

Thread size	Strength class		
	4.8	8.8 (default)	10.9
	Tightening torque (Nm)		
M6	5,5	10	15
M8	13	25	35
M10	25	50	75
M12	45	85	130
M16	115	215	315



TOOLS REQUIRED FOR INSTALLATION:

- Allen key H8
- Socket wrench 10 mm
- Socket wrench 13 mm
- Spanner 10 mm



NB!

We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.




NB!

Designing the skid plate, original/factory tires were taken into consideration!
Front: 25x8.00-12 and rear: 25x10.00-12.



NB!

All pictures in this manual are for illustration purposes only and may differ from real product due to the changes made to the product during improvements!

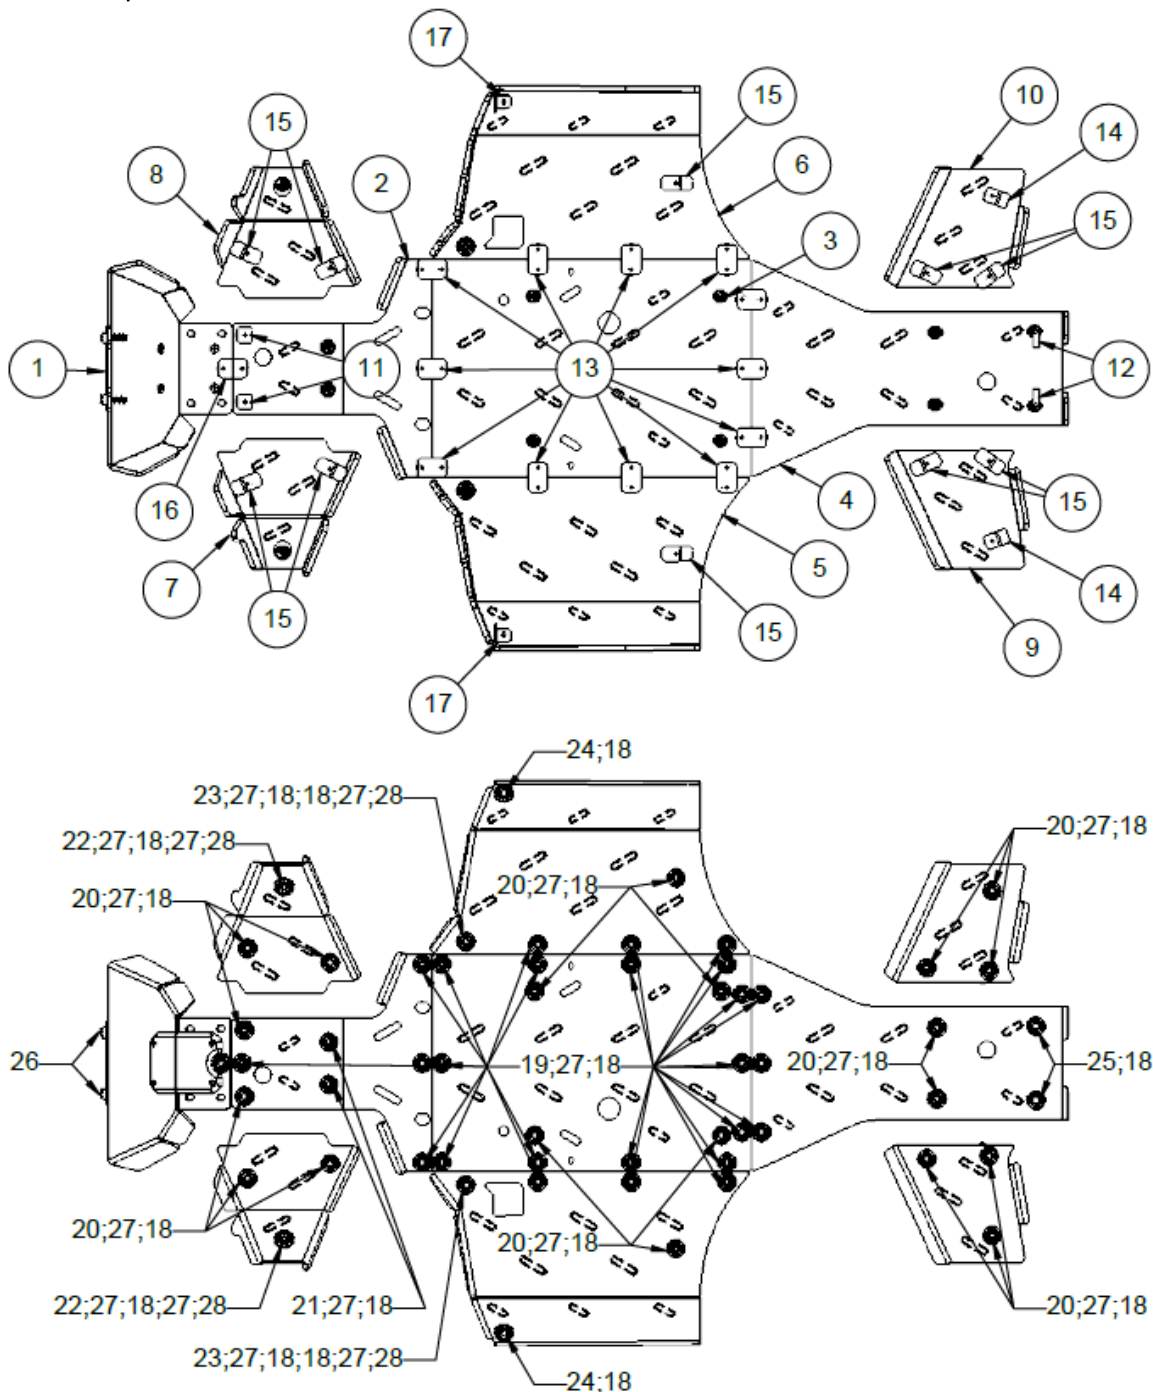

FITTING INSTRUCTIONS

Step 1

Remove original skid plate, fairlead and bolts shown in the picture.




Step 2

Install front part (Pos.1) and fairlead. For fastening use M10x40 bolts (Pos.26) and original washers.




Step 3

Install connecting plate (Pos.16) to the front part (Pos.1). For fastening use M6x16 bolt (Pos.19), Ø6/15 washer (Pos.27) and dished washer (Pos.18).

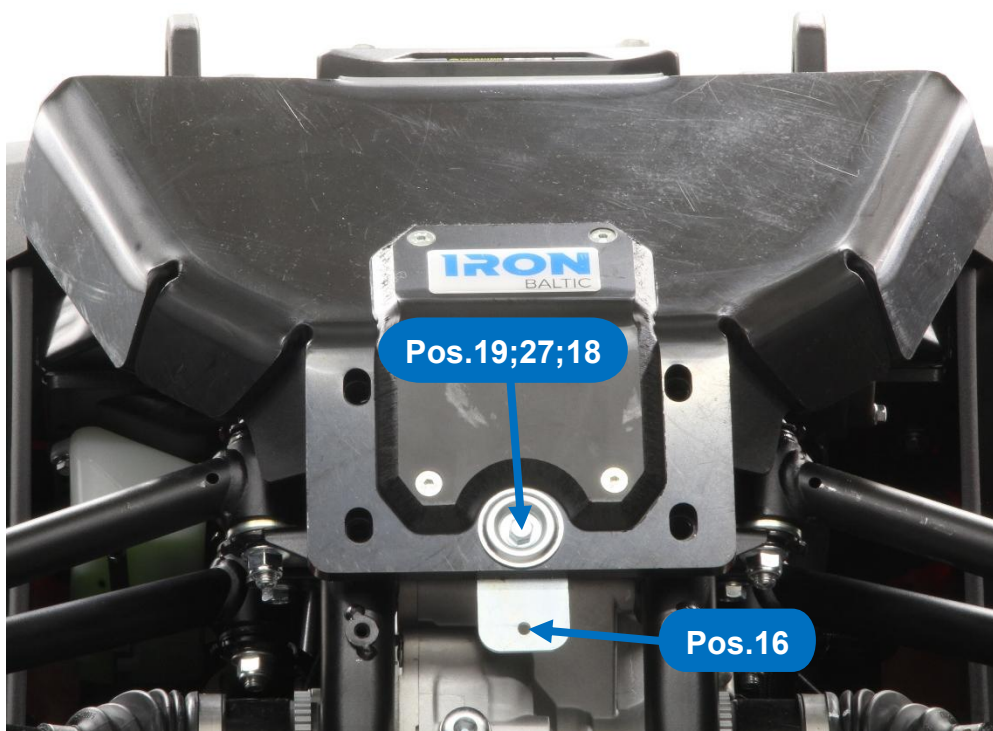


Step 4

Install front part 2 (Pos.2). For fastening use M6x16 bolt (Pos.19), M6x20 bolts (Pos.20), M6x30 bolts (Pos.21), Ø6/15 washers (Pos.27), dished washers (Pos.18) and installation plates 1 (Pos.11).
NB! Installation plate (Pos.12) are used as distance plate, install between skid plate and the ATV frame!

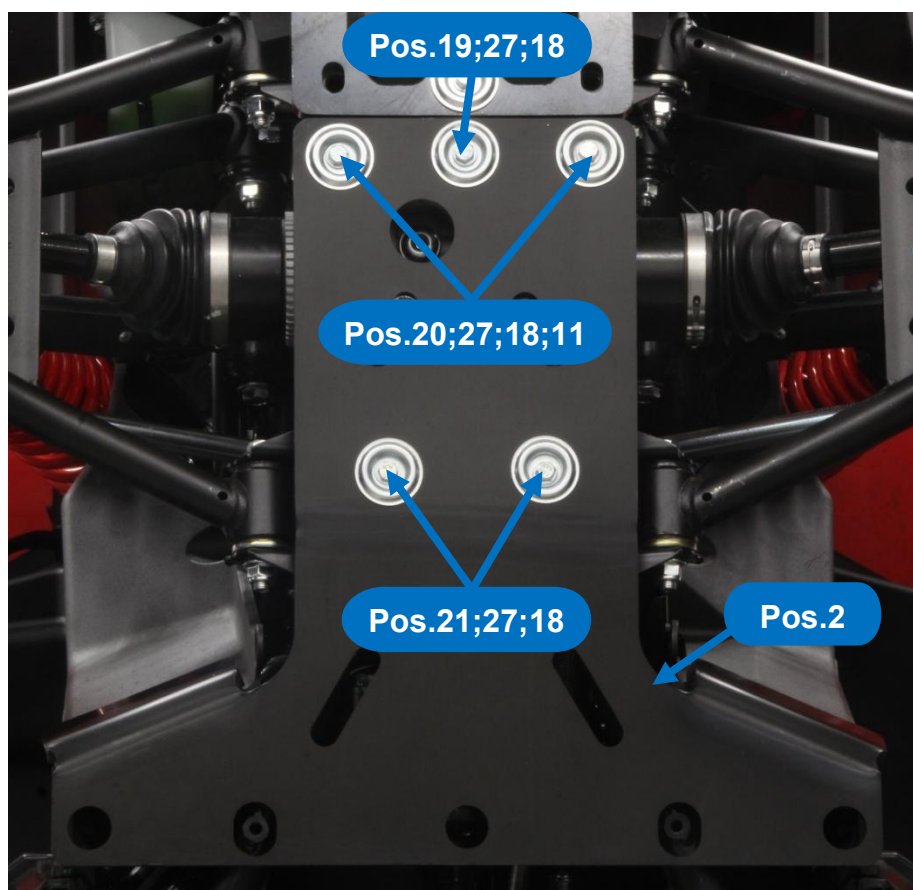


Step 5

Install connecting plates (Pos.13) to the front part 2 (Pos.2). For fastening use M6x16 bolts (Pos.19), Ø6/15 washers (Pos.27) and dished washers (Pos.18).

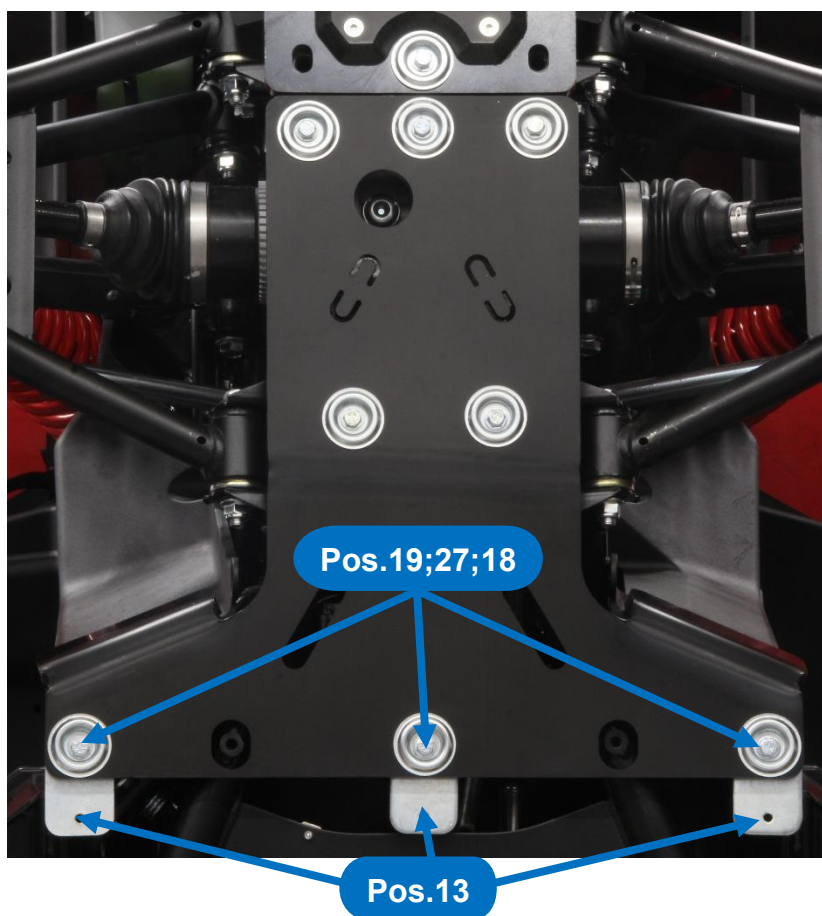


Step 6

Install middle part (Pos.3). For fastening use M6x16 bolts (Pos.19), M6x20 bolts (Pos.20), Ø6/15 washers (Pos.27) and dished washers (Pos.18).

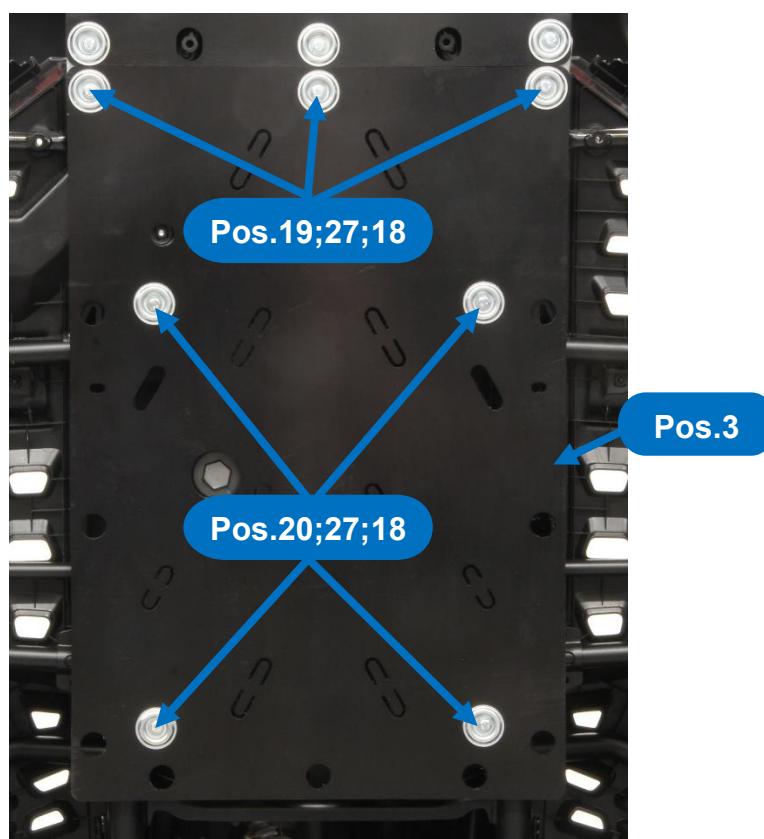


Step 7

Install connecting plates (Pos.13) to the middle part (Pos.3). For fastening use M6x16 bolts (Pos.19), Ø6/15 washers (Pos.27) and dished washers (Pos.18).

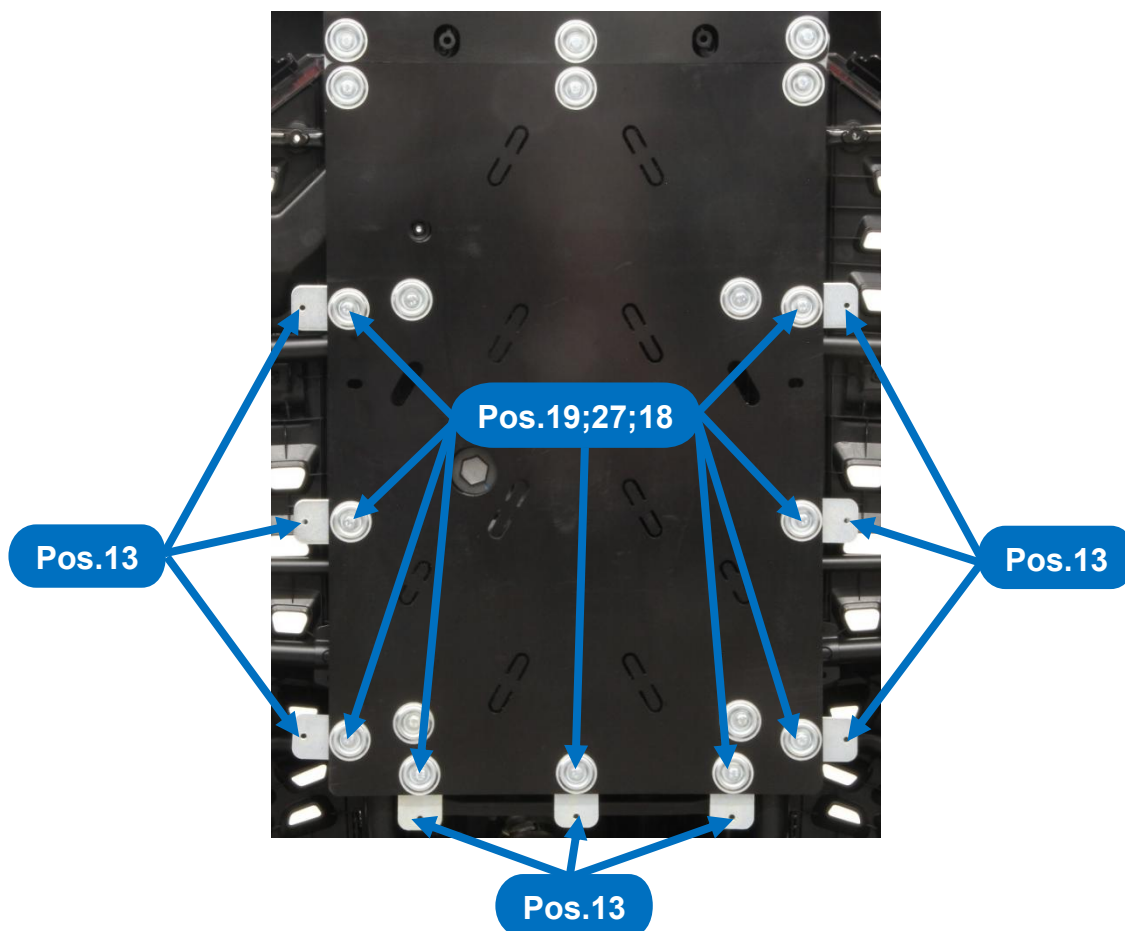


Step 8

Install rear part (Pos.5). For fastening use M6x16 bolts (Pos.19), M6x20 bolts (Pos.20), M8x25 bolts (Pos.25), Ø6/15 washers (Pos.27), dished washers (Pos.18) and installation plates 2 (Pos.12).

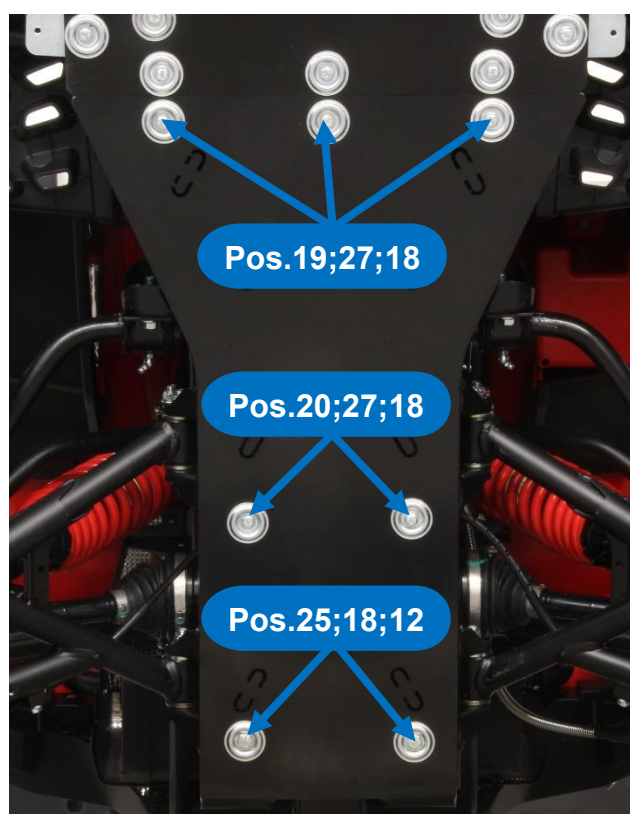


Step 9

Install mounting brackets 2 (Pos.15) and angle brackets (Pos.17).
For fastening angle brackets (Pos.17) use original fasteners.
NB! Angle brackets must be installed under plastic!

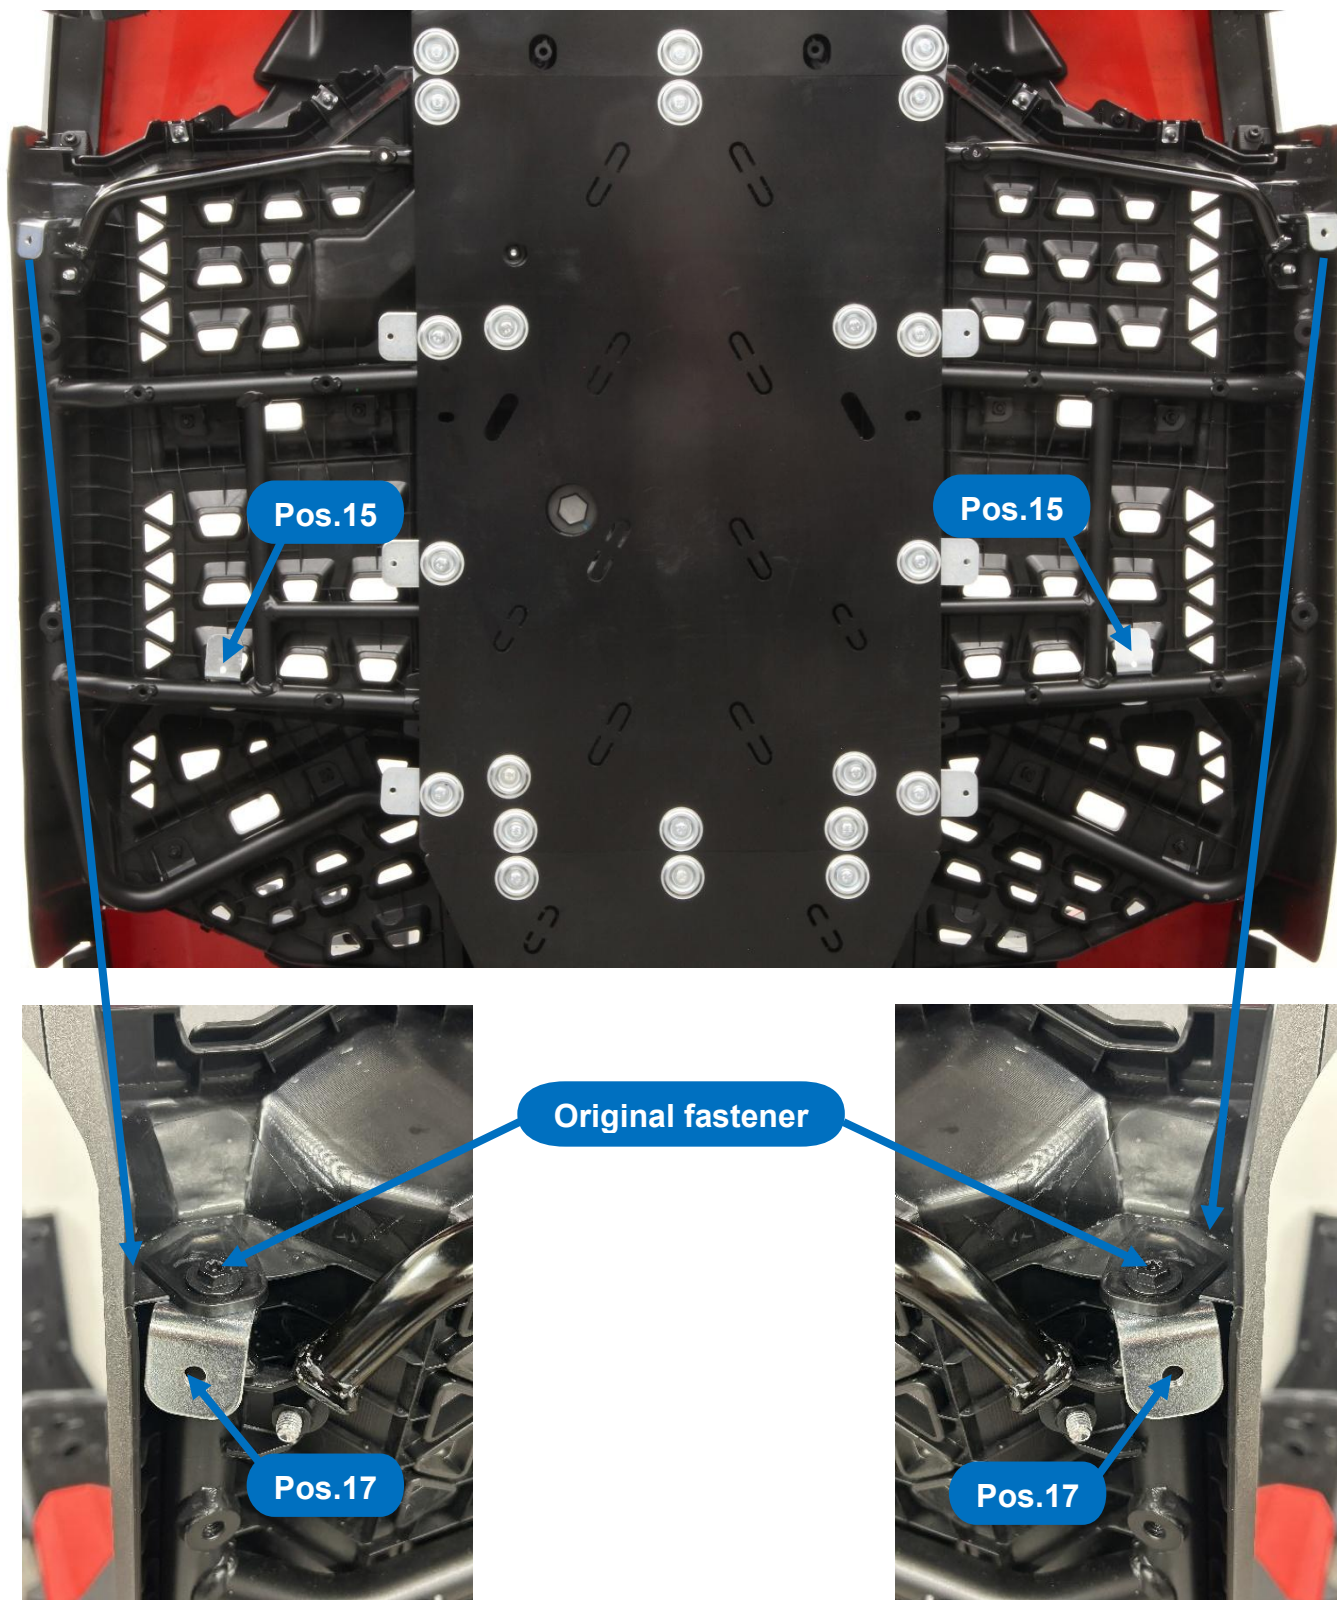



Step 10

Install left (Pos.5) and right (Pos.6) side protections. For fastening use M6x16 bolts (Pos.19), M6x20 bolts (Pos.20), M6x45 bolts (Pos.23), M8x20 bolts (Pos.24) Ø6/15 washers (Pos.27), dished washers (Pos.18) and M6 nyloc nuts (Pos.28).

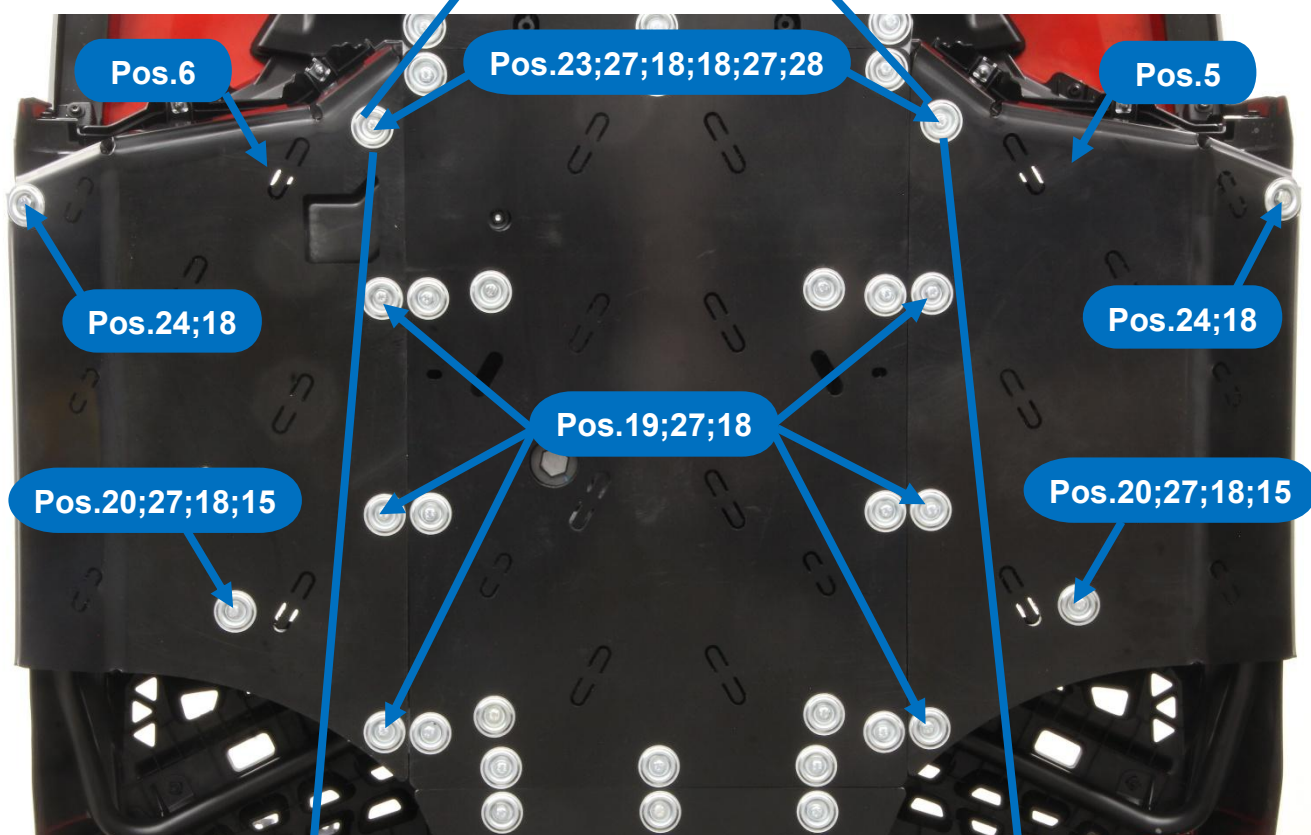



Step 11

Install front left (Pos.7) and front right (Pos.8) A-arm protections. For fastening use M6x20 bolts (Pos.20), M6x40 bolts (Pos.22), Ø6/15 washers (Pos.27), dished washers (Pos.18), M6 nyloc nuts (Pos.28) and brackets 2 (Pos.15).

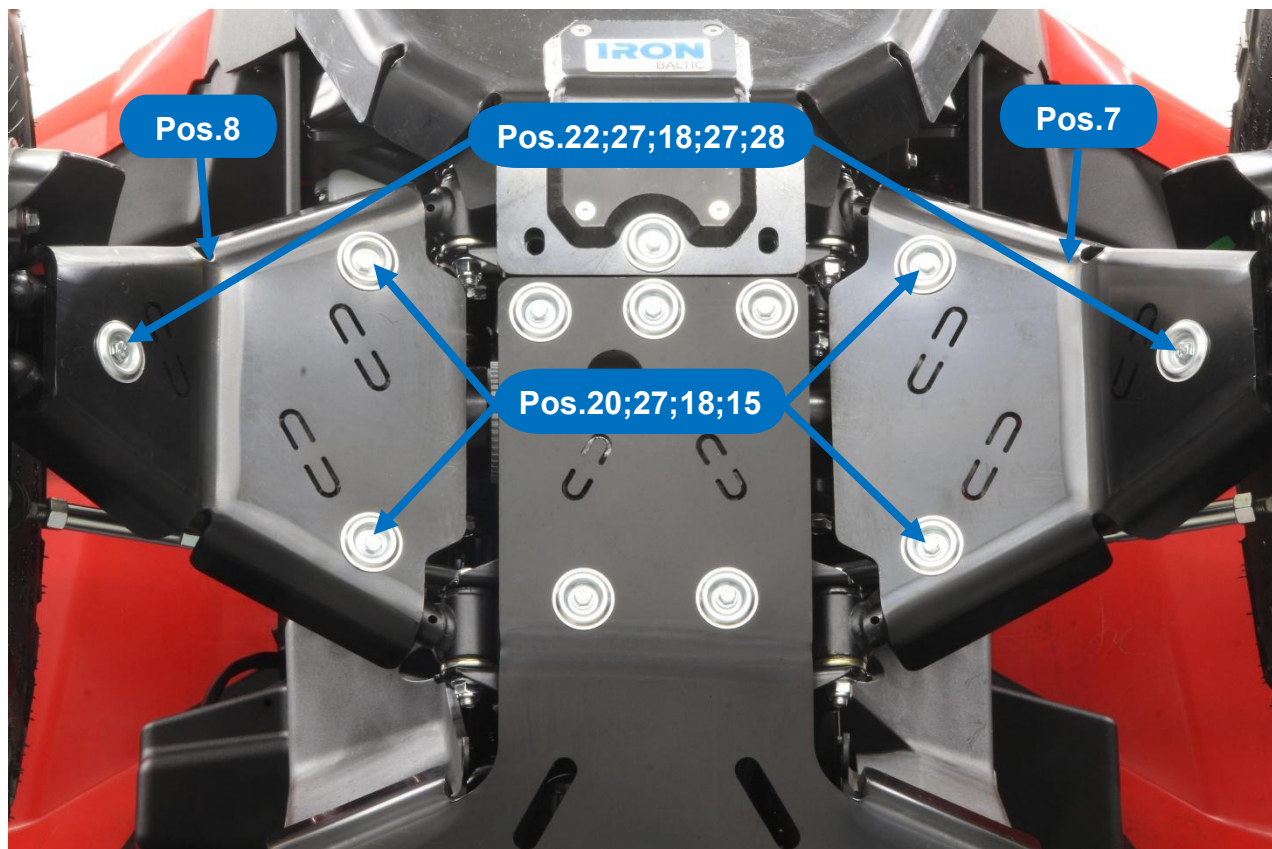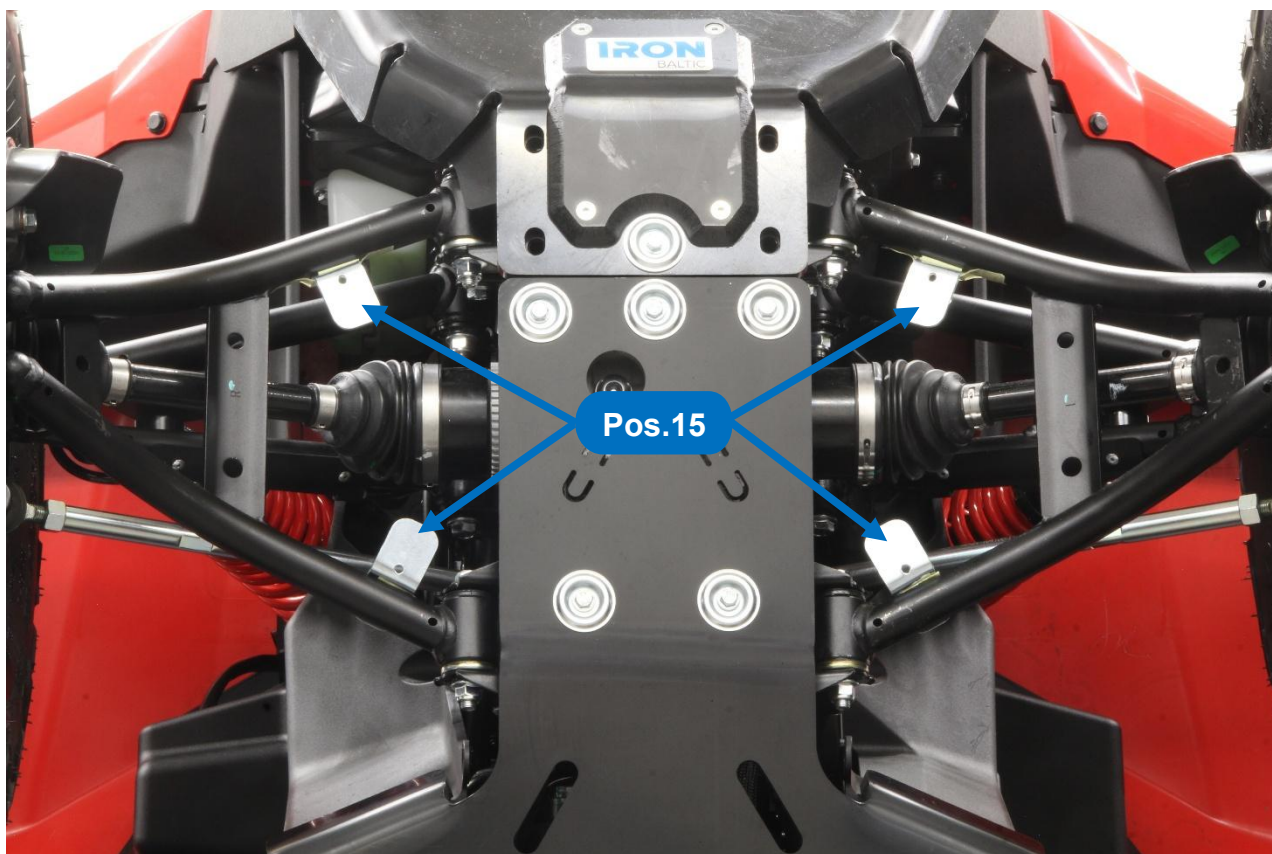

Step 12

Install rear left (Pos.9) and rear right (Pos.10) A-arm protections. For fastening use M6x20 bolts (Pos.20), Ø6/15 washers (Pos.27), dished washers (Pos.18), mounting brackets 1 (Pos.14) and mounting brackets 2 (Pos.15).

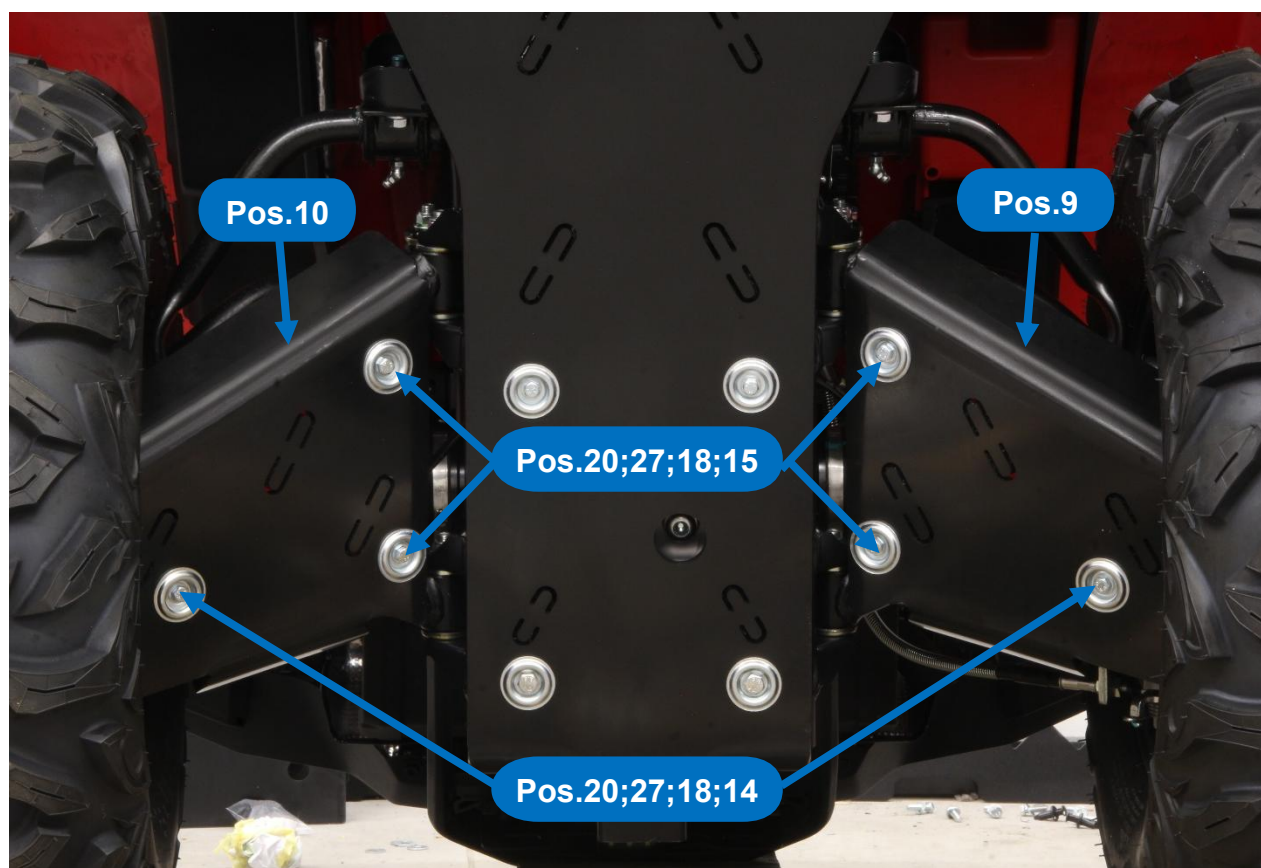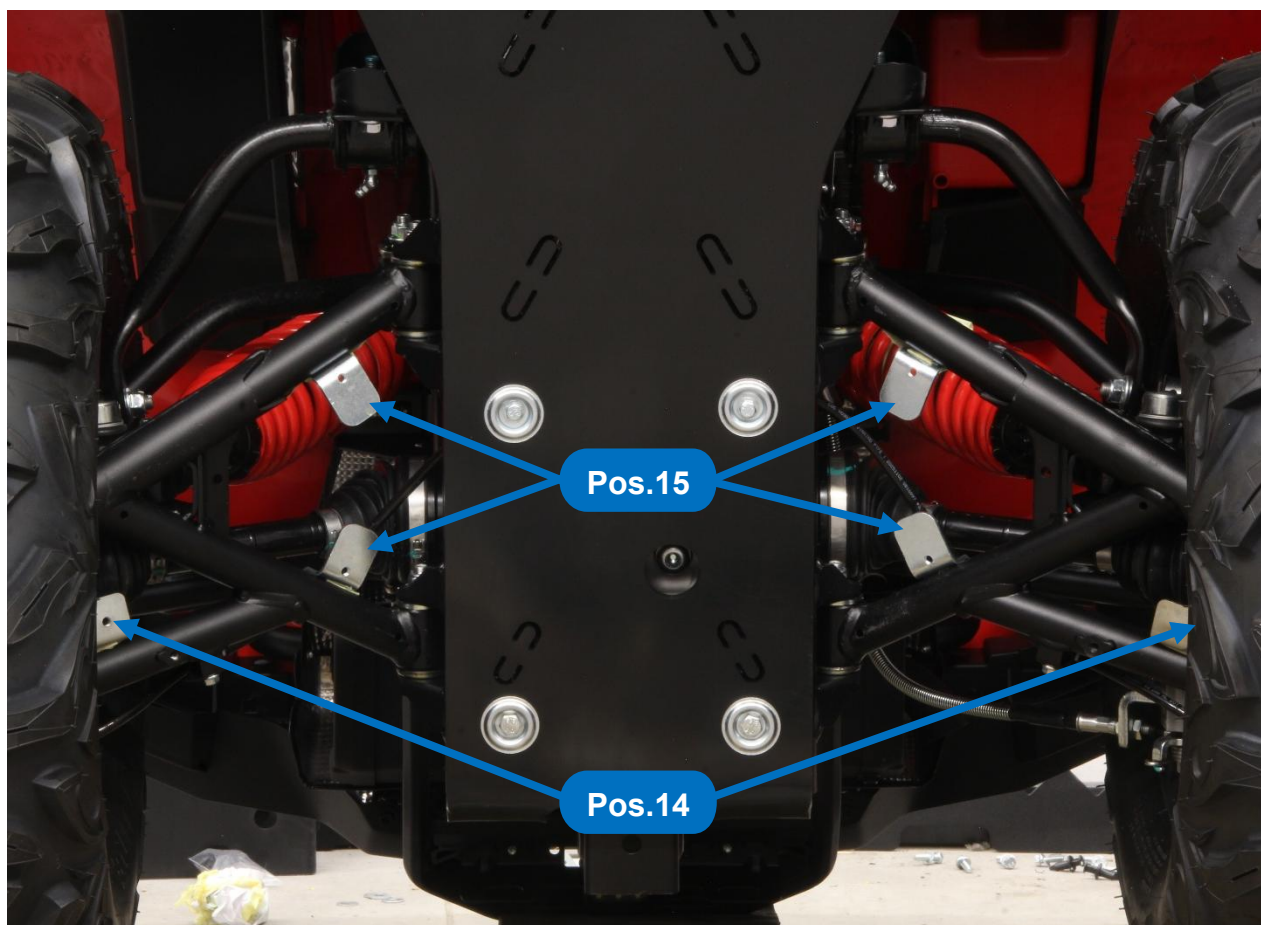

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

