


REAR WINCH ADAPTER

CFMOTO CFORCE C4/C5 GOES TERROX 550L

Code 05.13200

Version Rev01 (04062026)

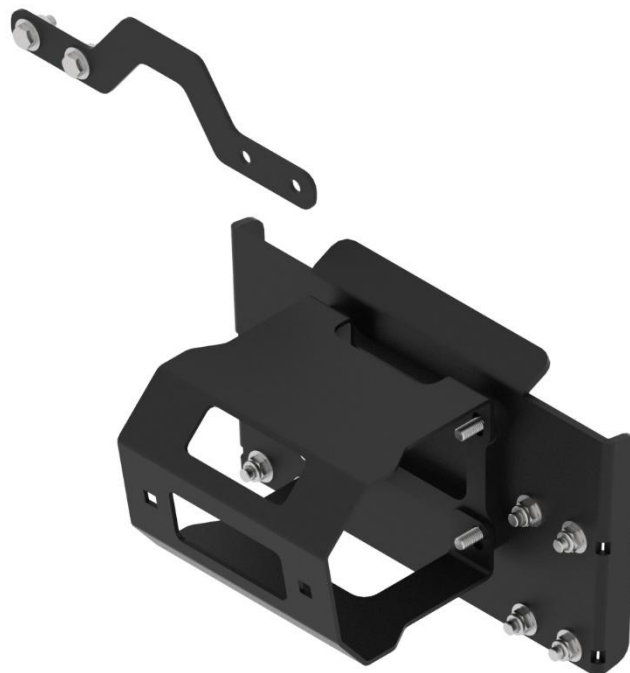

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/yynv7isv

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear winch adapter	05.13201	1
2	Trailer connector plate	05.13202	1
3	Distance plate	05.13203	1
4	Fairlead holder	05.1202	1
5	Zip tie 4.7x366 (must)	PM.11.00.009	1
6	U-bolt M8x28	OT.05.01.010	4
7	Bolt M8x20 DIN 933	OT.02.02.180	2
8	Bolt M8x35 DIN933	OT.02.02.210	4
9	Washer Ø8/20 SFS 3738	OT.04.03.030	16
10	Nyloc nut M8 DIN985	OT.03.02.040	10

Thread size	Strength class		
	4.8	8.8 (default)	10.9
	Tightening torque (Nm)		
M6	5,5	10	15
M8	13	25	35
M10	25	50	75
M12	45	85	130
M16	115	215	315



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 13 mm
- Spanner 13 mm
- Zip tie cutter



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**




NB!

**Designing the rear winch adapter, original/factory tires were taken into consideration!
Front: 25x8.00-12 and rear: 25x10.00-12.**



NB!

All pictures in this manual are for illustration purposes only and may differ from real product due to the changes made to the product during improvements!

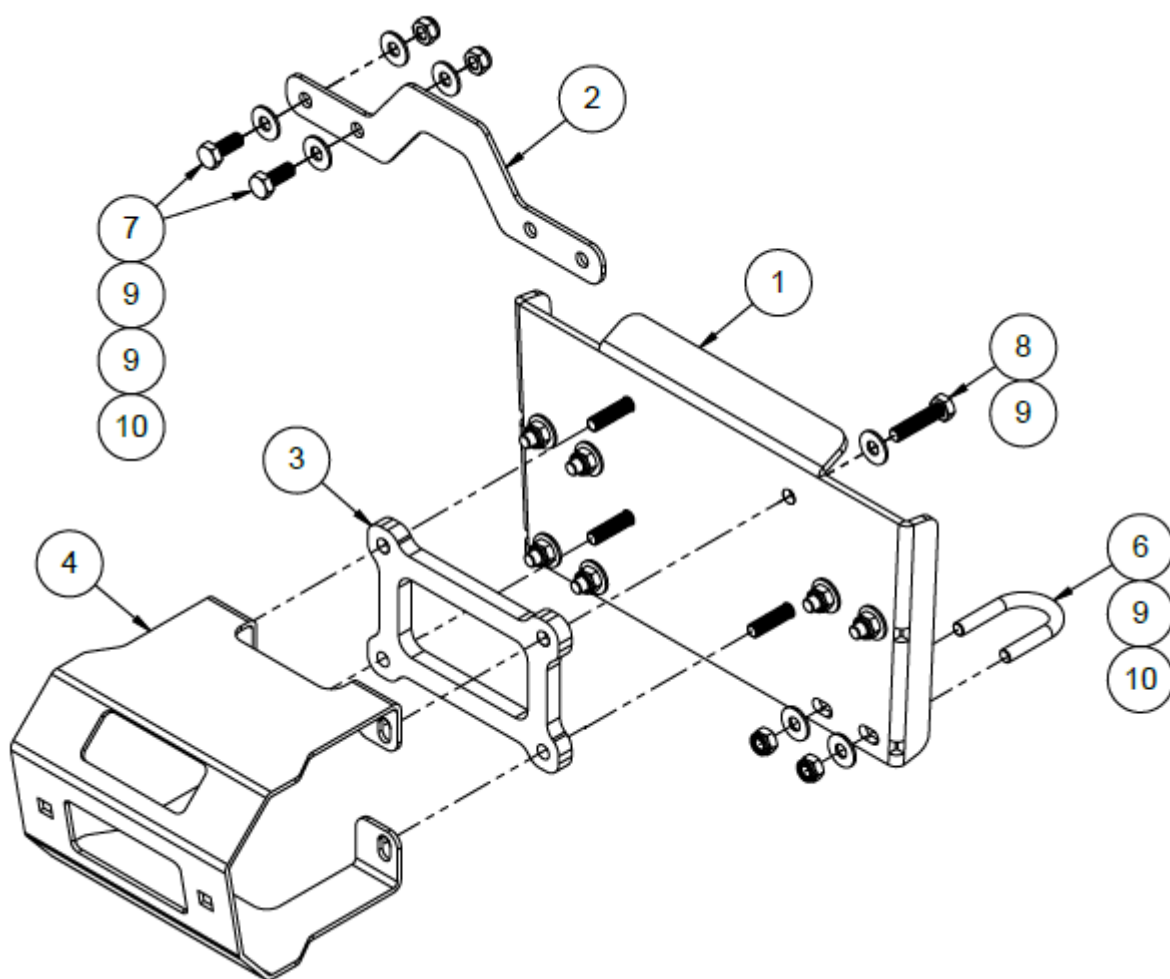


Numbers on drawing correspond to Pos numbers on specification table.

FITTING INSTRUCTIONS

Step 1

Remove trailer socket.

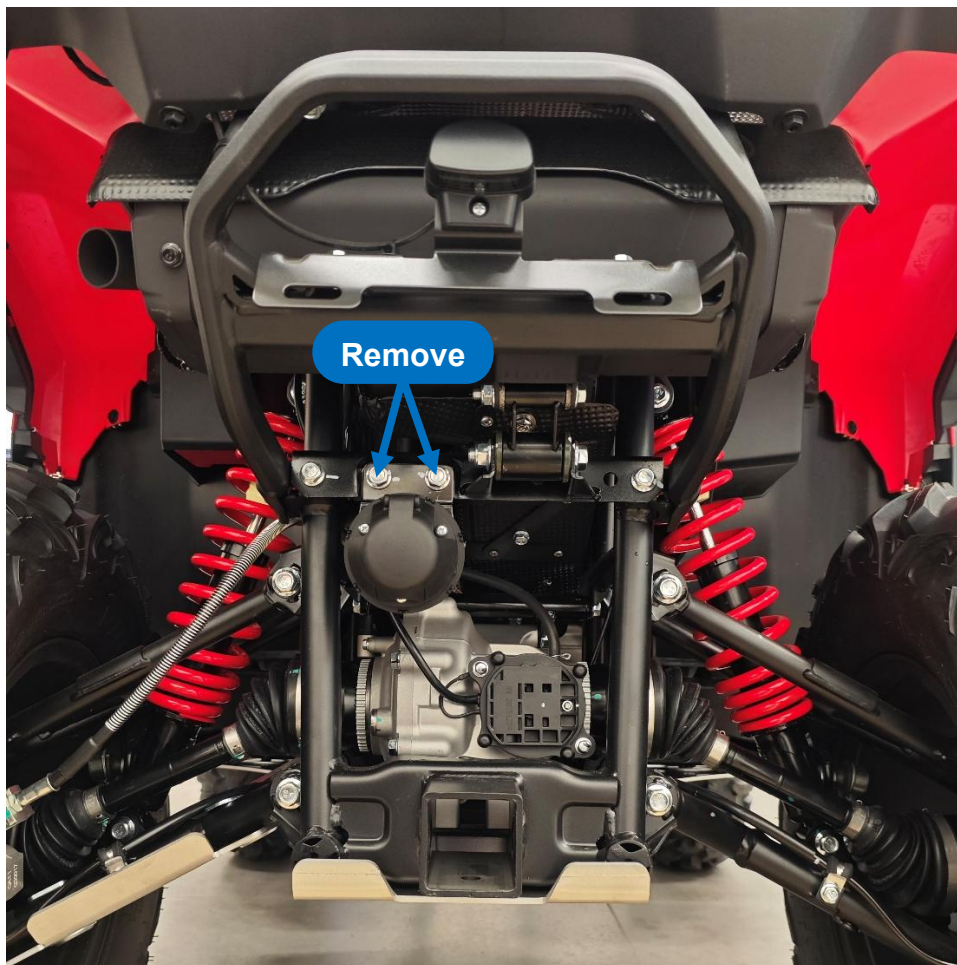

Step 2


Release or cut zip tie as shown in the picture.




Step 3

Install trailer connector plate (Pos.2) with trailer socket. For fastening use original bolts, M8x20 bolts (Pos.7), Ø8/20 washers (Pos.9) and M8 nyloc nuts (Pos.10).

CFMoto CForce C4/C5

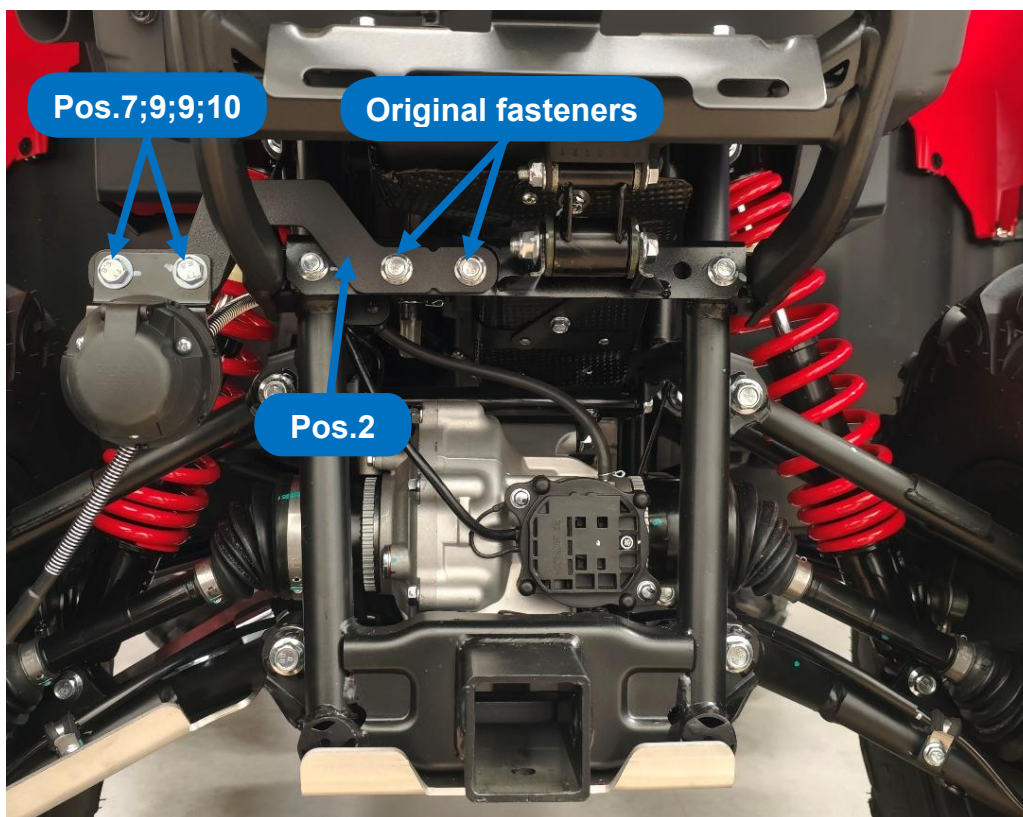

Goes Terrox 550L

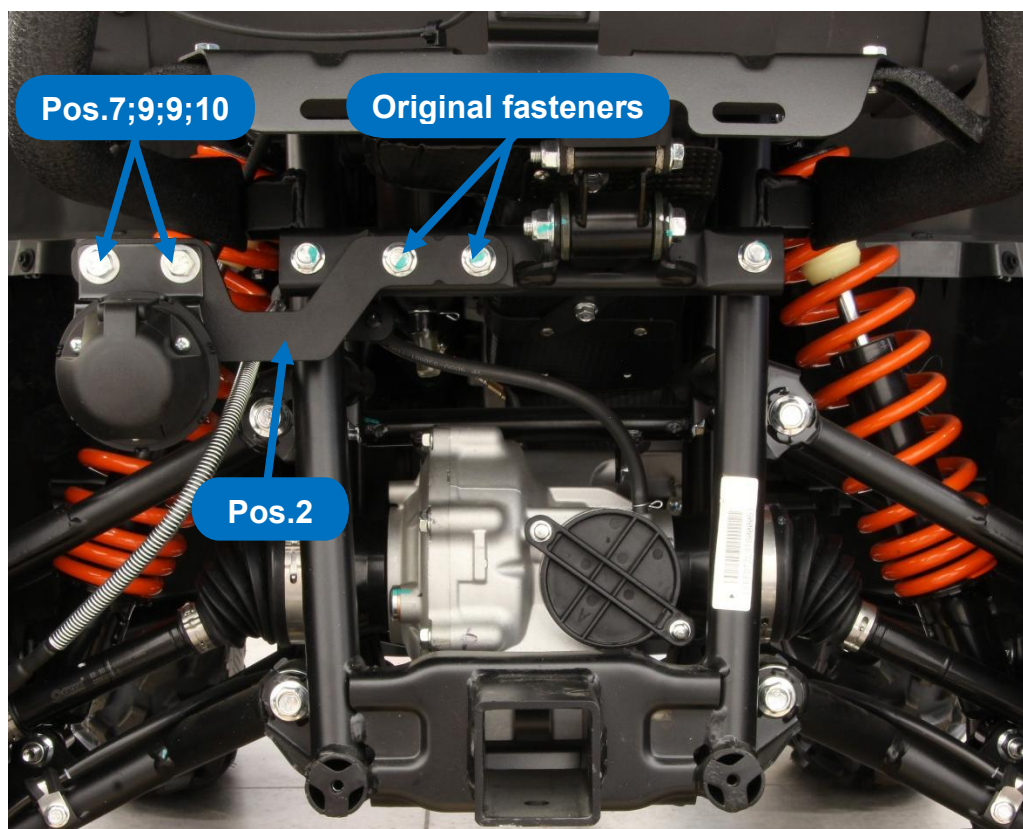

Step 4



Install fairlead to the fairlead holder (Pos.4), using fasteners from winch kit. Next place winch into the fairlead holder.



Step 5



Install distance plate (Pos.3) and winch together with the fairlead holder to the adapter (Pos.1). For fastening use M8x35 bolts (Pos.8) and Ø8/20 washers (Pos.9).

NB! Distance plate goes between adapter and fairlead holder

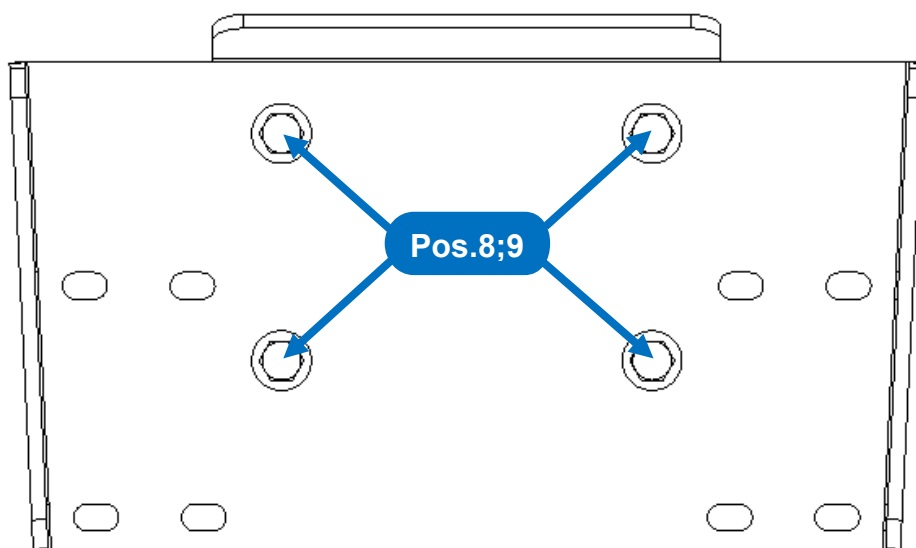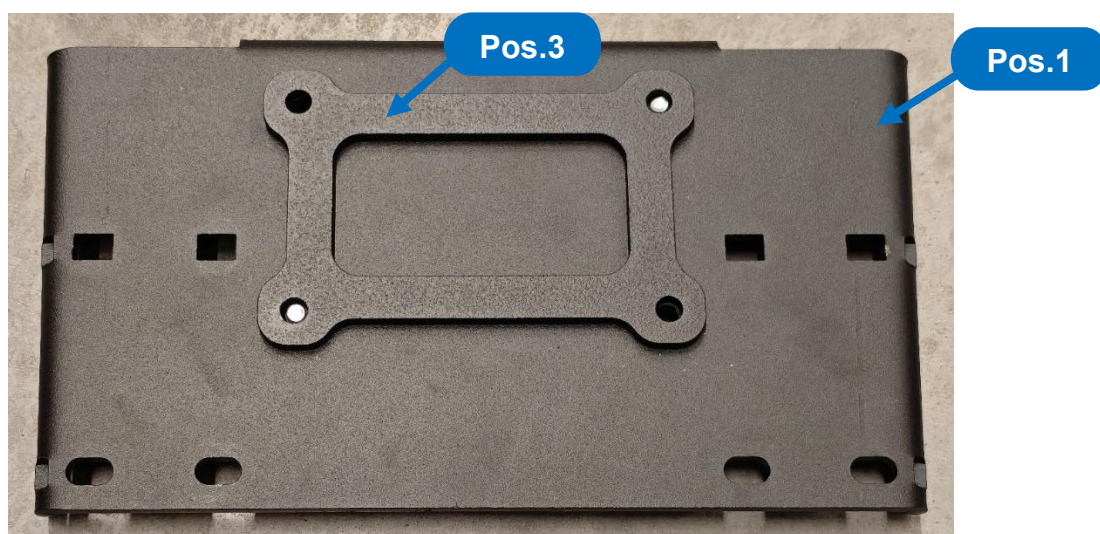

Step 6

Install adapter with winch to the ATV frame. For fastening use M8x28 U-bolts (Pos.6), Ø8/20 washers (Pos.9) and M8 nyloc nuts (Pos.10).

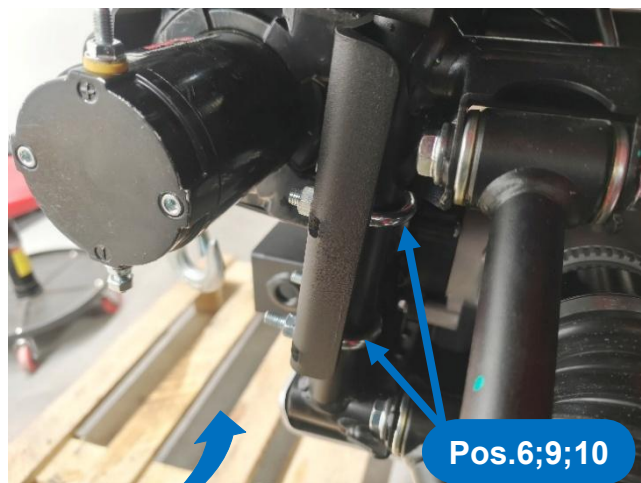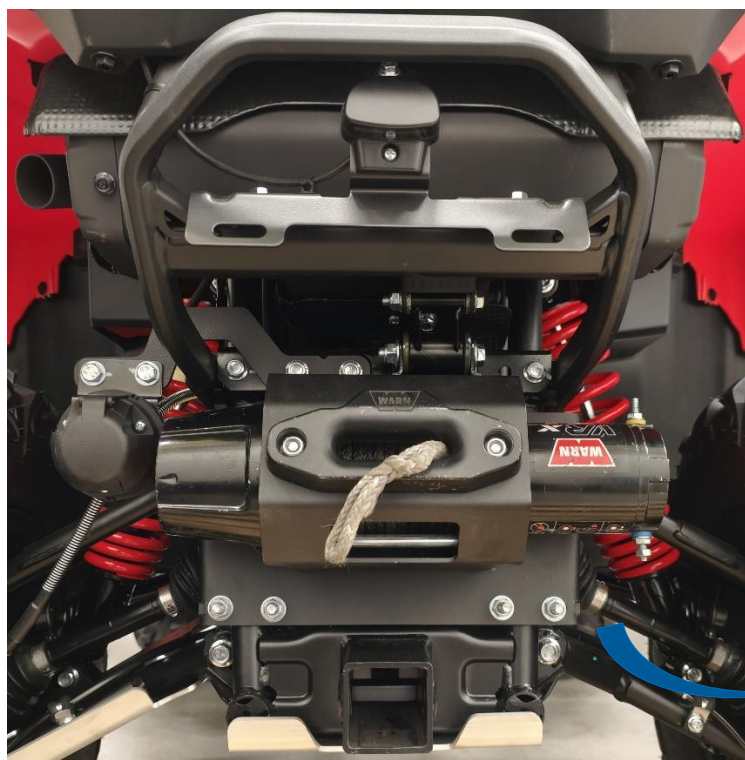

Step 7

Secure cables to the ATV frame, using ziptie (Pos.5).



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

