




DOWNLOAD MULTILINGUAL
USER MANUAL

Front-mount adapter

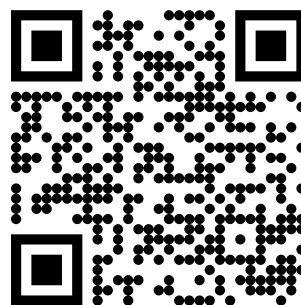

03.18900 rev. 1

<https://ironbaltic.com/f/03.18900/1>

FRONT MOUNT ADAPTER

CFMOTO Z10 TURBO (2026+)

Code 03.18900

Version Rev01 (07092026)



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.18901K	1
2	Upper distance plate	03.18907	1
3	Lower distance plate	03.18908	1
4	Installation plate	03.5204	2
5	Bushing 28 mm	03.10605	2
6	U-bolt M8x38mm	14.009	2
7	Bolt M8x40 DIN933	OT.02.02.220	2
8	Bolt M10x55 DIN933	OT.02.02.342	2
9	Washer Ø8/20 SFS 3738	OT.04.03.030	6
10	Washer Ø10/20 DIN125	OT.04.01.040	4
11	Nut M8 Nyloc DIN985	OT.03.02.040	4
12	Nut M10 Nyloc DIN985	OT.03.02.050	2

Thread size	Strength class		
	4.8	8.8 (default)	10.9
	Tightening torque (Nm)		
M6	5,5	10	15
M8	13	25	35
M10	25	50	75
M12	45	85	130
M16	115	215	315



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 13 mm
- Socket wrench 17 mm
- Spanner 17 mm
- Drill bit 9 mm



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**




NB!

**Designing the skid plate, original/factory tires were taken into consideration!
Front: 30x10.00-14 and rear: 30x10.00-14.**



NB!

All pictures in this manual are for illustration purposes only and may differ from real product due to the changes made to the product during improvements!

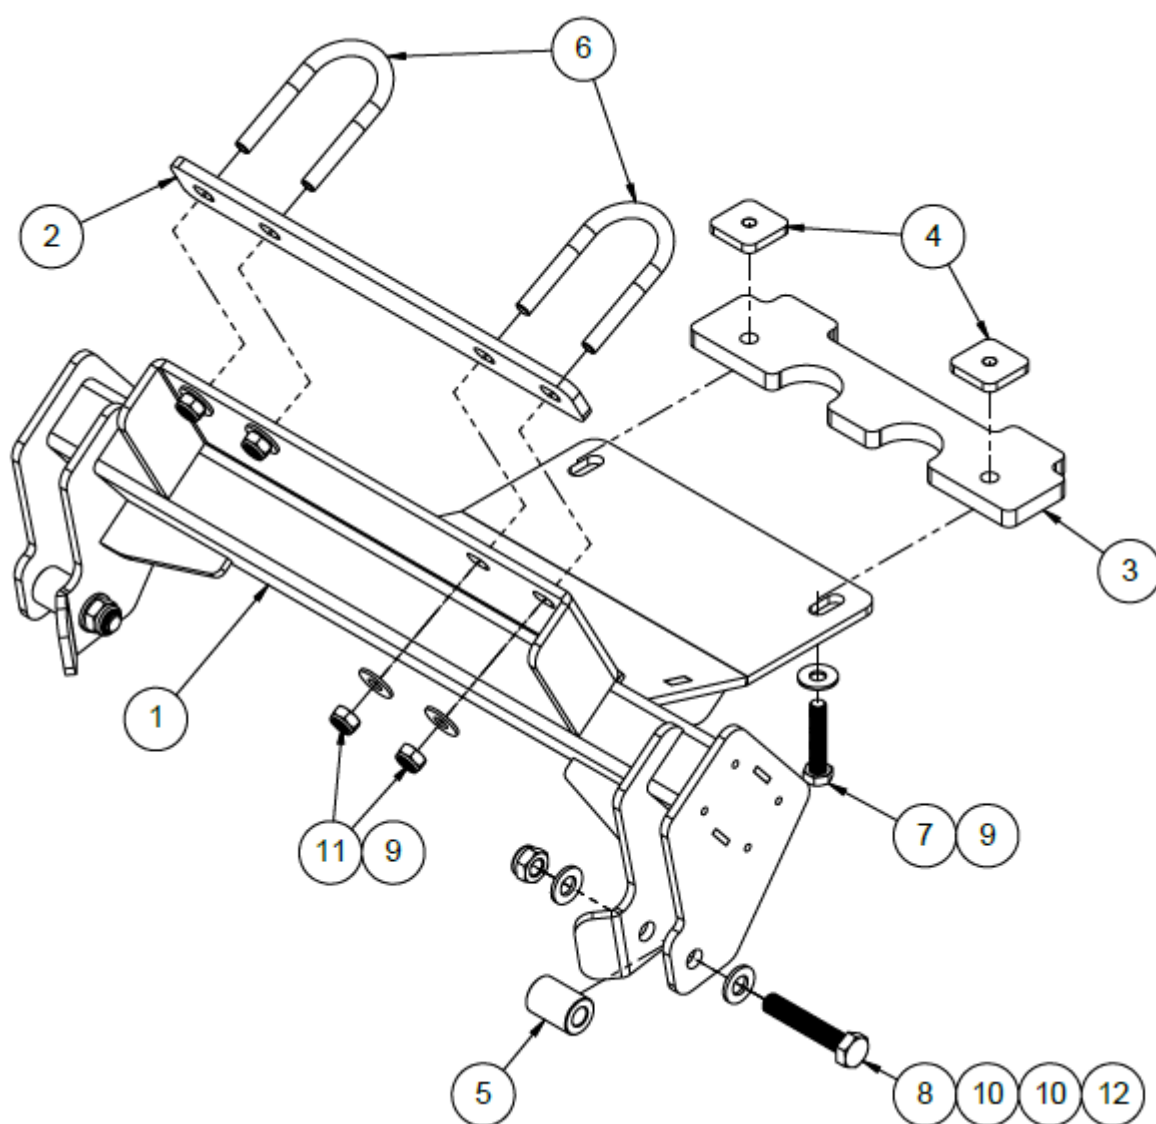



Numbers on drawing correspond to Pos numbers on specification table.

FITTING INSTRUCTIONS

ORIGINAL SKID PLATE



Step 1

Drill mounting holes in the original front panel.
Use a Ø9 mm drill bit to drill the holes.

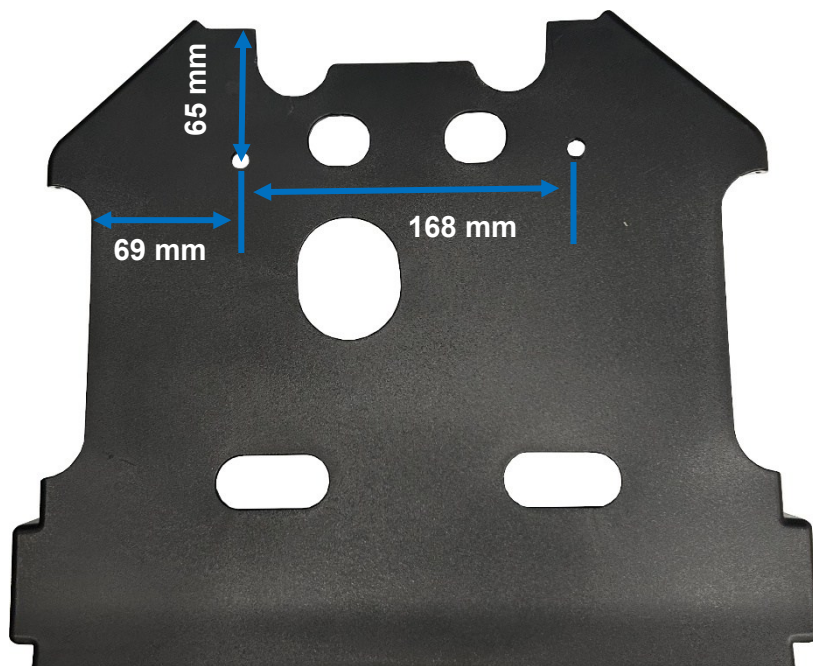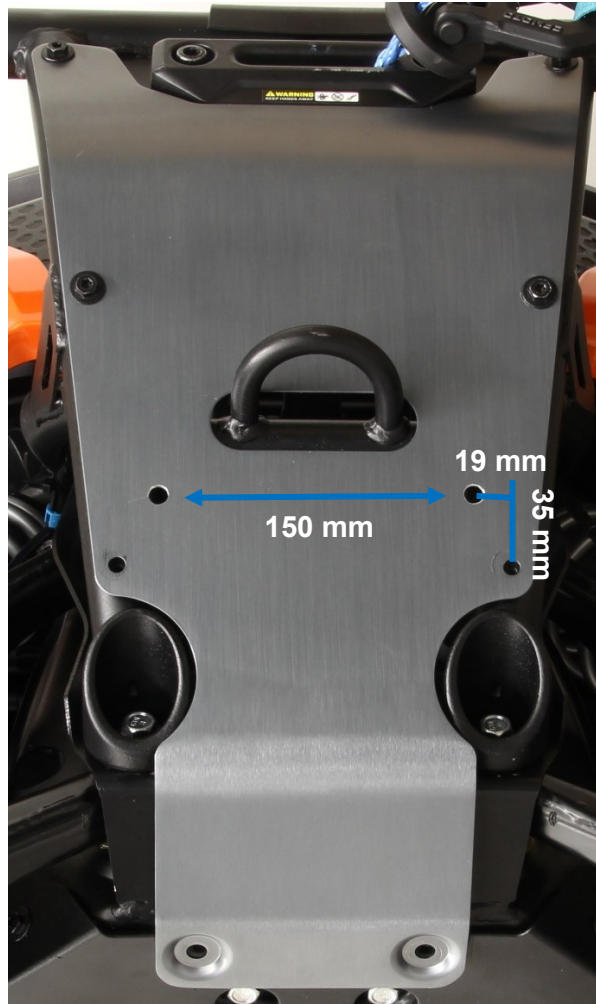


Step 2

Remove original bolts as shown in the picture.

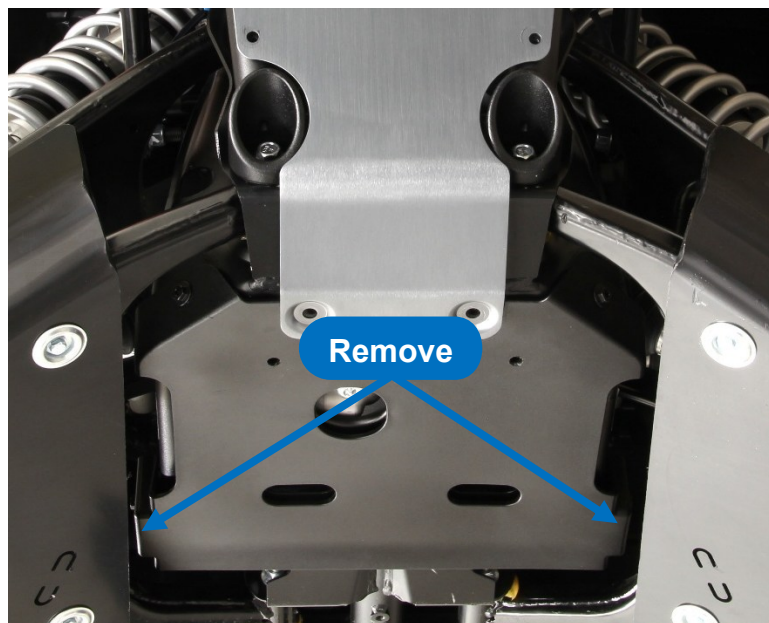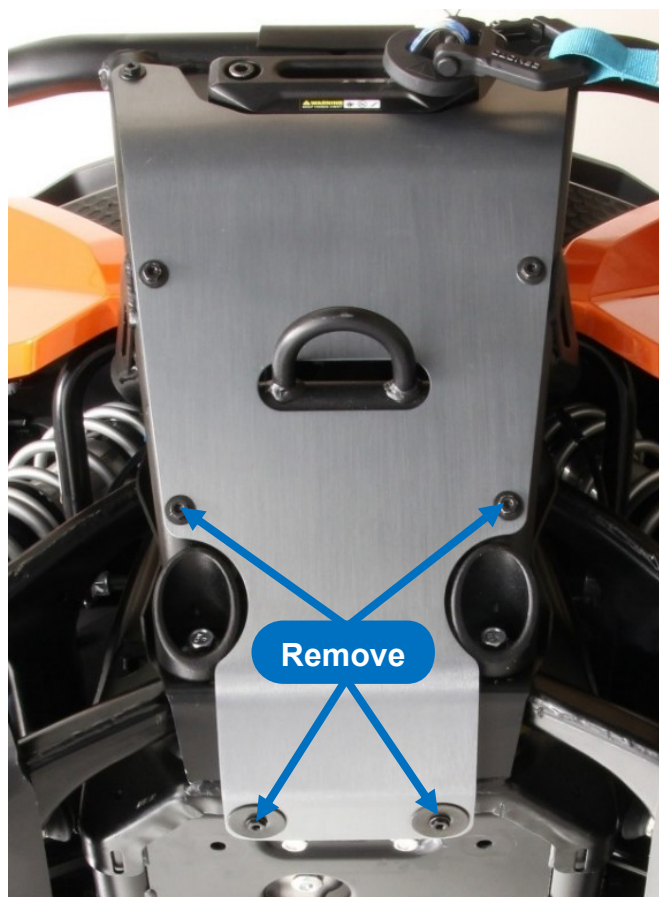



Step 3

Install bushings (Pos.5) to the adapter (Pos.1). For fastening use M10x55 bolts (Pos.8), Ø10/20 washer (Pos.10) and M10 nyloc nuts (Pos.12).

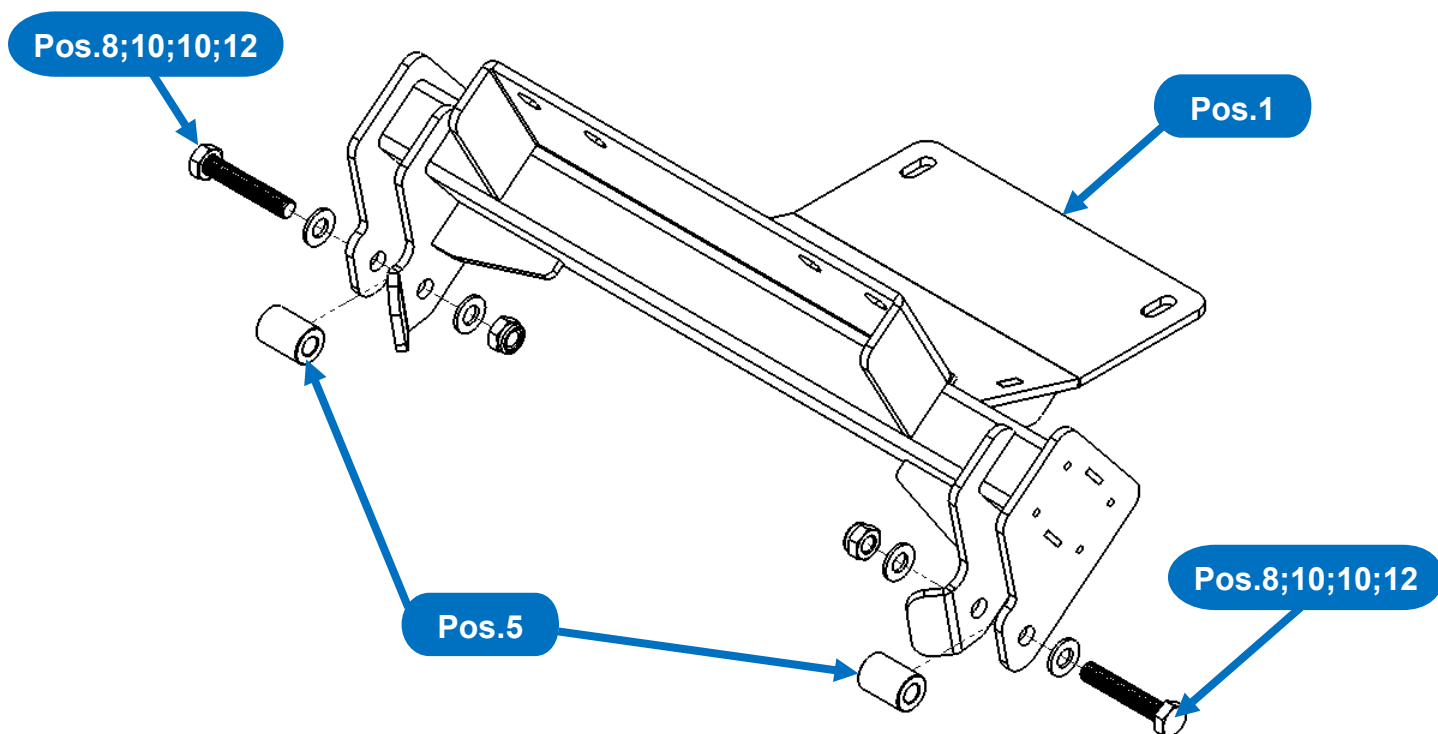

Step 4

Install assembled adapter to the UTV frame. For fastening use M8x38 u-bolts (Pos.6), M8x40 bolts (Pos.7), Ø8/20 washers (Pos.9), M8 nyloc nuts (Pos.11), installation plates (Pos.4), upper (Pos.2) and lower distance plate (Pos.3). Refit the plastic using original bolts. **NB! The lower distance plate must be fitted between the original plastic and the frame.**

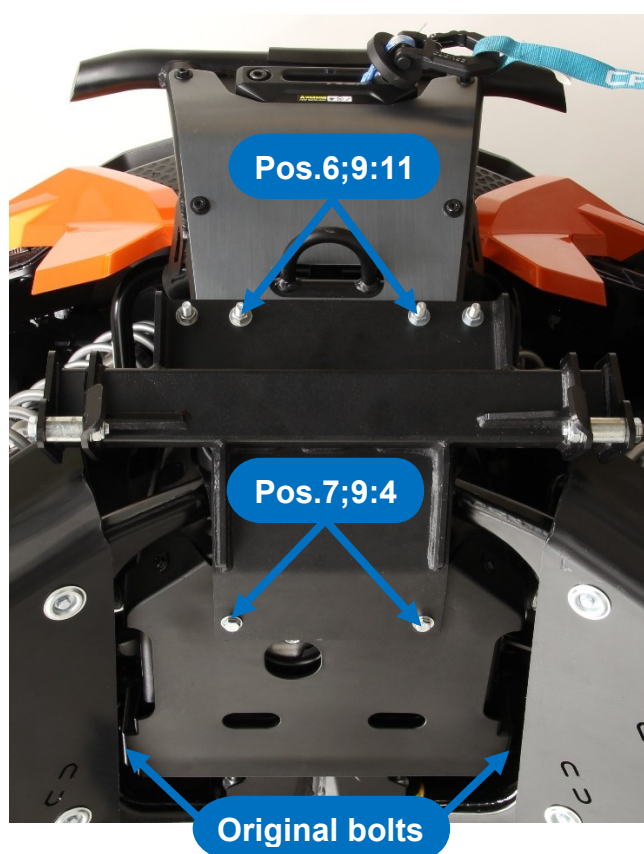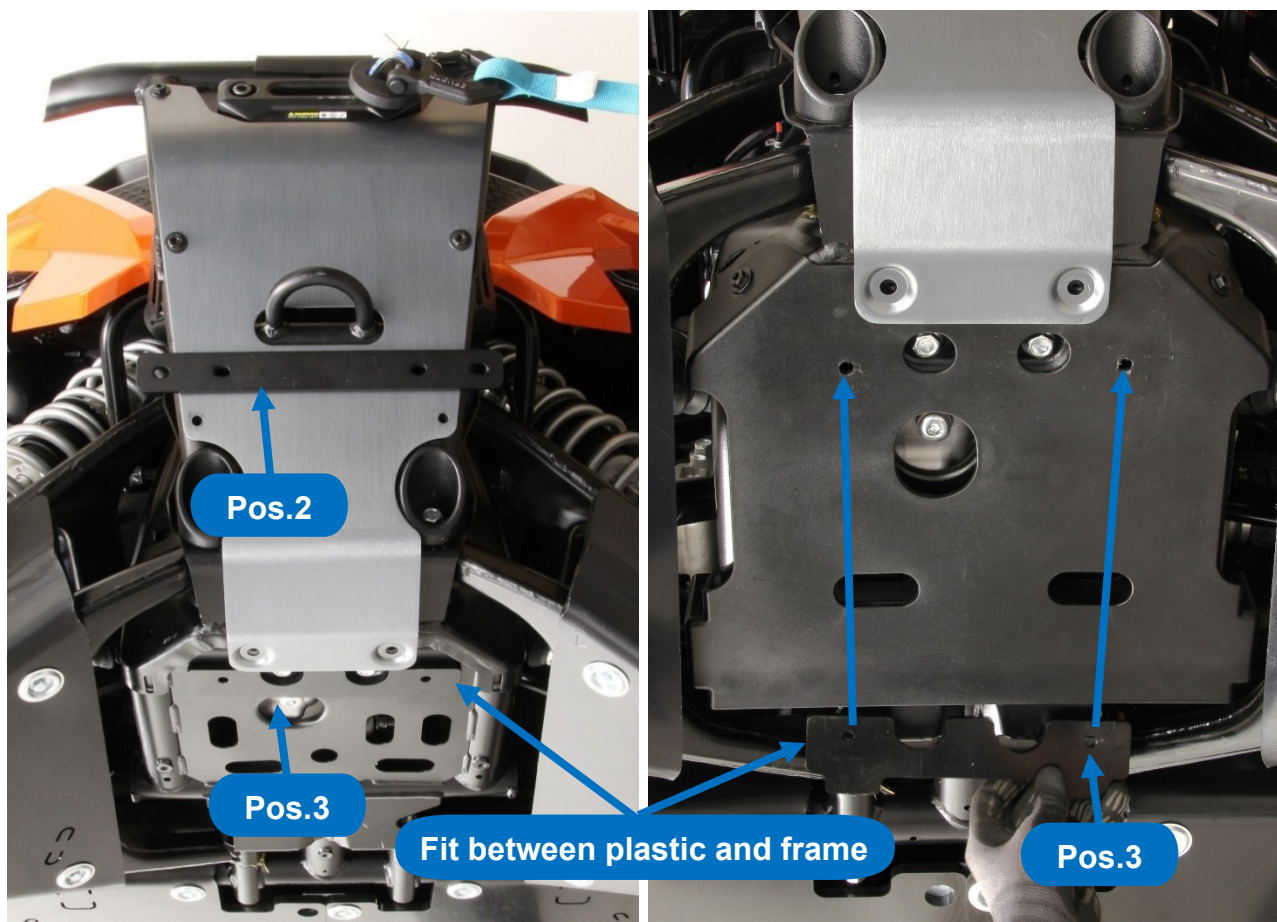


FITTING INSTRUCTIONS

IRON BALTIC SKID PLATE


Step 1

Remove reinforcement plate and bolts as shown in the picture

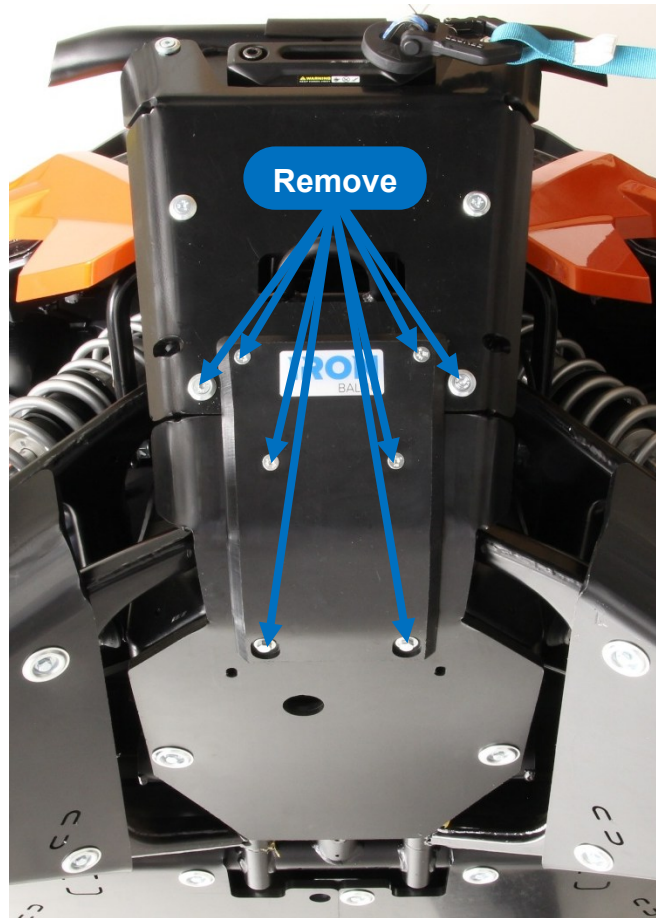



Sam 2

Install bushings (Pos.5) to te adapter (Pos.1). For fastening use M10x55 bolts (Pos.8), Ø10/20 washer (Pos.10) and M10 nyloc nuts (Pos.12).

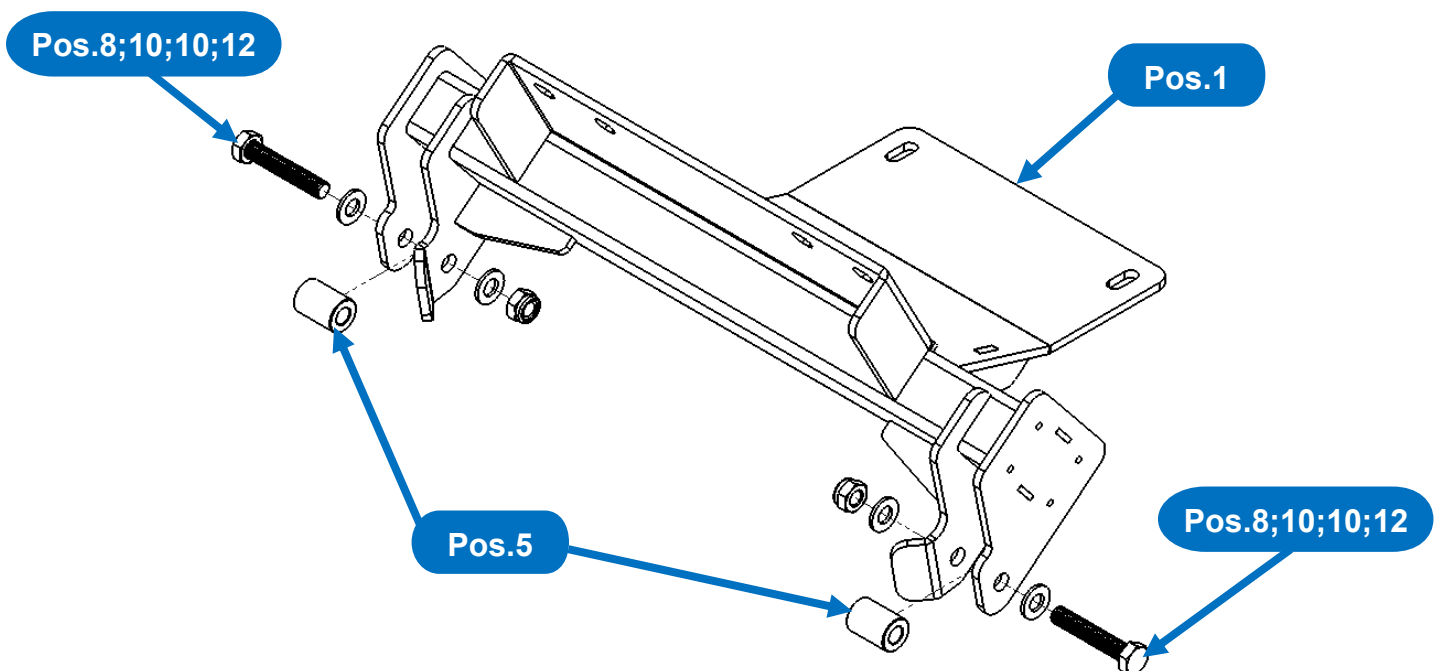

Step 3

Install assembled adapter to the UTV frame. For fastening use M8x38 u-bolts (Pos.6), M8x40 bolts (Pos.7), Ø8/20 washers (Pos.9), M8 nyloc nuts (Pos.11), installation plates (Pos.4).

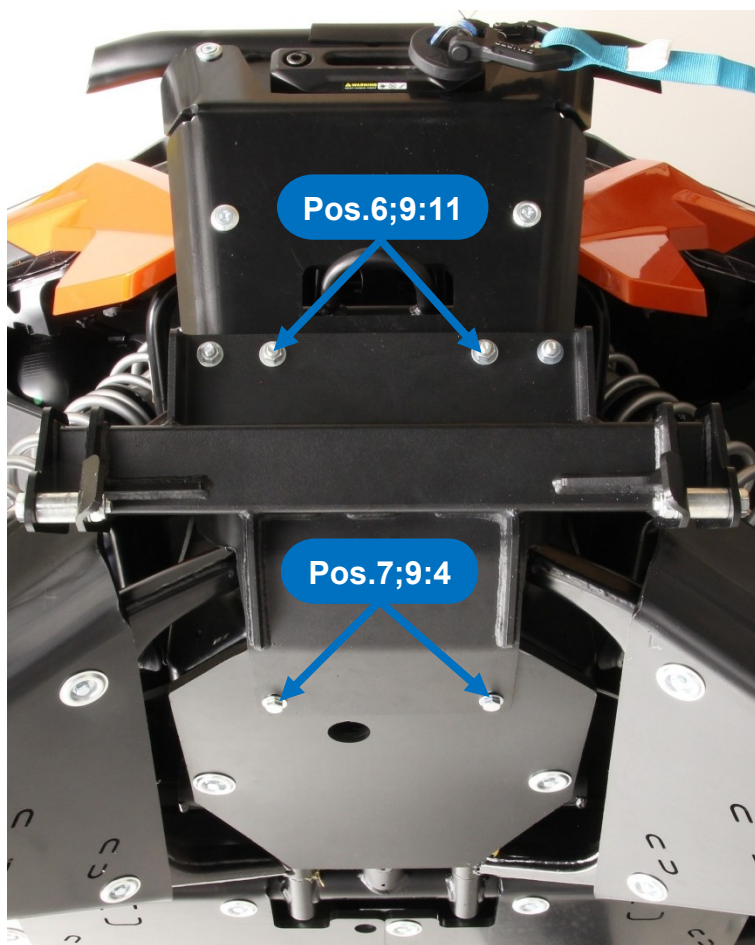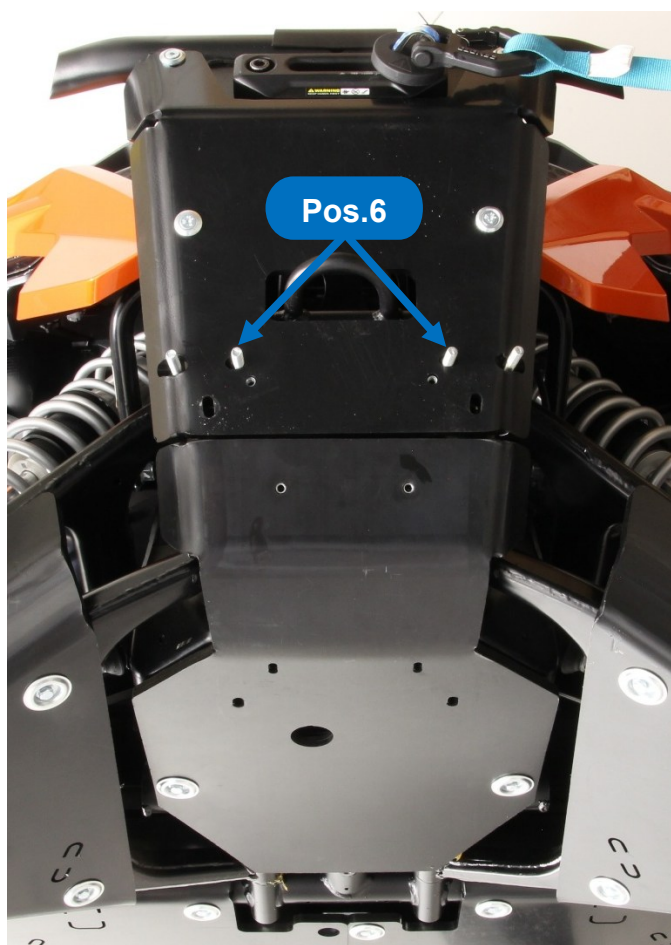

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld

