




DOWNLOAD MULTILINGUAL
USER MANUAL

Mid-mount adapter

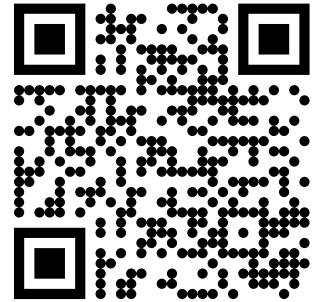

03.18800 rev. 1


<https://ironbaltic.com/f/03.18800/1>

MID-MOUNT ADAPTER

CFMOTO Z10 TURBO (2026+)

Code 03.18800

Version Rev01 (14102026)

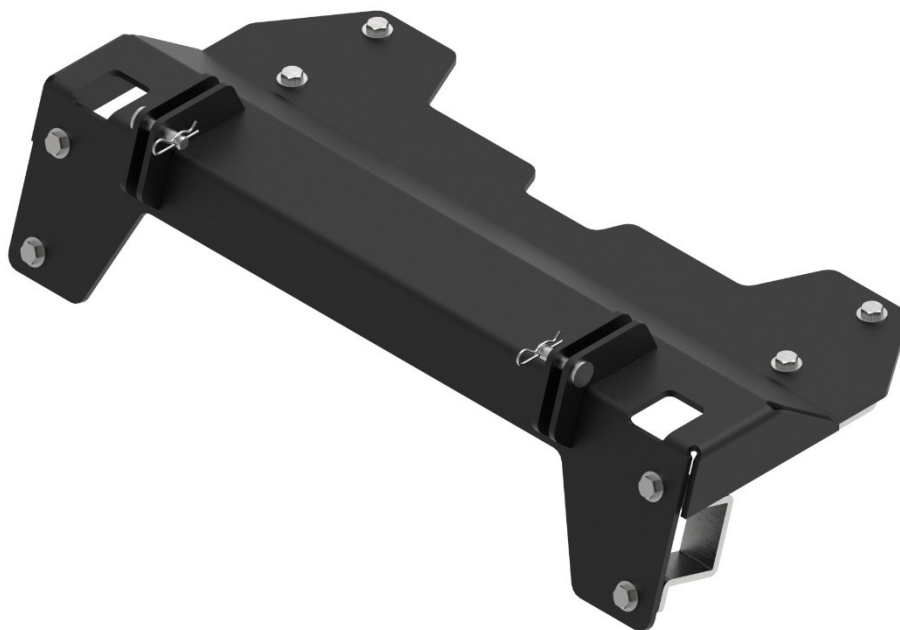

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.18801K	1
2	Mounting bracket 48mm	03.18802	4
3	Bushing Ø8/20 H10	05.7102	2
4	Pin 10x40	14.003	2
5	Cotter pin 2 mm DIN 11024	OT.07.01.010	2
6	Bolt M8x30 DIN 933	OT.02.02.200	8
7	Washer Ø8/20 SFS 3738	OT.04.03.030	8

Thread size	Strength class		
	4.8	8.8 (default)	10.9
	Tightening torque (Nm)		
M6	5,5	10	15
M8	13	25	35
M10	25	50	75
M12	45	85	130
M16	115	215	315



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10 mm
- Socket wrench 13 mm
- Allen key H4



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**




NB!

**Designing the skid plate, original/factory tires were taken into consideration!
Front: 30x10.00-14 and rear: 30x10.00-14.**



NB!

All pictures in this manual are for illustration purposes only and may differ from real product due to the changes made to the product during improvements!

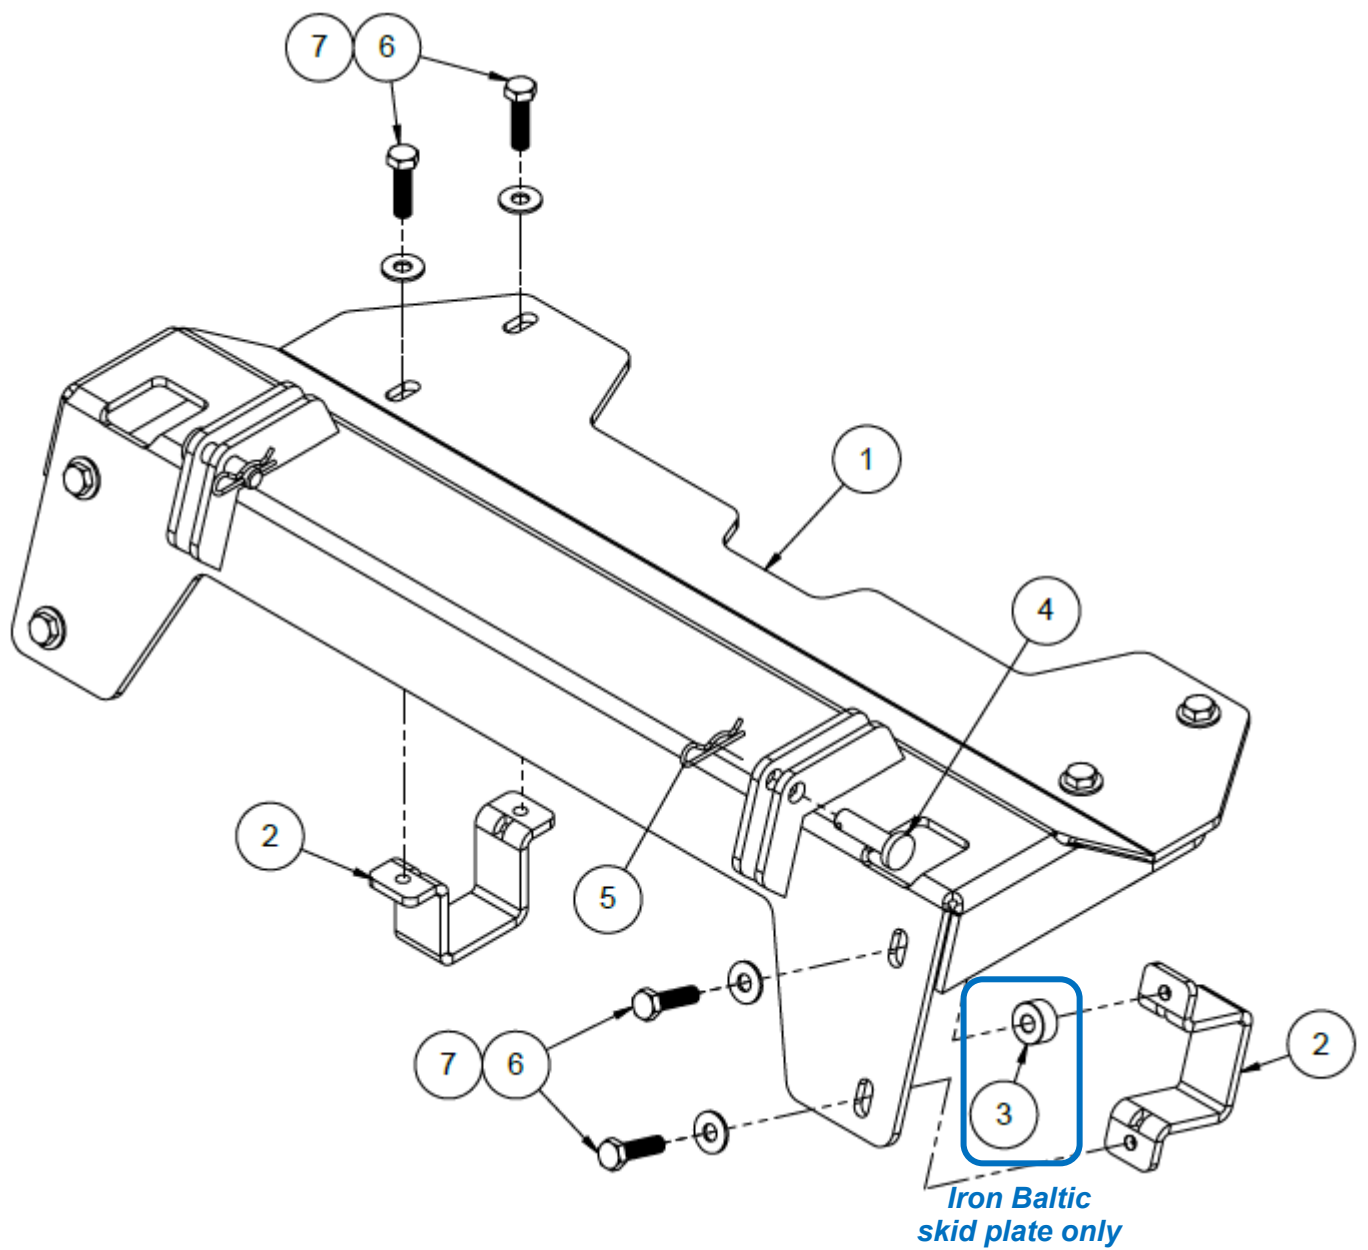



Numbers on drawing correspond to Pos numbers on specification table.

FITTING INSTRUCTIONS

WITHOUT SKID PLATE


Step 1

Install adapter (Pos.1) to the UTV frame. For fastening use M8x30 bolts (Pos.6), Ø8/20 washers (Pos.7) and mounting brackets (Pos.2).

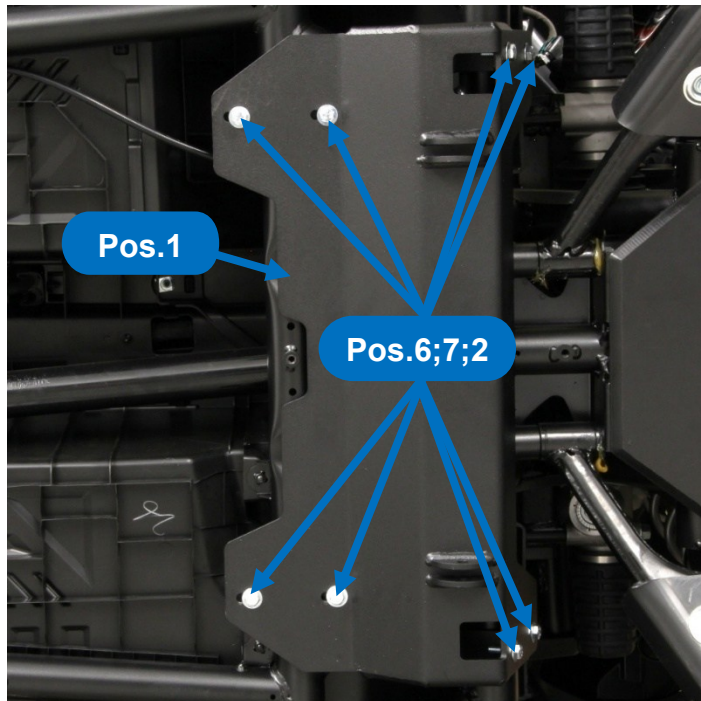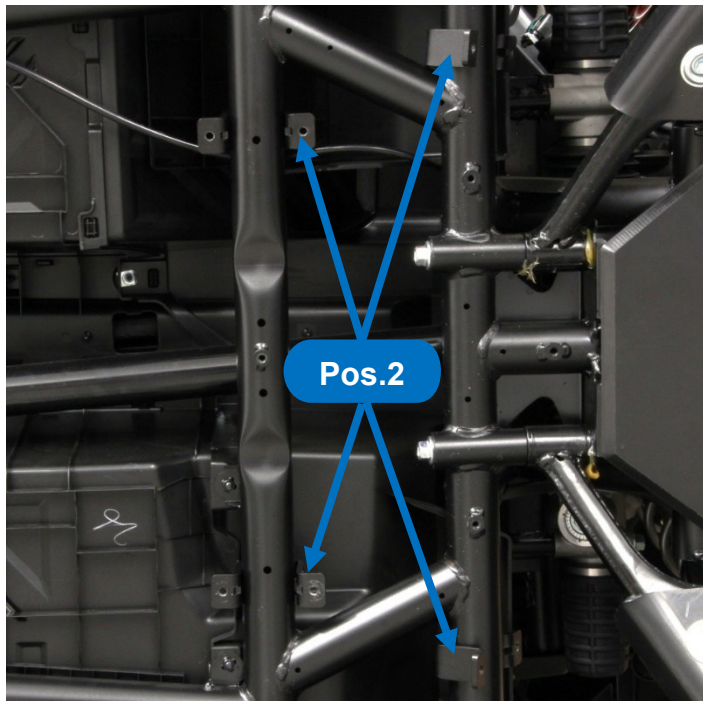

Step 2

Install pins (Pos.4) to the adapter. Use cotter pins (Pos.5) to fix the pins.

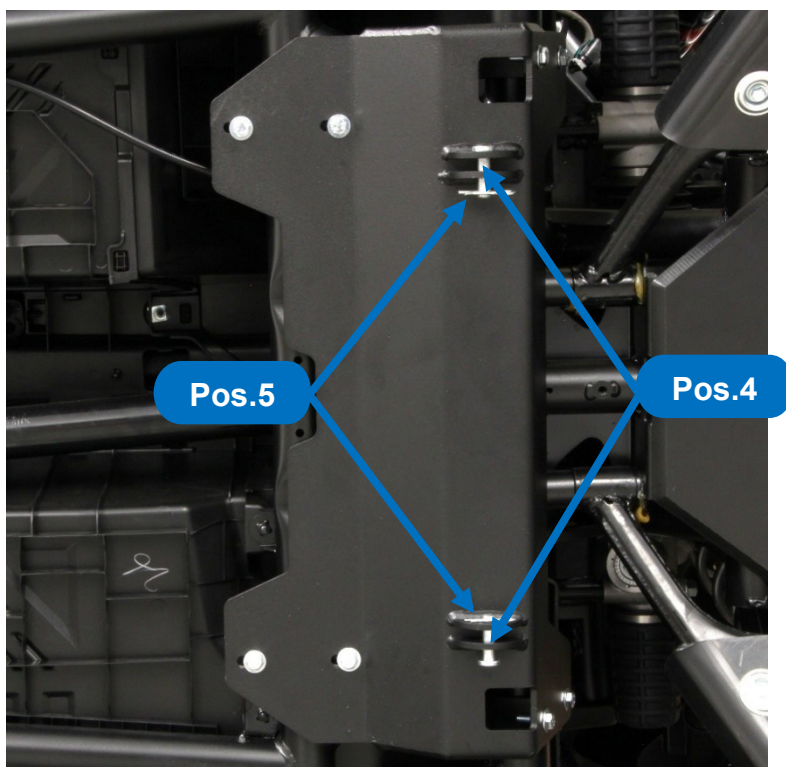


FITTING INSTRUCTIONS

IRON BALTIC SKID PLATE


Step 1


Cut out the holes marked on Iron Baltic skid plate middle parts.

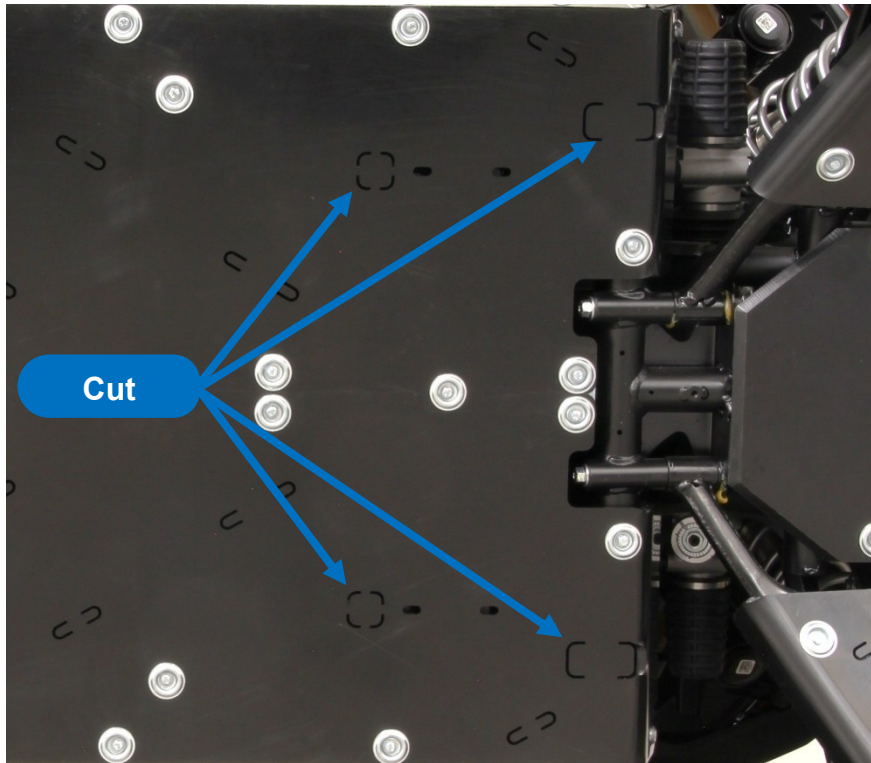

Step 2



Install mounting brackets (Pos.2). To do this, remove right middle part of the skid plate. **NB! Once the brackets have been fitted, reinstall the skid plate part.**

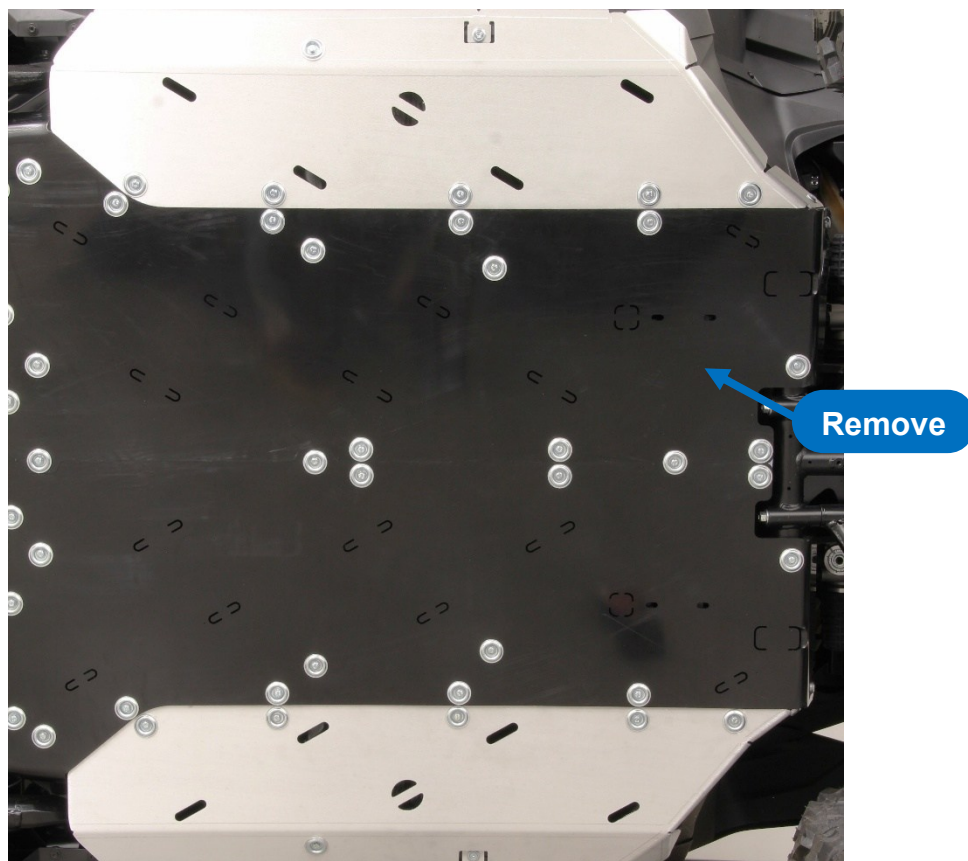

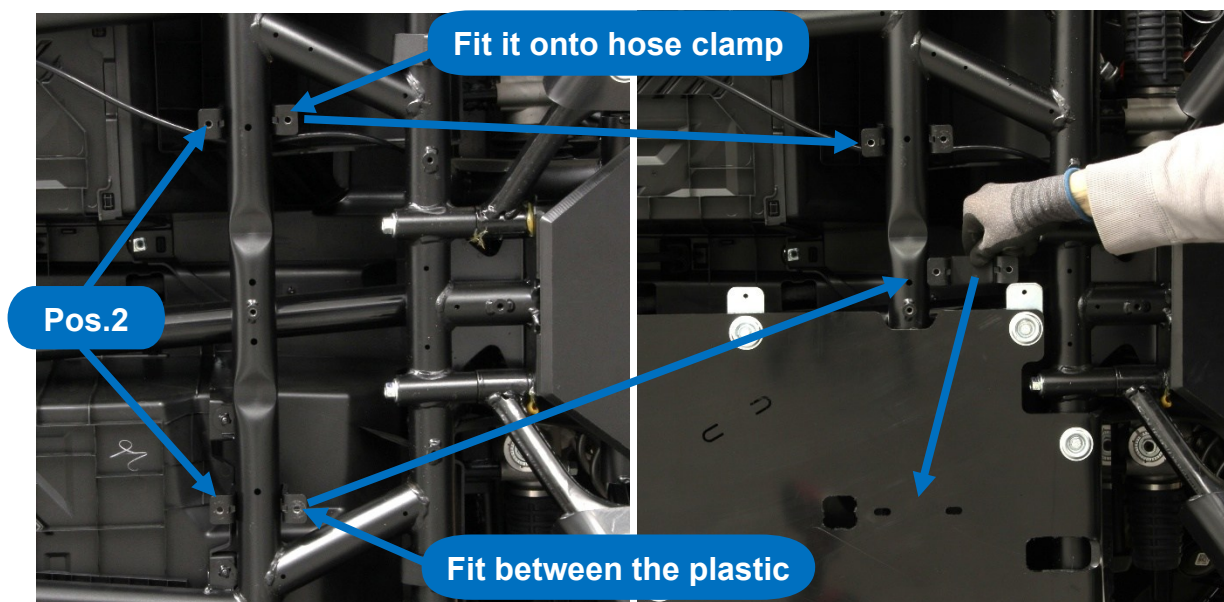


Step 3

Install adapter (Pos.1) to the UTV frame. For fastening use M8x30 bolts (Pos.6), Ø8/20 washers (Pos.7), bushings (Pos.3) and mounting brackets (Pos.2).
NB! The bushings are fitted between the adapter and the bracket.

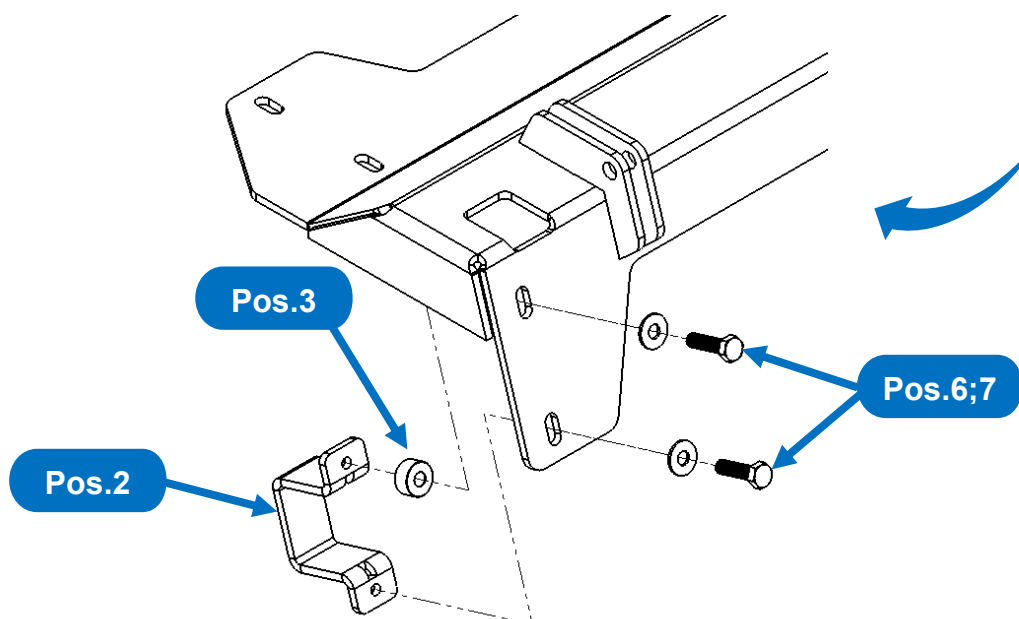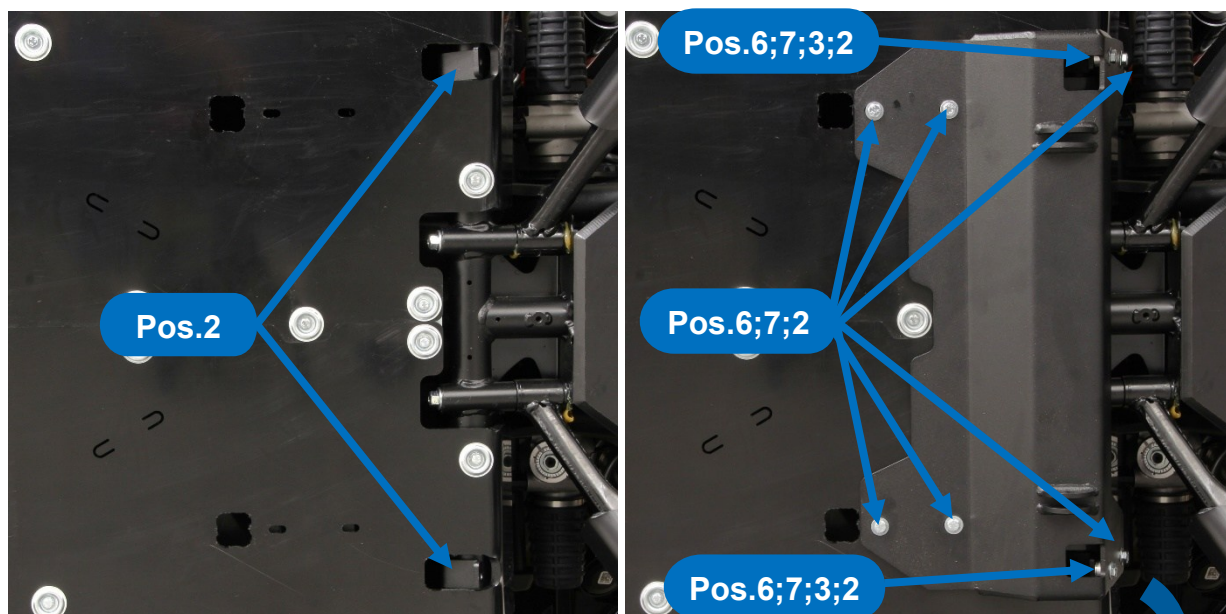

Step 4

Install pins (Pos.4) to the adapter. Use cotter pins (Pos.5) to fix the pins.

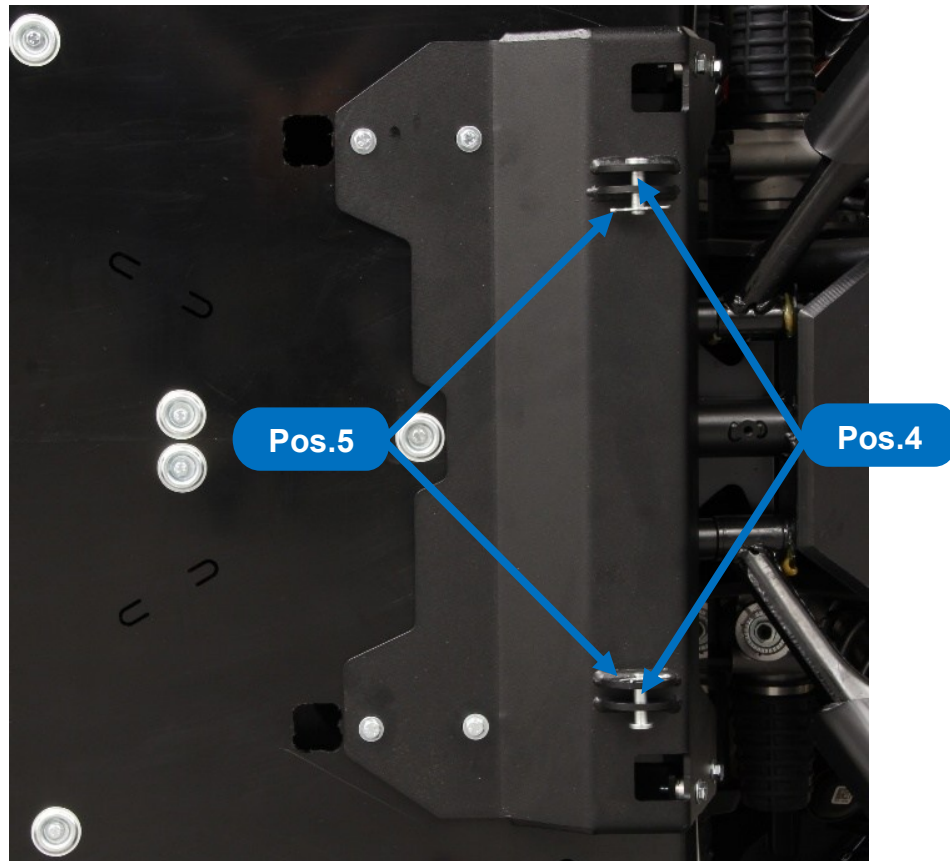

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld

