


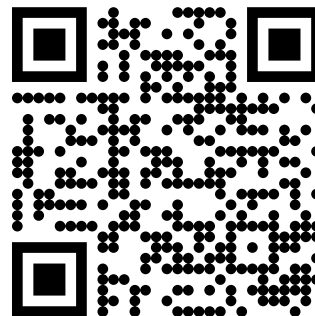

REAR WINCH ADAPTER

CFMOTO Z10 TURBO (2026+)

Code 05.13400

Version Rev01 (02102026)



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear winch adapter	05.13401K	1
2	Trailer socket plate	05.9806	1
3	Cable tie 4.7x366	PM.11.00.009	1
4	Bolt M8x20 DIN 933	OT.02.02.180	2
5	Washer Ø5/10 DIN125	OT.04.01.010	2
6	Washer Ø8/20 SFS 3738	OT.04.03.030	2
7	Nut M5 Nyloc DIN985	OT.03.02.020	2

Thread size	Strength class		
	4.8	8.8 (default)	10.9
	Tightening torque (Nm)		
M6	5,5	10	15
M8	13	25	35
M10	25	50	75
M12	45	85	130
M16	115	215	315



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 13 mm
- Socket wrench 15 mm
- Spanner 8 mm
- Spanner 15 mm
- Screwdriver PH1x75 mm
- Torx 30



NB!

We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.




NB!

Designing the skid plate, original/factory tires were taken into consideration!
Front: 30x10.00-14 and rear: 30x10.00-14.



NB!

All pictures in this manual are for illustration purposes only and may differ from real product due to the changes made to the product during improvements!

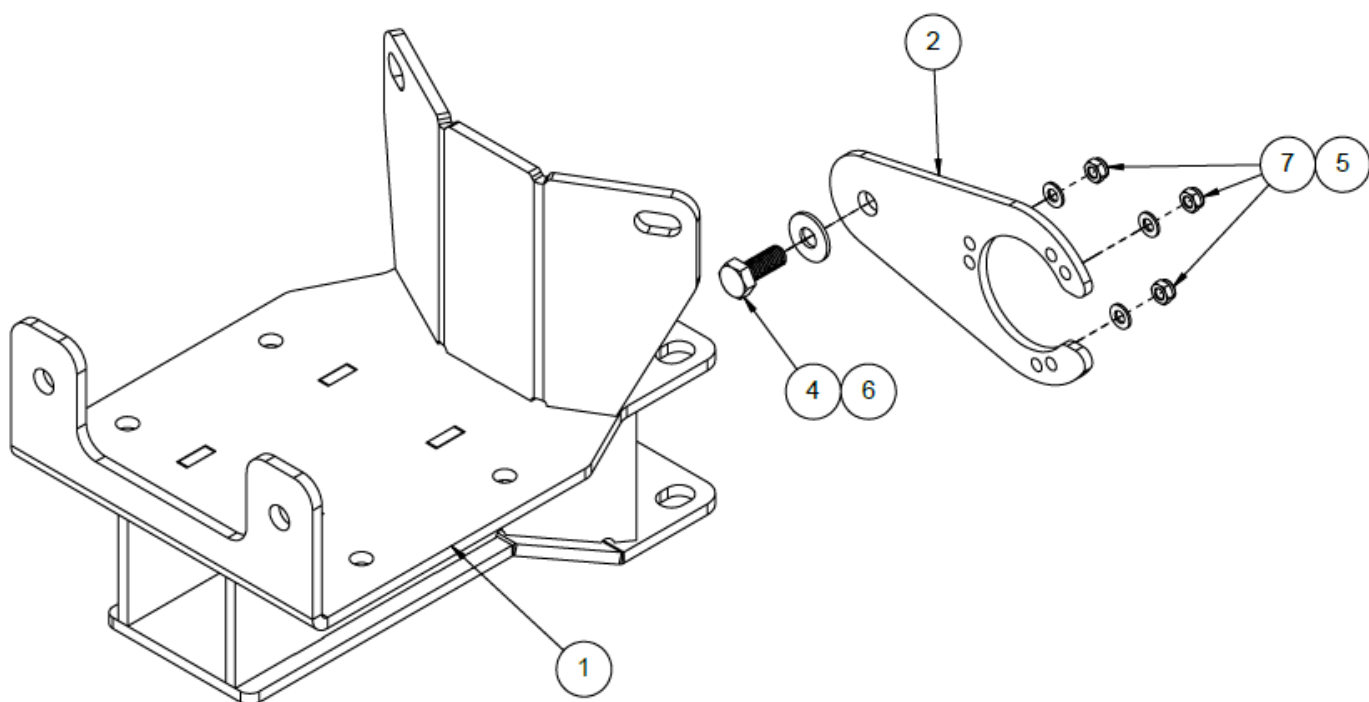


Numbers on drawing correspond to Pos numbers on specification table.


FITTING INSTRUCTIONS

Step 1 Remove receiver hitch.



Step 2 Disconnect and remove the trailer socket.

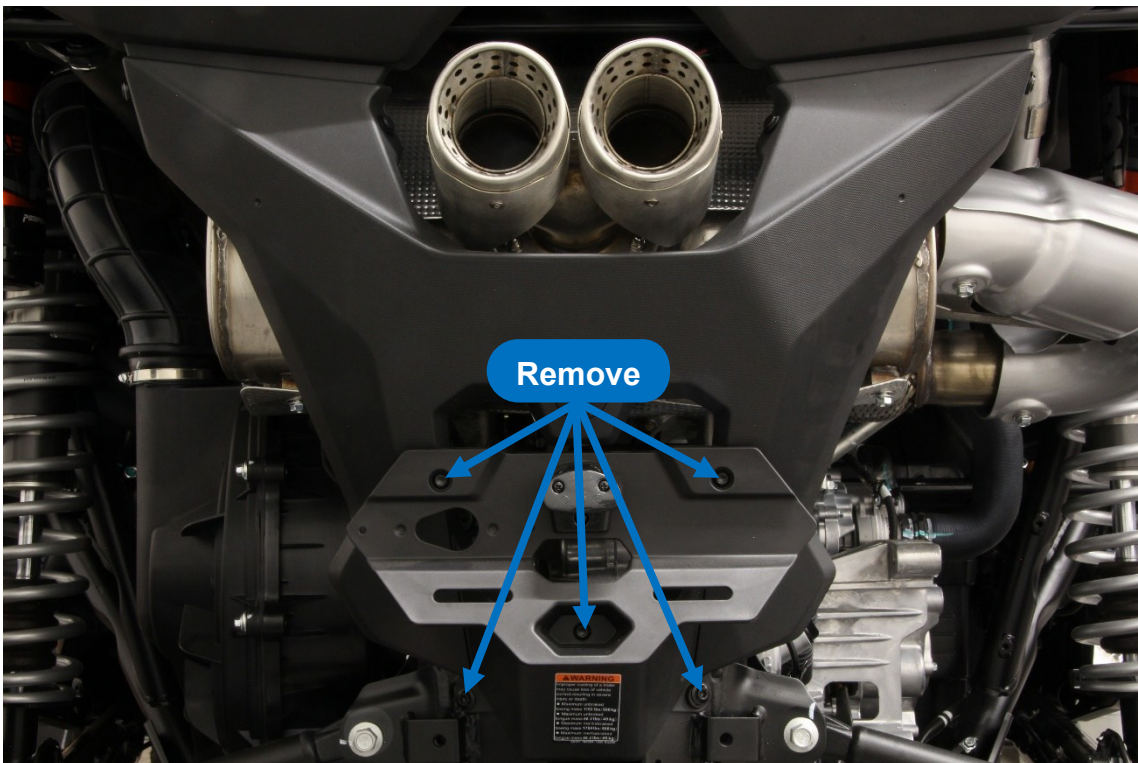

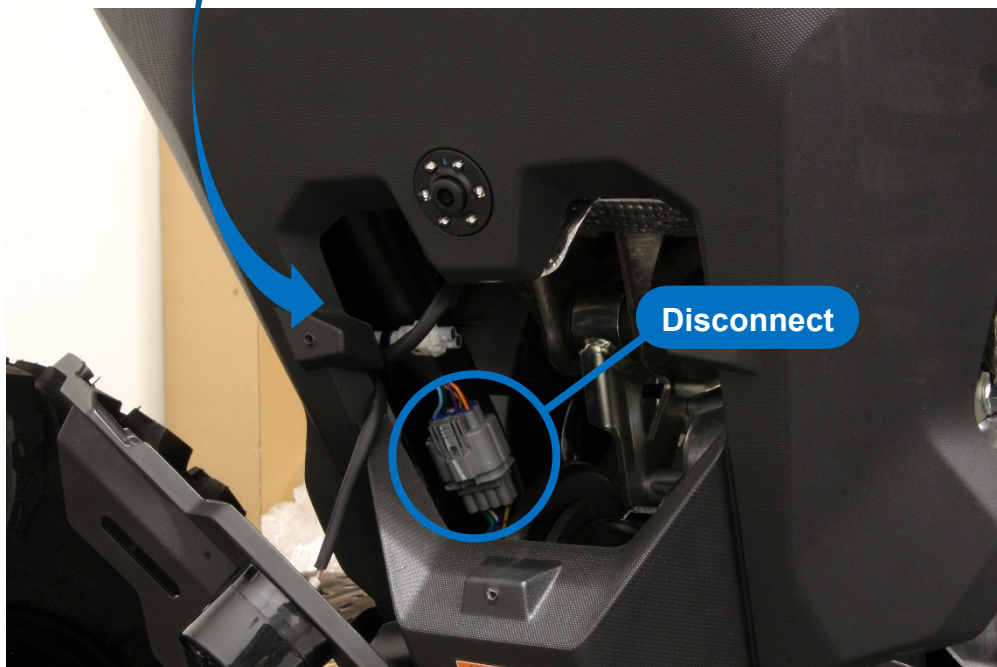


Step 3

Remove original fasteners and receiver hitch adapter.



Step 4

Install rear winch adapter (Pos.1). For fastening use original fasteners.

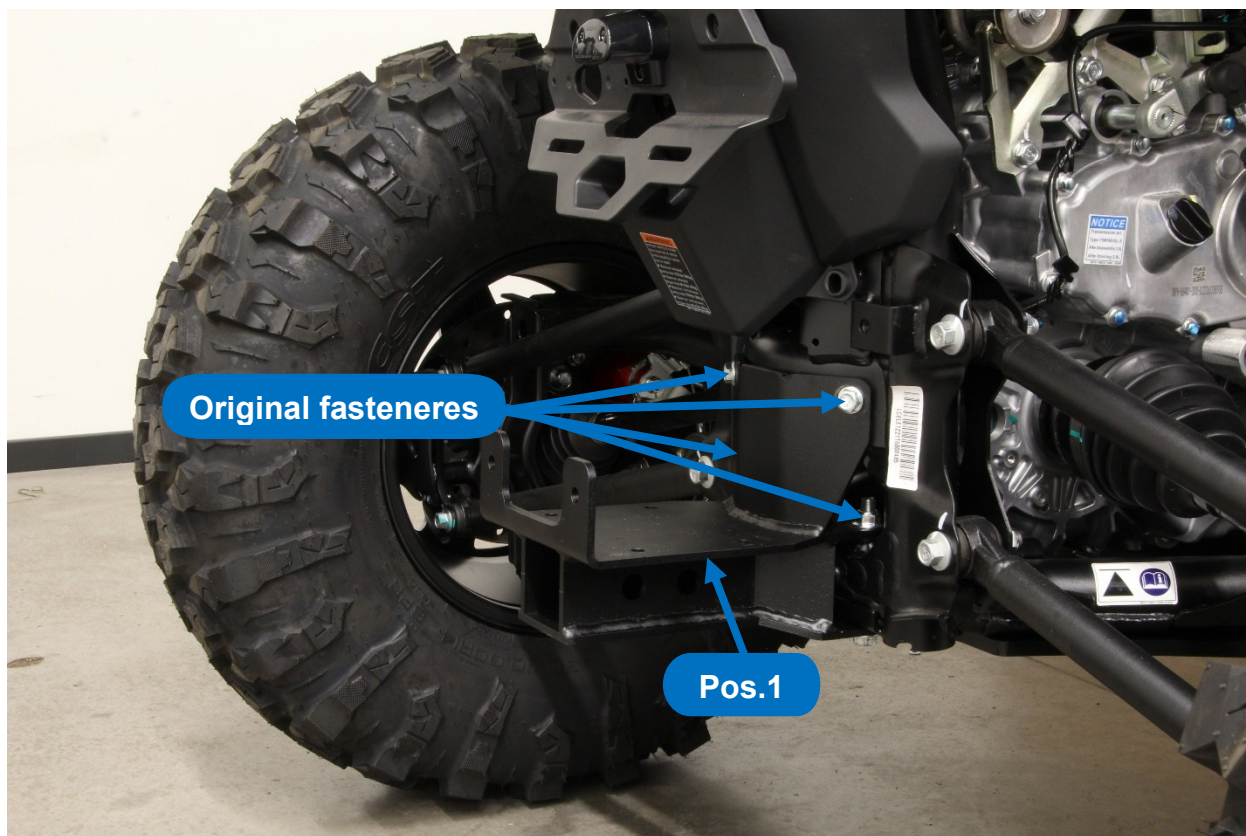


Step 5

Install fairlead and winch to the adapter. For fastening use the fasteners supplied with the winch kit



Step 6

Install trailer socket to the mounting plate (Pos.2). For fastening use original bolts, Ø5/10 washers (Pos.5) and M5 nyloc nuts (Pos.7).

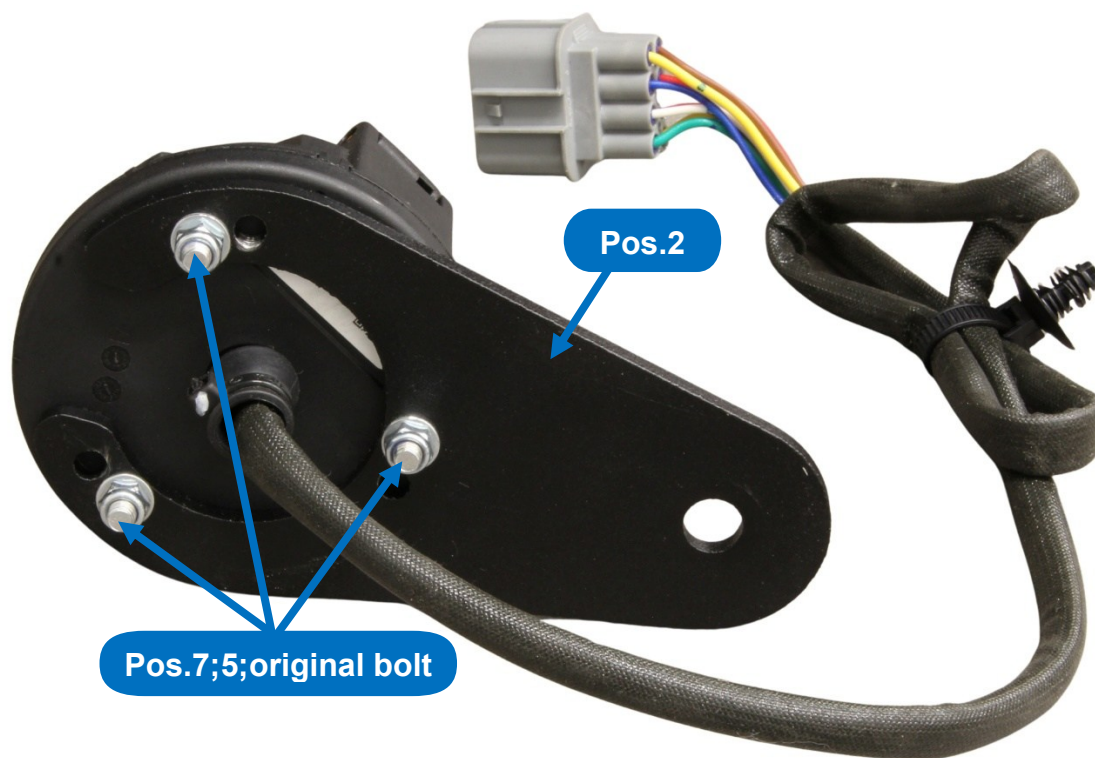


Step 7

Install assembled trailer socket plate to the UTV frame.

For fastening use M8x20 bolt (Pos.4) and Ø8/20 washer (Pos.6).


Use a cable tie (Pos.3) to secure cable to the frame.

NB! Trailer socket plate can be fitted on either the right or the left side.

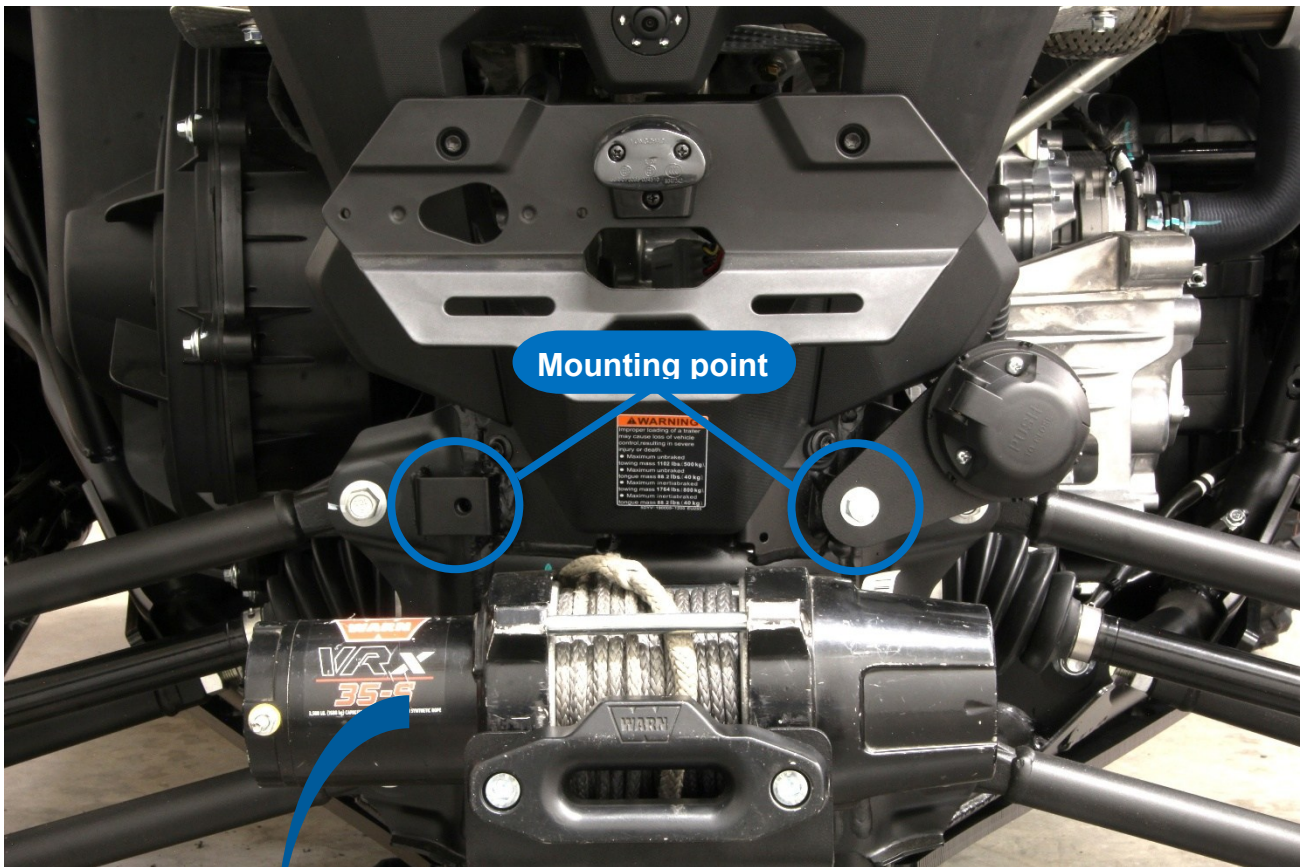

Step 8

Reconnect trailer socket and reinstall the original plastic cover.
For fastening use the original fasteners.

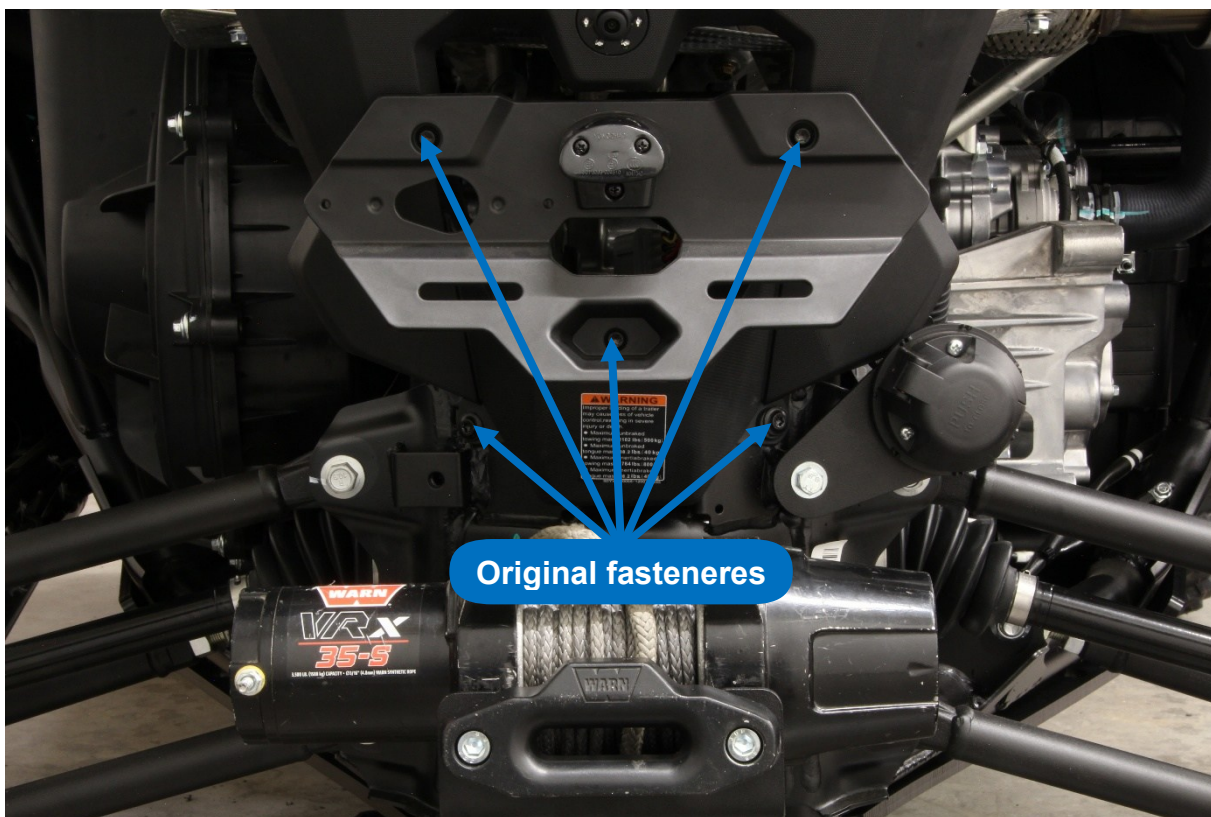

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld

